


JVC

SERVICE MANUAL

DVD DIGITAL THEATER SYSTEM

TH-C60J, TH-C60C, TH-C50J, TH-C50C, TH-C40J, TH-C40C

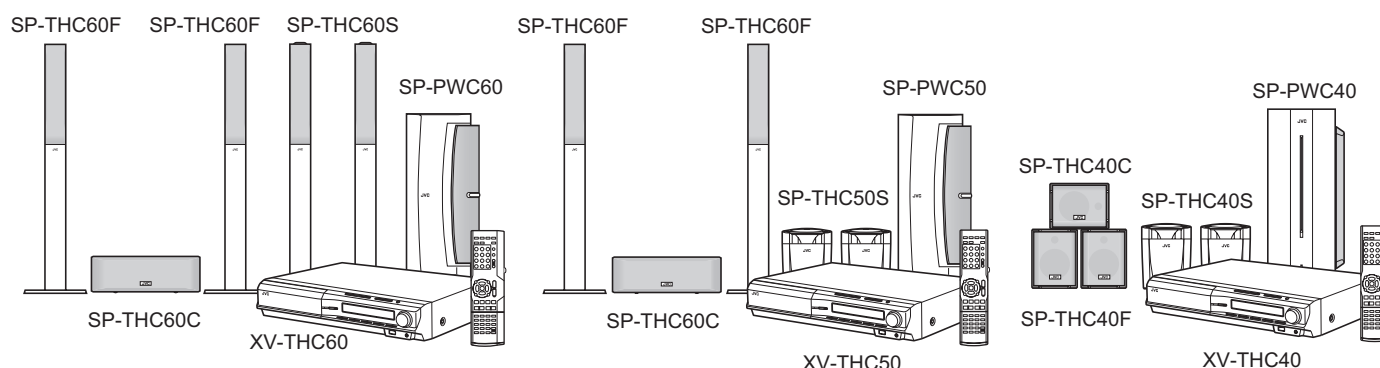

AV COMPU LINK

Digital Direct Progressive Scan

Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)

TABLE OF CONTENTS

1	PRECAUTION.....	1-5
2	SPECIFIC SERVICE INSTRUCTIONS.....	1-9
3	DISASSEMBLY.....	1-10
4	ADJUSTMENT.....	1-34
5	TROUBLESHOOTING.....	1-37

SPECIFICATION

Center unit (XV-THC60/XV-THC50/XV-THC40)

Audio section	Digital input*1	DIGITAL IN (DBS) (OPTICAL)	-21 dBm to -15 dBm (660 nm ±30 nm)
Video section	Video System		NTSC
	Horizontal Resolution		500 lines
	Signal-to-Noise Ratio		64 dB
	Video output level	Composite	1.0 V(p-p)/75 Ω
		S-video-Y	1.0 V(p-p)/75 Ω
		S-video-C	0.286 V(p-p)/75 Ω
		Component-Y	1.0 V(p-p)/75 Ω
		Component-PB/PR	0.7 V(p-p)/75 Ω
	Video input sensitivity/ Impedance (VCR IN)	Composite	1.0 V(p-p)/75 Ω
		S-video-Y	1.0 V(p-p)/75 Ω
		S-video-C	0.286 V(p-p)/75 Ω
HDMI	HDMI Output (Ver. 1.0)		MONITOR OUT
USB storage	USB specification		Compatible with the USB 2.0 Full-Speed
	Compatible device		Mass Storage Class
	Compatible file system		FAT16, FAT32
	Bus power supply		Max. 500 mA
Tuner section	Tuning Range	FM	87.5 MHz to 108.0 MHz
		AM	530 kHz to 1 710 kHz
General	Power Requirements		AC 120 V , 60 Hz
	Power Consumption		25 W (at operation) 0.6 W (in standby mode)
	Dimensions (W × H × D)		400 mm × 85 mm × 316 mm(15-3/4 inches × 3-3/8 inches × 12-1/2 inches)
	Mass		3.8 kg (8.4 lbs)

*1Corresponding to Linear PCM, Dolby Digital, and DTS Digital Surround (with sampling frequency -32 kHz, 44.1 kHz, 48 kHz)

Subwoofer (SP-PWC60/SP-PWC50)

Amplifier section	Front/Center/Surround	200 W per channel, RMS at 3 Ω at 1 kHz, with 10 % total harmonic distortion.
	Subwoofer	200 W, RMS at 3 Ω at 100 Hz, with 10 % total harmonic distortion.
Speaker section	Speaker unit	16 cm (6-5/16 inches) Bass-reflex
	Power Handling Capacity	200 W
	Impedance	3 Ω
	Frequency Range	30 Hz to 200 Hz
	Sound Pressure Level	74 dB/W·m
General	Power Requirements	AC 120 V , 60 Hz
	Power Consumption	180 W (at operation) 0 W (in standby mode)
	Dimensions (W × H × D)	171 mm × 411 mm × 458 mm(6-3/4 inches × 16-3/16 inches × 18-1/16 inches)
	Mass	12.3 kg (27.2 lbs)

Subwoofer (SP-PWC40)

Amplifier section	Front/Center/Surround	167 W per channel, RMS at 3 Ω at 1 kHz, with 10 % total harmonic distortion.
	Subwoofer	167 W, RMS at 3 Ω at 100 Hz, with 10 % total harmonic distortion.
Speaker section	Speaker unit	16 cm (6-5/16 inches) Bass-reflex
	Power Handling Capacity	170 W
	Impedance	3 Ω
	Frequency Range	30 Hz to 200 Hz
	Sound Pressure Level	73 dB/W·m
General	Power Requirements	AC 120 V , 60 Hz
	Power Consumption	160 W (at operation) 0 W (in standby mode)
	Dimensions (W × H × D)	170 mm × 411 mm × 458 mm(6-3/4 inches × 16-3/16 inches × 18-1/16 inches)
	Mass	11.5 kg (25.4 lbs)

Satellite Speakers - SP-XTHC60

Front speakers (SP-THC60F)	Type	1-way 2-speaker Bass reflex type(Magnetically shielded Type)
	Speaker	5.5 cm (2-3/16 inches) cone × 2
	Power Handling Capacity	200 W
	Impedance	3 Ω
	Frequency Range	100 Hz to 20 000 Hz
	Sound Pressure Level	78 dB/W·m
	Dimensions (W × H × D)	280 mm × 1 106 mm × 280 mm(11-1/16 inches × 43-9/16 inches × 11-1/16 inches)
	Mass	3.3 kg (7.3 lbs) each
Center speaker (SP-THC60C)	Type	1-way 2-speaker Bass reflex type (Magnetically shielded Type)
	Speaker	6.5 cm (2-9/16 inches) cone × 2
	Power Handling Capacity	200 W
	Impedance	3 Ω
	Frequency Range	90 Hz to 20 000 Hz
	Sound Pressure Level	81 dB/W·m
	Dimensions (W × H × D)	250 mm × 85 mm × 91 mm(9-7/8 inches × 3-3/8 inches × 3-5/8 inches)
	Mass	0.8 kg (1.8 lbs)
Surround speakers (SP-THC60S)	Type	2-way 3-speaker Bass reflex type
	Speaker	5.5 cm (2-3/16 inches) cone × 2 3.0 cm (1-3/16 inches) dome × 1
	Power Handling Capacity	200 W
	Impedance	3 Ω
	Frequency Range	100 Hz to 20 000 Hz
	Sound Pressure Level	78 dB/W·m
	Dimensions (W × H × D)	280 mm × 1 114 mm × 280 mm(11-1/16 inches × 43-7/8 inches × 11-1/16 inches)
	Mass	3.4 kg (7.5 lbs) each

Satellite Speakers - SP-XTHC50

Front speakers (SP-THC60F)	Type	1-way 2-speaker Bass reflex type(Magnetically shielded Type)
	Speaker	5.5 cm (2-3/16 inches) cone × 2
	Power Handling Capacity	200 W
	Impedance	3 Ω
	Frequency Range	100 Hz to 20 000 Hz
	Sound Pressure Level	78 dB/W·m
	Dimensions (W × H × D)	280 mm × 1106 mm × 280 mm(11-1/16 inches × 43-9/16 inches × 11-1/16 inches)
	Mass	3.3 kg (7.3 lbs) each
Center speaker (SP-THC60C)	Type	1-way 2-speaker Bass reflex type(Magnetically shielded Type)
	Speaker	6.5 cm (2-9/16 inches) cone × 2
	Power Handling Capacity	200 W
	Impedance	3 Ω
	Frequency Range	90 Hz to 20 000 Hz
	Sound Pressure Level	81 dB/W·m
	Dimensions (W × H × D)	250 mm × 85 mm × 91 mm(9-7/8 inches × 3-3/8 inches × 3-5/8 inches)
	Mass	0.8 kg (1.8 lbs)
Surround speakers (SP-THC50S)	Type	1-way Bass reflex type
	Speaker	8.0 cm (3-3/16 inches) cone × 1
	Power Handling Capacity	200 W
	Impedance	3 Ω
	Frequency Range	80 Hz to 20 000 Hz
	Sound Pressure Level	70 dB/W·m
	Dimensions (W × H × D)	111.5 mm × 148 mm × 106.5 mm(4-7/16 inches × 5-7/8 inches × 4-1/4 inches)
	Mass	0.44 kg (0.98 lbs) each

Satellite Speakers - SP-XTHC40

Front speakers (SP-THC40F)	Type	2-way 2-speaker Bass reflex type(Magnetically shielded Type)
	Power Handling Capacity	170 W
	Impedance	3 Ω
	Frequency Range	80 Hz to 20 000 Hz
	Sound Pressure Level	77 dB/W·m
	Dimensions (W × H × D)	104.5 mm × 139 mm × 101 mm(4-1/8 inches × 5-1/2 inches × 4 inches)
	Mass	0.56 kg (1.3 lbs) each
Center speaker (SP-THC40C)	Type	2-way 2-speaker Bass reflex type(Magnetically shielded Type)
	Speaker	8.0 cm (3-3/16 inches) cone × 1 1.5 cm (5/8 inches) dome × 1
	Power Handling Capacity	170 W
	Impedance	3 Ω
	Frequency Range	80 Hz to 20 000 Hz
	Sound Pressure Level	77 dB/W·m
	Dimensions (W × H × D)	137 mm × 105 mm × 104.5 mm(5-7/16 inches × 4-3/16 inches × 4-1/8 inches)
	Mass	0.57 kg (1.3 lbs)
Surround speakers (SP-THC40S)	Type	1-way Bass reflex type
	Speaker	8.0 cm (3-3/16 inches) cone × 1
	Power Handling Capacity	170 W
	Impedance	3 Ω
	Frequency Range	80 Hz to 20 000 Hz
	Sound Pressure Level	70 dB/W·m
	Dimensions (W × H × D)	111.5 mm × 148 mm × 106.5 mm(4-7/16 inches × 5-7/8 inches × 4-1/4 inches)
	Mass	0.56 kg (1.3 lbs) each

- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- HDCP is the abbreviation of "High-Bandwidth Digital Content Protection," and is the high-reliable copy control technology licensed by Digital Content Protection, LLC.
- Designs and specifications are subject to change without notice.

SECTION 1

PRECAUTION

1.1 Safety Precautions

- (1) This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
- (2) Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturers warranty and will further relieve the manufacture of responsibility for personal injury or property damage resulting therefrom.
- (3) Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
- (4) The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after reassembling.


(5) Leakage shock hazard testing

After reassembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock. Do not use a line isolation transformer during this check.

- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.).
- Alternate check method
Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 Ω per volt or more sensitivity in the following manner. Connect a 1,500 Ω 10W resistor paralleled by a 0.15 μ F AC-type capacitor between an exposed metal part and a known good earth ground. Measure the AC voltage across the resistor with the AC

voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Voltage measured any must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

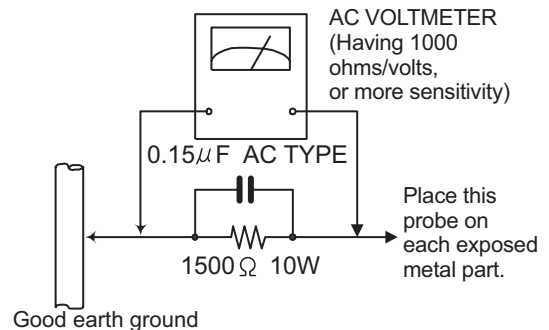

1.2 Warning

- (1) This equipment has been designed and manufactured to meet international safety standards.
- (2) It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
- (3) Repairs must be made in accordance with the relevant safety standards.
- (4) It is essential that safety critical components are replaced by approved parts.
- (5) If mains voltage selector is provided, check setting for local voltage.

1.3 Caution

Burrs formed during molding may be left over on some parts of the chassis.

Therefore, pay attention to such burrs in the case of pre-forming repair of this system.

1.4 Critical parts for safety

In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (\blacksquare), diode (\blacksquare) and ICP (\bullet) or identified by the " Δ " mark nearby are critical for safety. When replacing them, be sure to use the parts of the same type and rating as specified by the manufacturer.
(This regulation dose not Except the J and C version)

1.5 Preventing static electricity

Electrostatic discharge (ESD), which occurs when static electricity stored in the body, fabric, etc. is discharged, can destroy the laser diode in the traverse unit (optical pickup). Take care to prevent this when performing repairs.

1.5.1 Grounding to prevent damage by static electricity


Static electricity in the work area can destroy the optical pickup (laser diode) in devices such as laser products. Be careful to use proper grounding in the area where repairs are being performed.

(1) Ground the workbench

Ground the workbench by laying conductive material (such as a conductive sheet) or an iron plate over it before placing the traverse unit (optical pickup) on it.

(2) Ground yourself

Use an anti-static wrist strap to release any static electricity built up in your body.

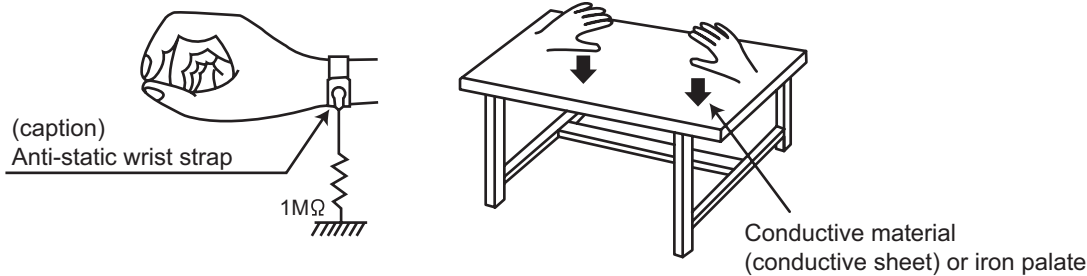

(3) Handling the optical pickup

- In order to maintain quality during transport and before installation, both sides of the laser diode on the replacement optical pickup are shorted. After replacement, return the shorted parts to their original condition. (Refer to the text.)
- Do not use a tester to check the condition of the laser diode in the optical pickup. The tester's internal power source can easily destroy the laser diode.


1.6 Handling the traverse unit (optical pickup)

- (1) Do not subject the traverse unit (optical pickup) to strong shocks, as it is a sensitive, complex unit.
- (2) Cut off the shorted part of the flexible cable using nippers, etc. after replacing the optical pickup. For specific details, refer to the replacement procedure in the text. Remove the anti-static pin when replacing the traverse unit. Be careful not to take too long a time when attaching it to the connector.
- (3) Handle the flexible cable carefully as it may break when subjected to strong force.
- (4) It is not possible to adjust the semi-fixed resistor that adjusts the laser power. Do not turn it.


1.7 Attention when traverse unit is decomposed



***Please refer to "Disassembly method" in the text for the pickup unit.**

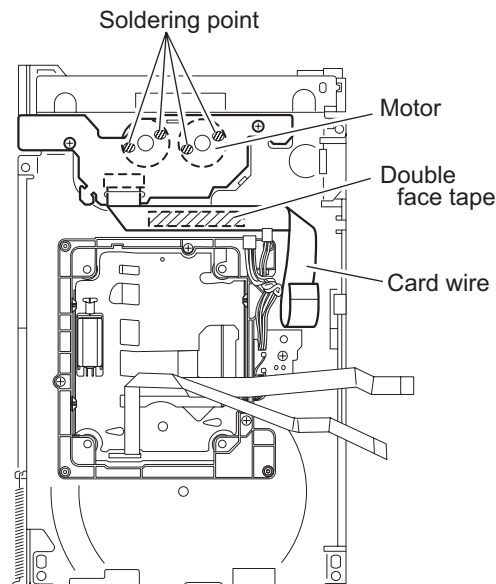- Apply solder to the short land sections before the card wire is disconnected from the connector on the servo board. (If the card wire is disconnected without applying solder, the pickup may be destroyed by static electricity.)
- In the assembly, be sure to remove solder from the short land sections after connecting the card wire.

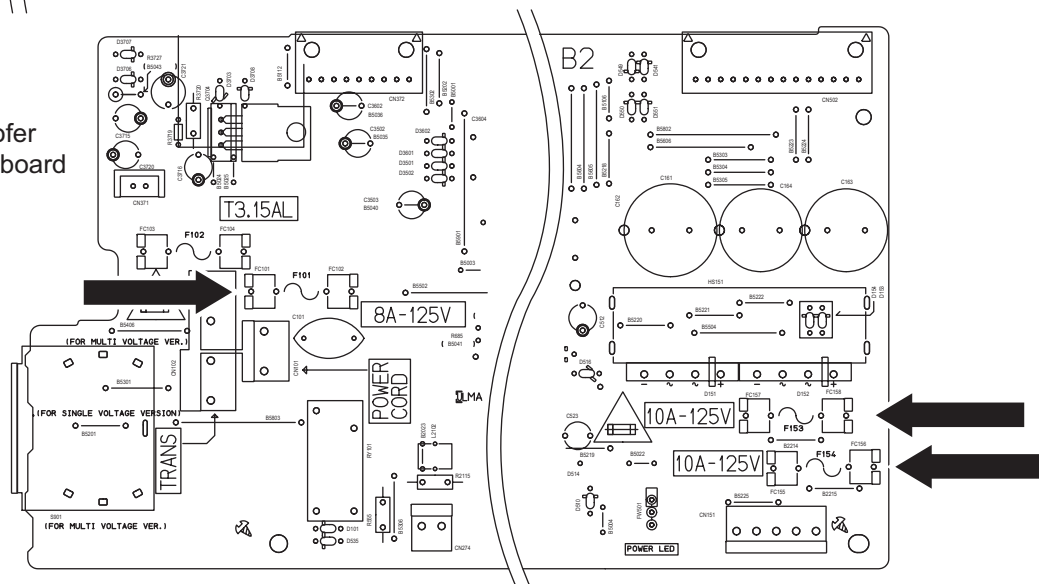

1.8 Importance administering point on the safety



<h3>Full Fuse Replacement Marking</h3> <p>Graphic symbol mark (This symbol means fast blow type fuse.)</p>  <p>should be read as follows ;</p>	<h3>Marquage Pour Le Remplacement Complet De Fusible</h3> <p>Le symbole graphique (Ce symbole signifie fusible de type à fusion rapide.)</p>  <p>doit être interprété comme suit ;</p>
<h3>FUSE CAUTION</h3>	<h3>PRECAUTIONS SUR LES FUSIBLES</h3>
<p>FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE ONLY WITH SAME TYPE AND RATING OF FUSES ;</p> <p>F101 : 8A 125V F153 : 10A 125V F154 : 10A 125V</p>	<p>POUR UNE PROTECTION CONTINUE CONTRE DES RISQUES D'INCENDIE, REMPLACER SEULEMENT PAR UN FUSIBLE DU MEME TYPE ;</p> <p>F101 : 8A 125V F153 : 10A 125V F154 : 10A 125V</p>

1.9 Important for laser products

1.CLASS 1 LASER PRODUCT

2.CAUTION :

(For U.S.A.) Visible and/or invisible class II laser radiation when open. Do not stare into beam.

(Others) Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments.

3.CAUTION : Visible and/or invisible laser radiation when open and inter lock failed or defeated. Avoid direct exposure to beam.

4.CAUTION : This laser product uses visible and/or invisible laser radiation and is equipped with safety switches which prevent emission of radiation when the drawer is open and the safety interlocks have failed or are defeated. It is dangerous to defeat the safety switches.

(For U.S.A.)

CAUTION : Visible and/or invisible class II laser radiation when open. Do not stare into beam.

(Others)

CAUTION : Visible and/or invisible class 1M laser radiation when open. Do not view directly with optical instruments

ACHTUNG: Sichtbare und/oder unsichtbare Laserstrahlung der Klasse 1M bei offenen Abdeckungen. Nicht direkt mit optischen Instrumenten betrachten.

ATTENTION: Rayonnement laser visible et/ou invisible de classe 1M une fois ouvert. Ne pas regarder directement avec des instruments optiques.

VOORZICHTIG: Zichtbare en/of onzichtbare klasse 1M laserstralen indien geopend. Bekijk niet direct met optische instrumenten.

ATTENZIONE: Radiazione laser in classe 1M visibile e/o invisibile quando aperto. Non osservare direttamente con strumenti ottici.

VARNING: Synlig och/eller osynlig laserstrålning, klass 1M, när denna del är öppnad. Betrakta ej strålen med optiska instrument.

VARO! Avattaessa olet alttiina nakymäälle ja/tai näkymättömälle luokan 1M lasersäteilylle. Älä tarkastele sitä optisen laitteen läpi.

ADVASEL: Synlig og/eller usynlig klasse 1M-laserstråling ved åbning. Se ikke direkte med optiske instrumenter.

AVISO: Radiación láser de clase 1M visible y/o invisible cuando está abierto. No mirar directamente con instrumental óptico.

PRECAUÇÃO: Radiação laser de classe 1M visível e/ou invisível quando aberto. Não olhe diretamente com instrumentos ópticos.

5.CAUTION : If safety switches malfunction, the laser is able to function.

6.CAUTION : Use of controls, adjustments or performance of procedures other than those specified here in may result in hazardous radiation exposure.



CAUTION Please use enough caution not to see the beam directly or touch it in case of an adjustment or operation check.

PRECAUÇÃO: Radiação laser de classe 1M visível e/ou invisível quando aberto. Não olhe diretamente com instrumentos ópticos.

ПРЕДУПРЕЖДЕНИЕ: В открытом состоянии происходит видимое и/или невидимое излучение лазера класса 1M. Не смотрите непосредственно в оптические инструменты.

UWAGA: Otwarcie spowoduje narażenie na widzialne i/lub niewidzialne promieniowanie lasera klasy 1M. Nie patrzeć bezpośrednio w przyrządy optyczne.

UPOZORNĚNÍ: Při otevření vydává viditelné popř. neviditelné laserové ozáření třídy 1M. Nedívejte se do otvoru přímo s optickými nástroji.

FIGYELMEZTETÉS: Látható és/vagy láthatatlan 1M osztályú sugárzás nyitott állapotban. Ne nézze közvetlenül optikai műszerekkel.

注意 : 打開蓋板可能會產生可見或不可見的 1M 級鐳射。不要使用光學儀器直接進行窺視。


注意 : 打开盖板可能会产生可见或不可见的 1M 级辐射。不要使用光学仪器直接进行窥视。

تنبيه: يوجد إشعاع ليزري مرئي و/أو غير مرئي من الفئة 1M عندما يكون الجهاز مفتوحاً. تجنب النظر مباشرة داخل الجهاز باستخدام أدوات بصرية.

احتياط: هنگامی که باز گردد، تشعشع مرئی و یا نامرئی کلاس 1M لیزر وجود دارد. با لوازم چشمی مستقیماً به آن نگاه نکنید.

주의: 개방하면 가시 및/또는 비가시 클래스 1M 레이저 방사선이 나옵니다. 광학 기구로 직접 들여다보지 마십시오.

REPRODUCTION AND POSITION OF LABELS and PRINT WARNING LABEL and PRINT

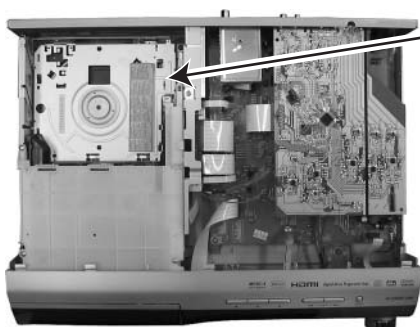

CAUTION	ATTENTION	AVISO	VARNING	注意	CAUTION
VISIBLE AND/OR INVISIBLE CLASS 1M LASER RADIATION WHEN OPEN. DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS. IEC60825-1:2001	RAYONNEMENT LASER VISIBLE ET/OU INVISIBLE DE CLASSE 1M UNE FOIS OUVERT. NE PAS REGARDER DIRECTEMENT AVEC DES INSTRUMENTS OPTIQUES.	RADIACIÓN LÁSER DE CLASE 1M VISIBLE Y/O INVISIBLE CUANDO ESTÁ ABIERTO. NO MIRAR DIRECTAMENTE CON INSTRUMENTAL OPTICO.	SYNLIG OCH/ELLER OSYNLIG LASERSTRÅLNING. KLASSE 1M, NÄR DENNA DEL ÄR ÖPPNAD. BETRAKTA EJ STRÅLEN MED OPTISKA INSTRUMENT.	ここを開くと可視及び/または不可視のクラス1Mレーザー放射線が出ます。光学装置で直接見ないでください。	VISIBLE AND/OR INVISIBLE CLASS II LASER RADIATION WHEN OPEN. DO NOT STARE INTO BEAM. FDA 21 CFR (ENG) LV44803-003A
(ENG)	(FRA)	(FRA)	(ESP)	(JPN)	(ENG)

SECTION 2

SPECIFIC SERVICE INSTRUCTIONS

This service manual does not describe SPECIFIC SERVICE INSTRUCTIONS.

SECTION 3 DISASSEMBLY

3.1 Main body

3.1.1 Removing the metal cover (See Fig.1 and 2)

- (1) Remove the three screws **A** attaching the metal cover.
(See Fig.1)
- (2) Remove the four screws **B** attaching the metal cover. (See Fig.2)

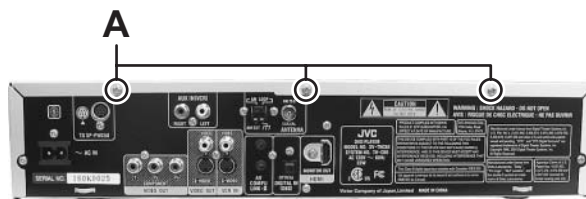


Fig.1

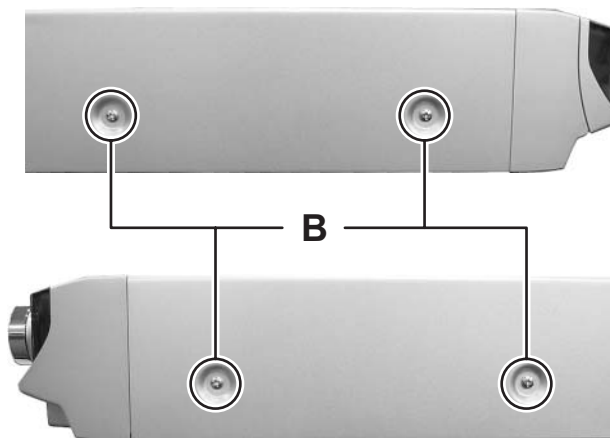


Fig.2

3.1.2 Removing the front panel assembly

(See Fig.3 to 5)

- (1) Disconnect the card wires from connector [CN450](#), [CN451](#) and [CN457](#) of the main board. (See Fig.3)
- (2) Remove the one screw **C** attaching the earth wire to the main board. (See Fig.3)
- (3) From the bottom side of main body, remove the two screws **D** attaching the front panel assembly. (See Fig.4)
- (4) Disengage the hook **a** of the bottom side and hook **b** of the both side of front panel assembly, and then remove the front panel assembly. (See Fig.4 and 5)

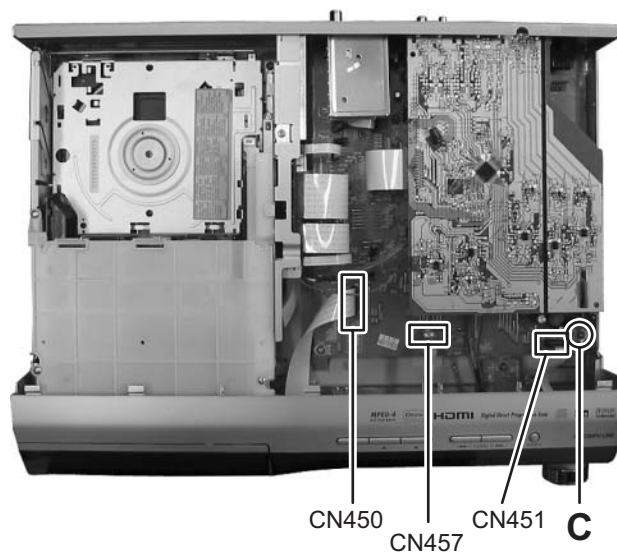


Fig.3

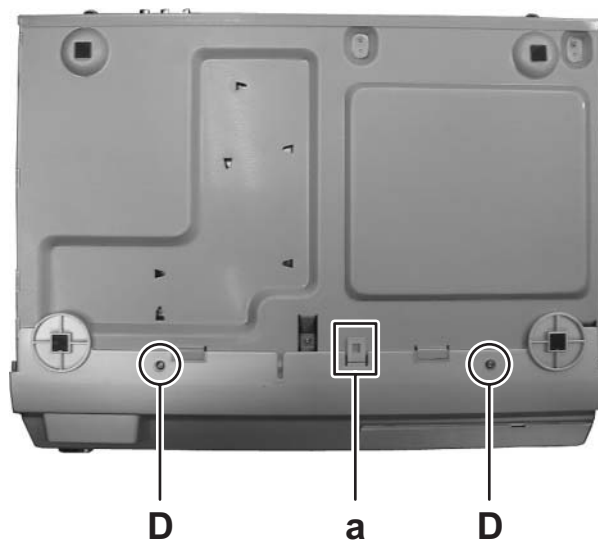


Fig.4

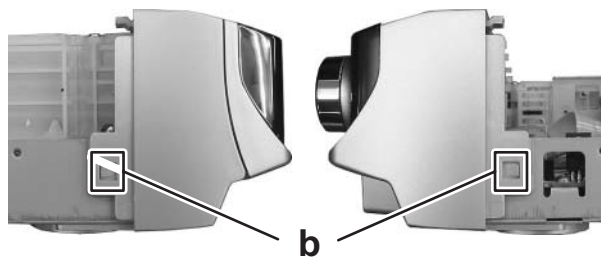


Fig.5

3.1.3 Removing the DVD changer mechanism assembly (See Fig.6 to 8)

- (1) From the back side of main body, remove the one screw **E** and one screw **F** attaching the DVD changer mechanism assembly. (See Fig.6)
- (2) Disconnect the connector wire from connector [CN704](#) of the DVD module board. (See Fig.7)
- (3) Disconnect the card wires from connector [CN701](#), [CN702](#), [CN703](#) and [CN801](#) of the DVD module board. (See Fig.7)
- (4) Remove the four screws **G** attaching the DVD changer mechanism assembly. (See Fig.8)

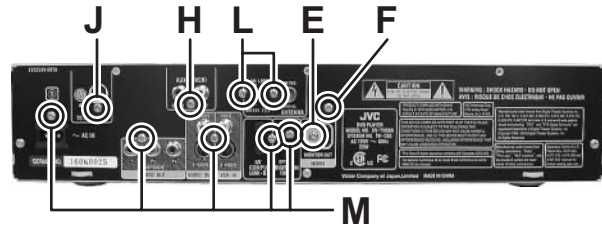


Fig.6

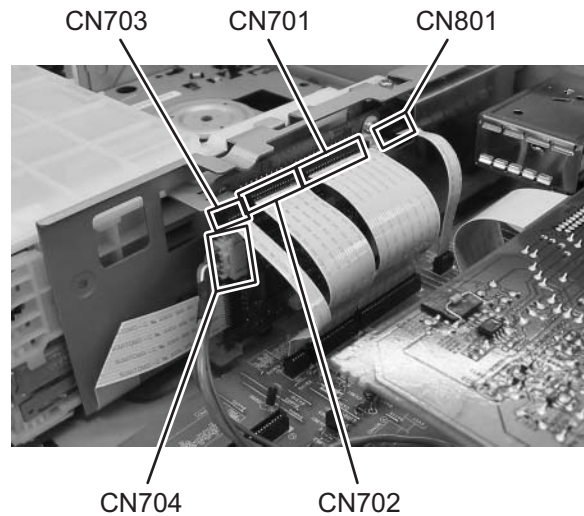


Fig.7

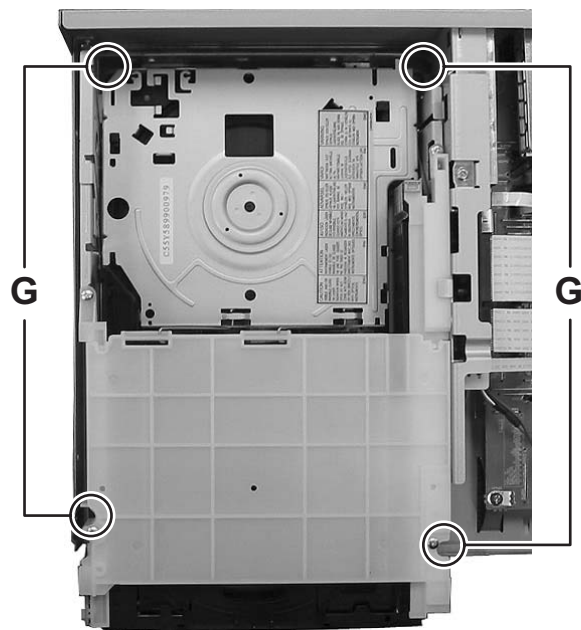


Fig.8

3.1.4 Removing the audio & digital input board (See Fig.6 and 9)

- (1) Disconnect the card wire from connector [CN102](#) of the audio & digital input board. (See Fig.9)
- (2) Disconnect the connector [CN101](#) connecting the connection board. (See Fig.9)
- (3) From the back side of main body, remove the one screw **H** and one screw **J** attaching the audio & digital input board. (See Fig.6)
- (4) Move the audio & digital input board to front ward until disengage position from the bracket board, and then take out to up ward. (See Fig.9)

3.1.5 Removing the USB jack board (See Fig.9)

- (1) Remove the one screw **K** attaching the USB jack board. (See Fig.9)

3.1.6 Removing the tuner pack (See Fig.6 and 10)

- (1) Disconnect the card wire from connector [CN410](#) of the main board. (See Fig.10)
- (2) Remove the two screws **L** attaching the tuner pack. (See Fig.6)

3.1.7 Removing the main board (See Fig.6 and 11)

- (1) Disconnect the card wires from connector [CN401](#), [CN402](#), [CN403](#) and [CN404](#) of the main board. (See Fig.11)

Reference:

This step is unnecessary if the DVD changer mechanism assembly is removed previously.

- (2) From back side of main body, remove the five screws **M** attaching the main board. (See Fig.6)
- (3) Remove the three screws **N** attaching the main board. (See Fig.11)

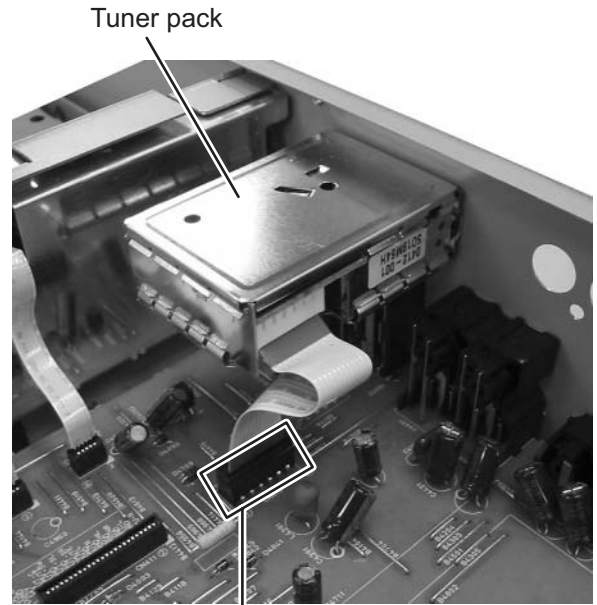


Fig.10

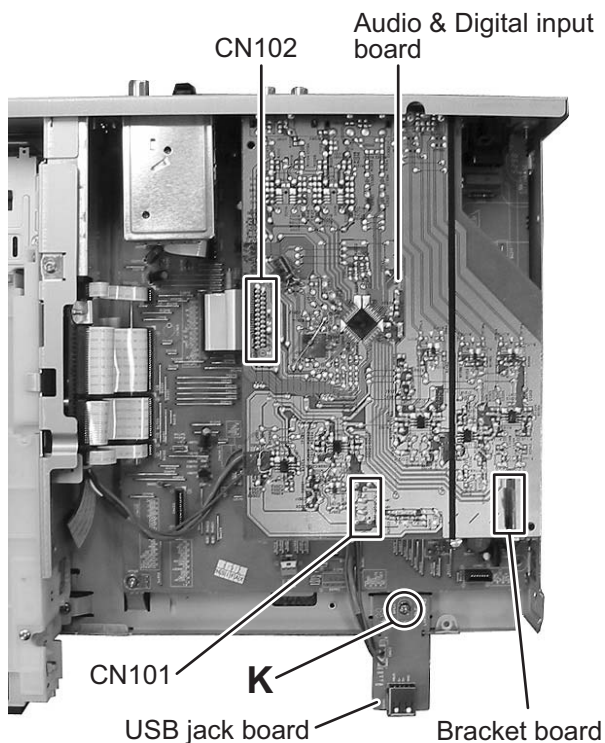


Fig.9

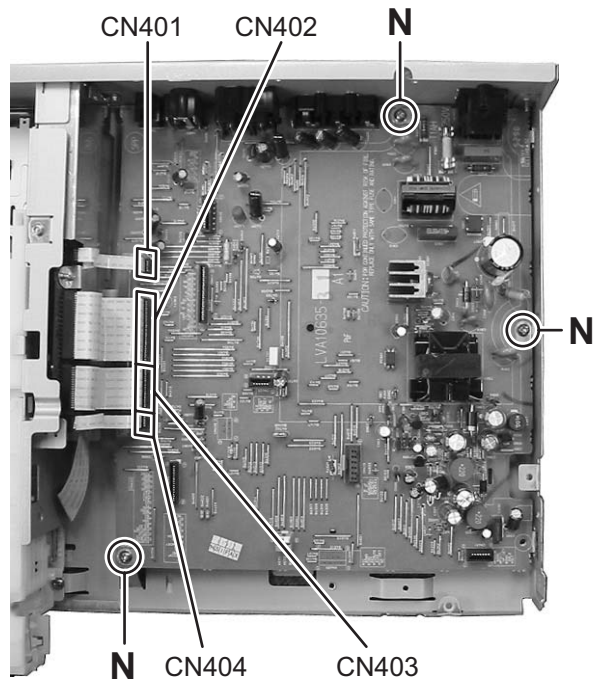


Fig.11

3.1.8 Removing the operation board (see Fig.12)

- (1) Remove the one screw **P** attaching the bracket board.
- (2) Remove the three screws **Q** attaching the operation board.

3.1.9 Removing the front board (See Fig.12 and 13)

- (1) Take out the volume knob.
- (2) Remove the one screw **R** attaching the volume. (See Fig.13)
- (3) Remove the bracket board and operation board. (See Fig.12)
- (4) Remove the seven screws **S** attaching the front board. (See Fig.12)

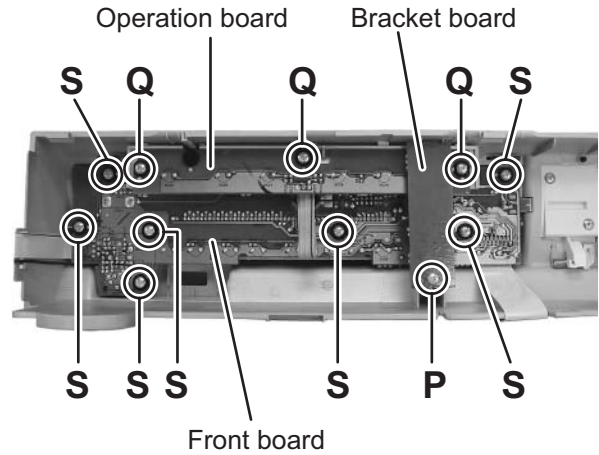


Fig.12

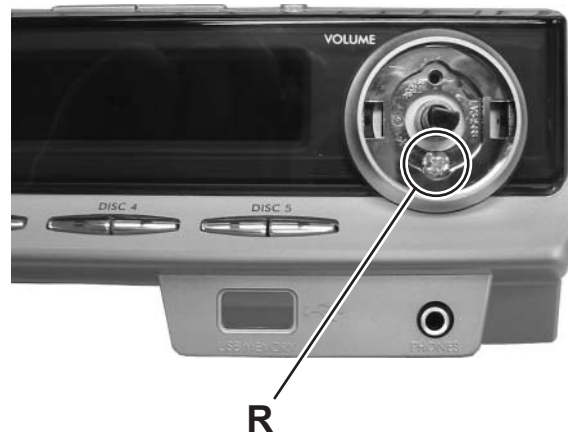


Fig.13

3.2 Subwoofer

3.2.1 Removing the amp unit

(See Fig.1 to 3)

- (1) From the bottom side of subwoofer assembly, remove the eight screws **A** attaching the amp unit. (See Fig.1)
- (2) From the back side of subwoofer assembly, remove the two screws **B** attaching the amp unit. (See Fig.2)
- (3) Pull out the amp unit, and then disconnect the connector wire from connector [CN274](#) of the mother board. (See Fig.3)

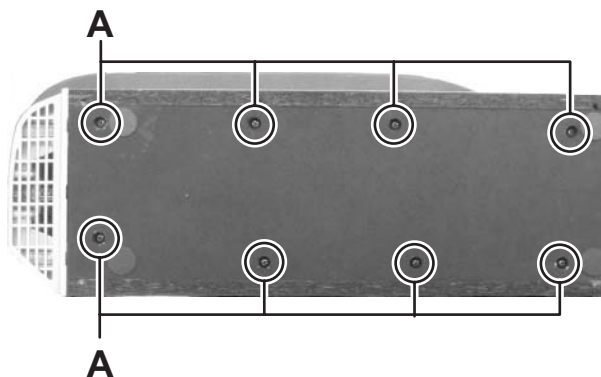


Fig.1

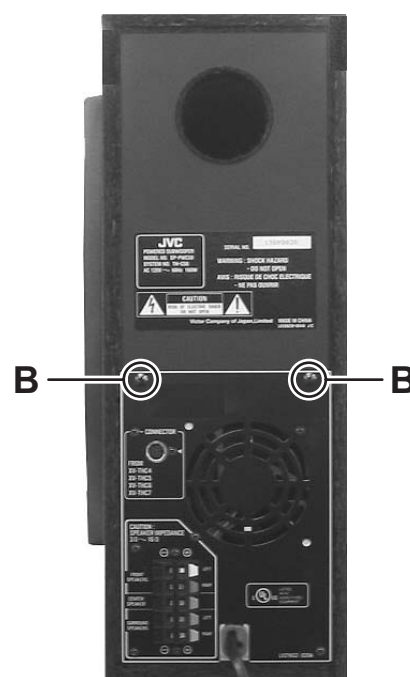


Fig.2

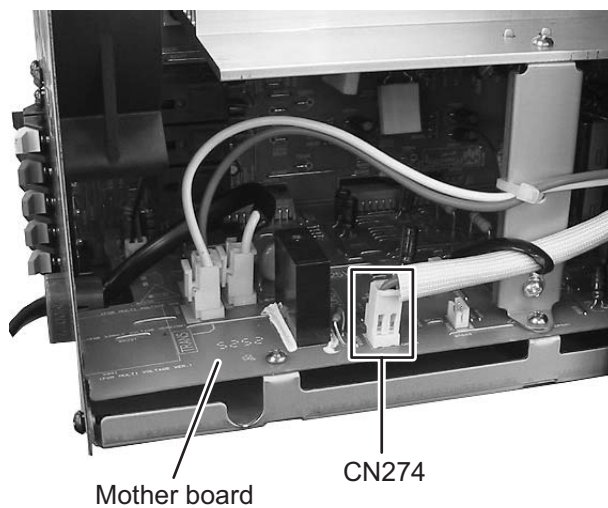


Fig.3

3.2.2 Removing the rear plate (See Fig.4 and 5)

- (1) Disconnect the connector wire from connector [CN371](#) of the mother board. (See Fig.4)
- (2) Remove the six screws **C** and one screw **D** attaching the rear plate (See Fig.5)



Fig.4

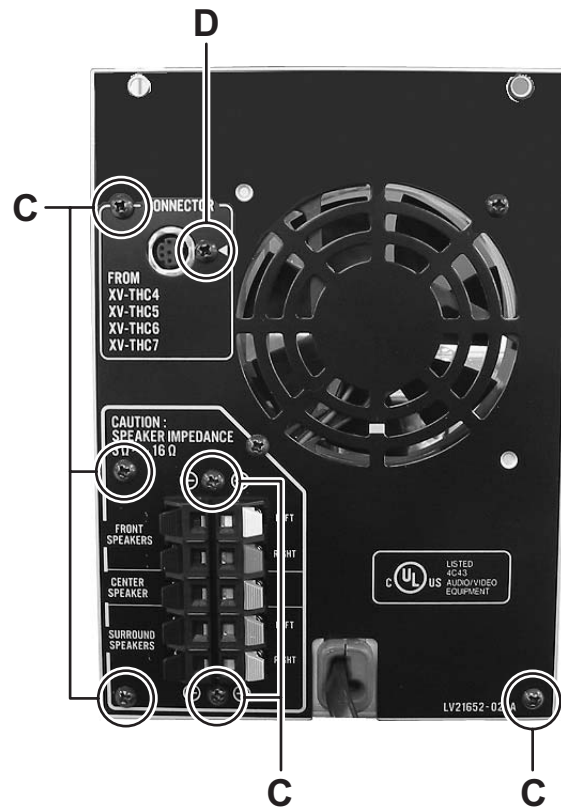


Fig.5

3.2.3 Removing the power transformer (See Fig.6 and 7)

- (1) Remove the four screws **E** attaching the power transformer. (See Fig.6)
- (2) Disconnect the connector wire from connector [CN151](#) of the mother board. (See Fig.7)


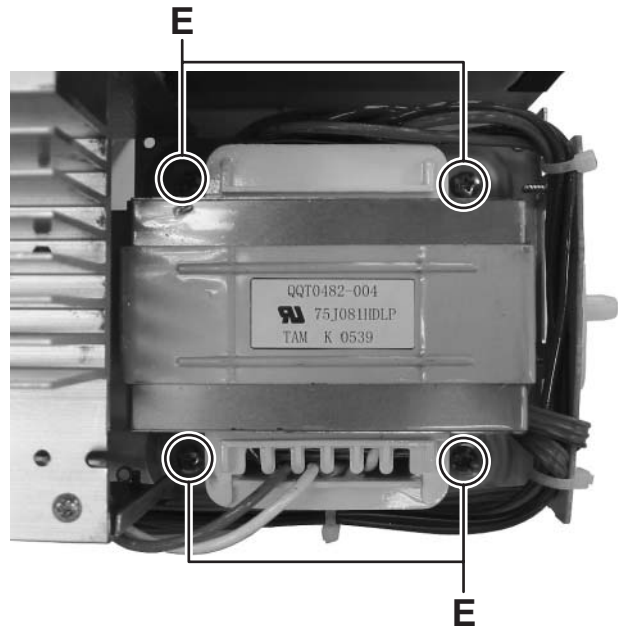


Fig.6

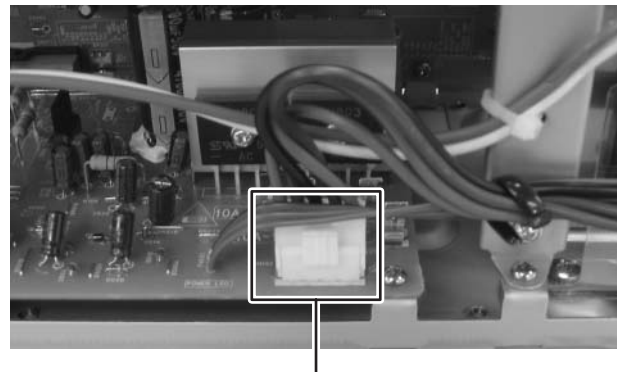

CN151

Fig.7

3.2.4 Removing the mother board (See Fig.8 to 11)

- (1) Remove the two screws **F** attaching the LED board. (See Fig.8)
- (2) Remove the two screws **G** attaching the heat sink bracket. (See Fig.9)
- (3) Remove the two screws **H** attaching the mother board. (See Fig.9)
- (4) Release the lock of connectors [CN372](#), [CN501](#) and [CN502](#) connect the amp board and mother board, and then remove the mother board. (See Fig.10 and 11)

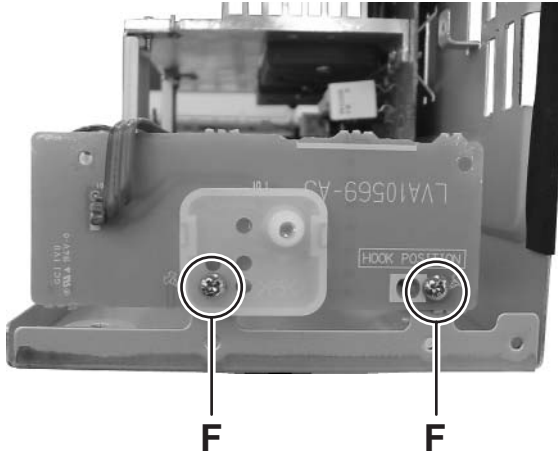


Fig.8

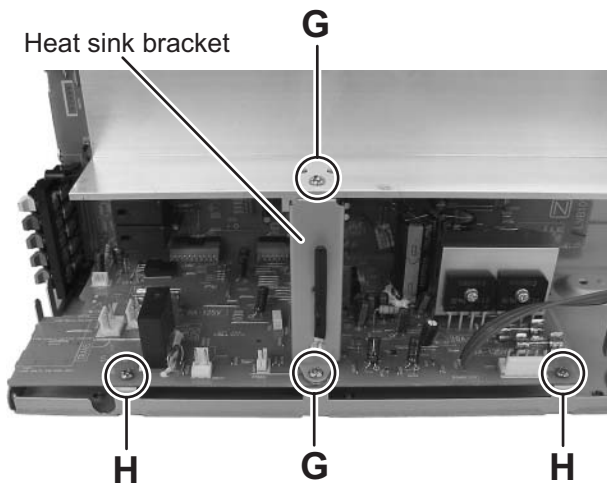


Fig.9

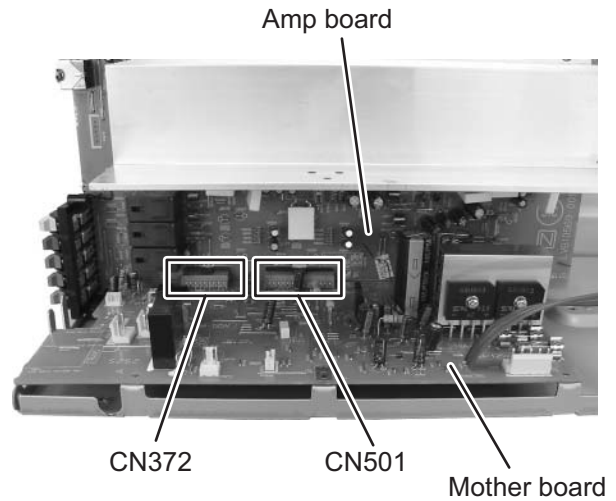


Fig.10

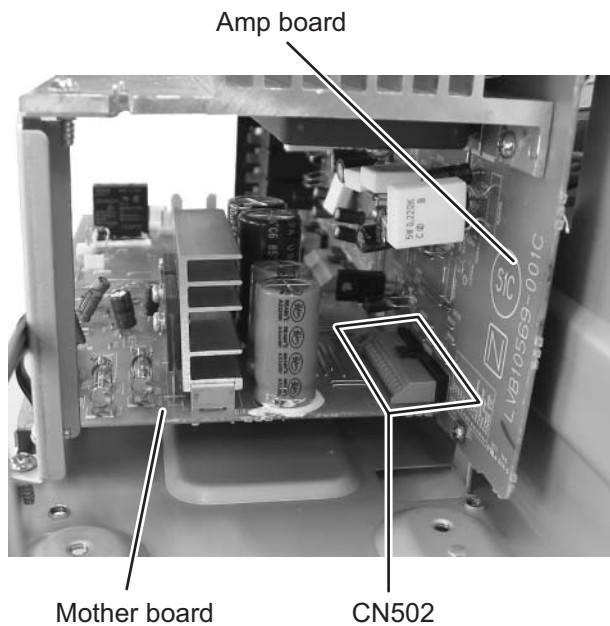


Fig.11

3.2.5 Removing the amp board

(See Fig.12 and 13)

- (1) Remove the two screws **J** attaching the heat sink bracket.
(See Fig.12)
- (2) Remove the three screws **K** attaching the heat sink. (See Fig.12)
- (3) Remove the three screws **L** attaching the heat sink. (See Fig.13)
- (4) Remove the three screws **M** attaching the amp board. (See Fig.13)

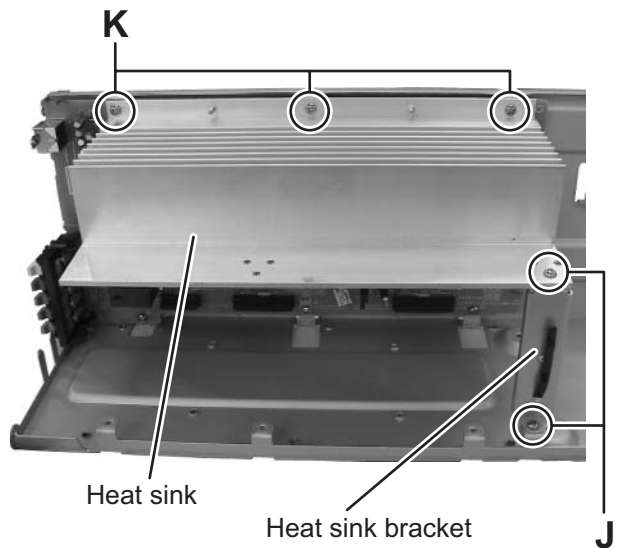


Fig.12

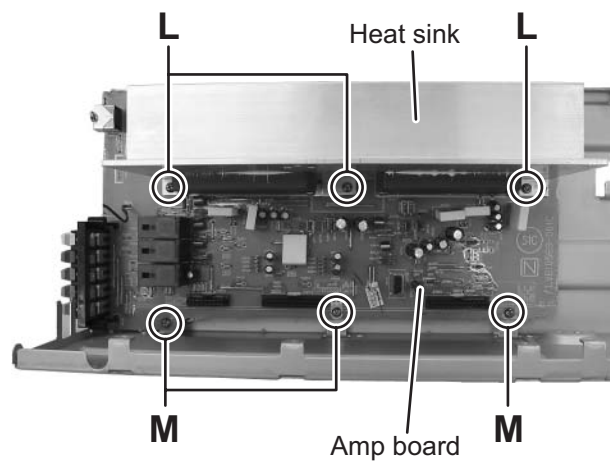


Fig.13

3.2.6 Removing the heat sink (See Fig.14 and 15)

- (1) Remove the four screws **N** attaching the power ICs. (See Fig.14)
- (2) Remove the three screws **P** attaching the hear sink. (See Fig.15)

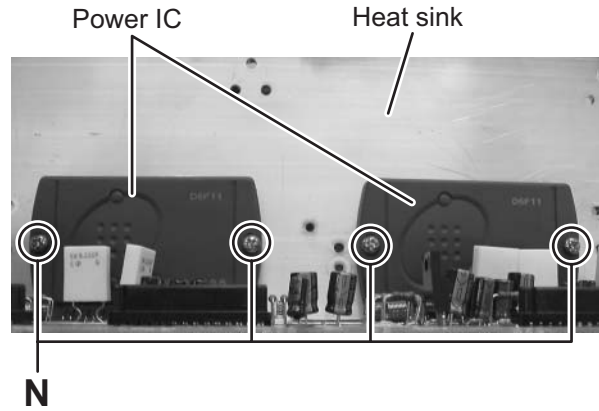


Fig.14

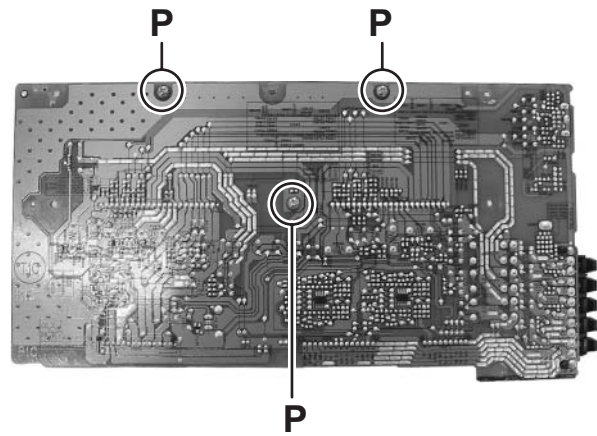



Fig.15

3.3 DVD mechanism section

3.3.1 Removing the DVD module board

(See Fig.1)


- (1) Disconnect the card wire connected to [CN451](#), [CN452](#), [CN453](#), [CN101](#) and [CN102](#) of DVD module board. (See Fig.1)
- (2) Remove the two screws **A** attaching the DVD module board. (See Fig.1)

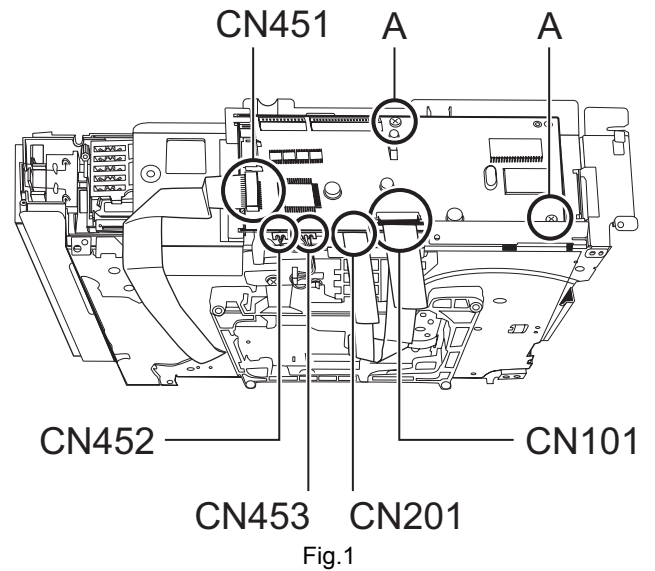

3.3.2 Removing the PWB bracket and wire holder

(See Fig.2)

- (1) Remove the two screws **B** attaching the wire holder.
- (2) Remove the one screw **C** attaching the PWB bracket.

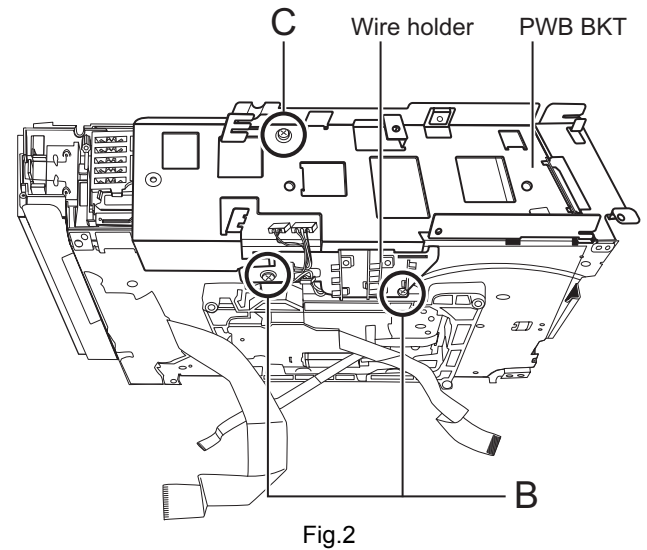

3.3.3 Removing the tray assembly (See Fig.3 to 7)

- (1) Remove the two screws **D** from the top cover and release the two joints **a** on both sides of the body. (See Fig.3)
- (2) Remove the top cover with the two rods attached to the top cover and lifter assembly respectively. (See Fig.4)
- (3) Remove the open detect lever on the left side of the body. (See Fig.5)
- (4) Push part **b** of the slide (R) assembly on the right side of the body to unlock the tray assembly. Draw out the trays toward the front. (See Fig.6)

Attention:

The tray can be locked if all tray assemblies are attached.

- (5) From top of the body, move the stopper tab **c** in the direction of the arrow and release. Pull out the tray assemblies from the body. (See Fig.6 and 7)

Caution:

Remove the tray assembly from top tray 5 in order.

Attention:

When reattaching the sub tray of the tray assembly, or when removing the DVD mechanism inside, refer to another section.

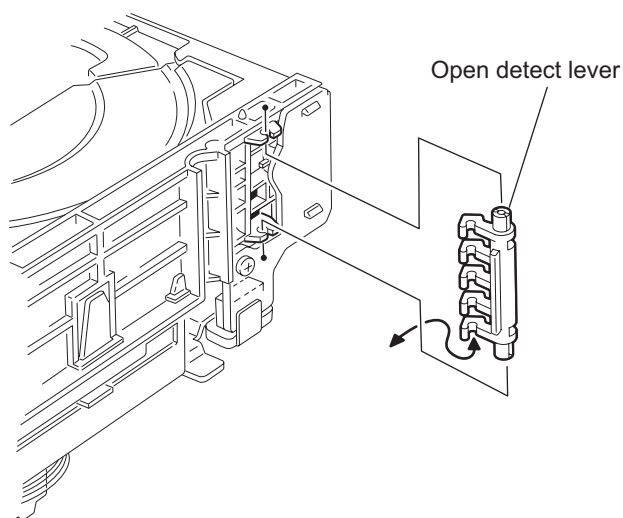


Fig.5

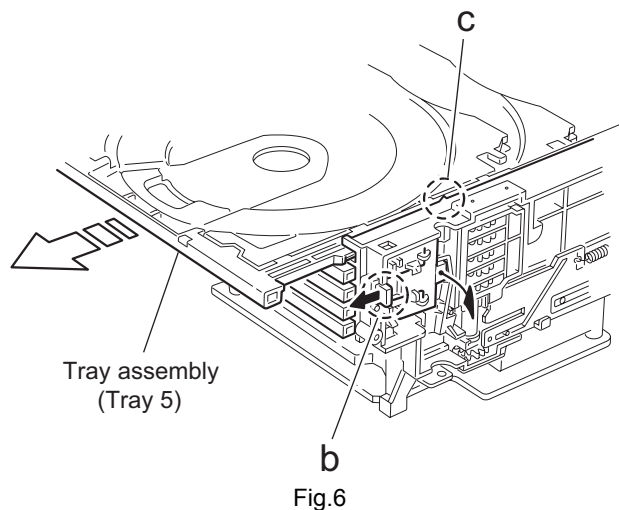


Fig.6

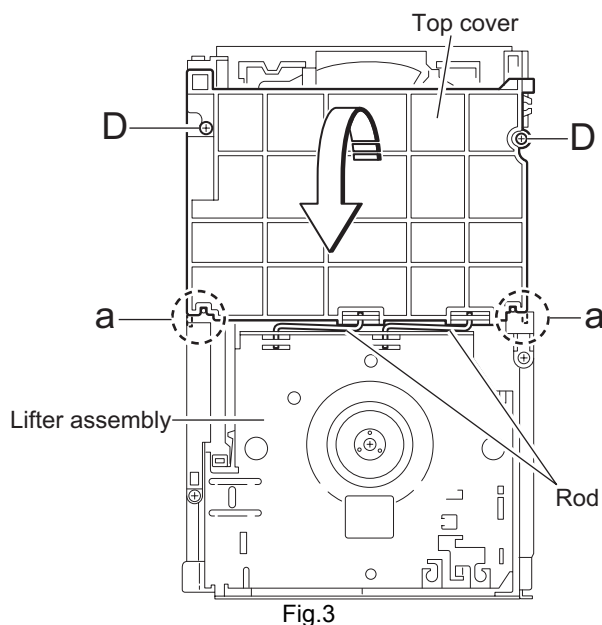


Fig.3

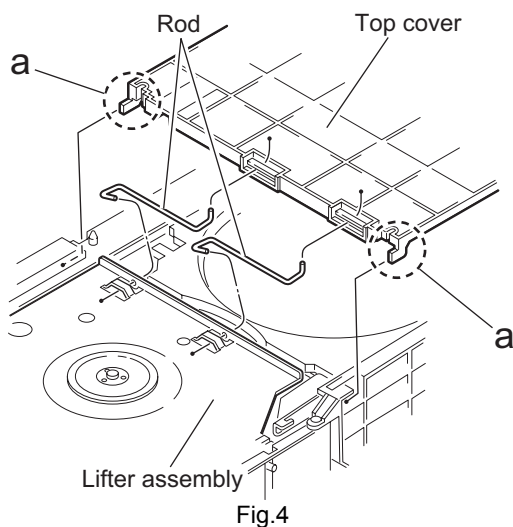


Fig.4

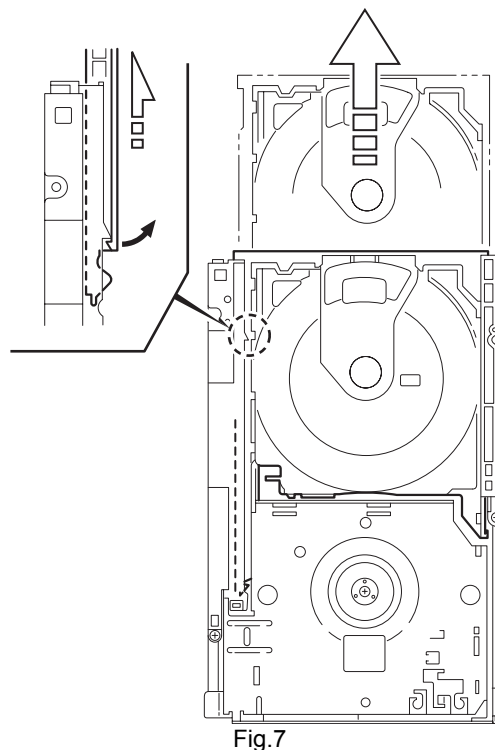


Fig.7

3.3.4 Removing the motor board

(See Fig.8)

- (1) Remove the two screws **D** attaching the motor board.
- (2) Remove the spacer fixing the motor board and tray switch-board, and disconnect the connector **CN2** on the motor board.
- (3) Disconnect the card wire from connector **CN1** on the motor board.

Caution:

When reconnection the card wire, let the card wire through the slot **d** of the motor board and attach it to bottom of the body using a double face tape.


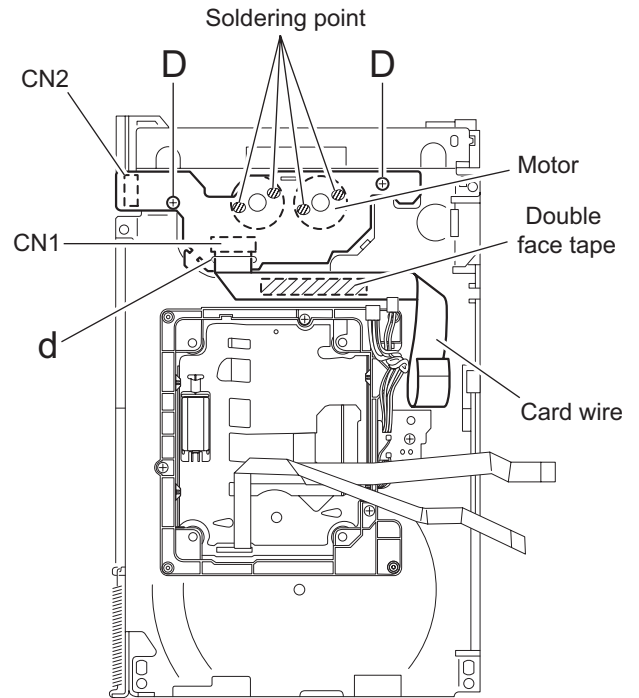


Fig.8

3.3.5 Removing the DVD tramecha assembly

(See Fig.9)

- (1) Remove the three screws **E** attaching the DVD tramecha assembly.

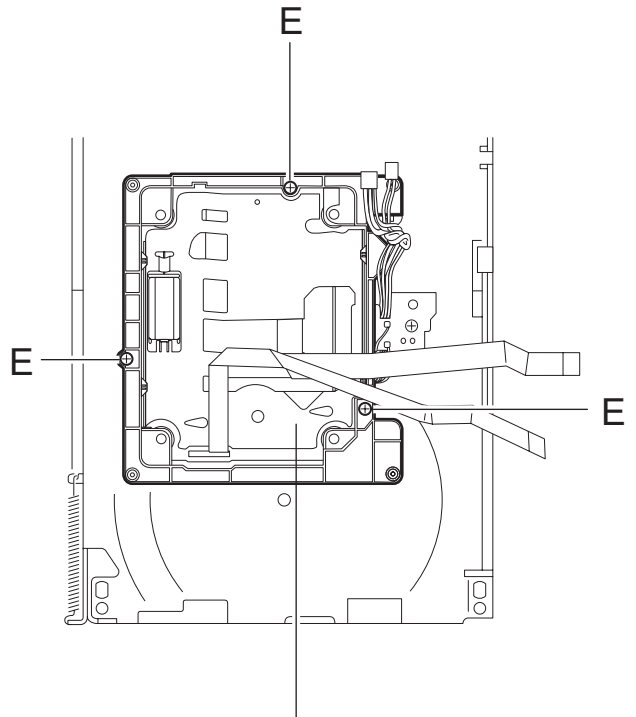

DVD Tramecha assembly
Fig.9

3.3.6 Removing the pickup (See Fig.10 and 11)

- (1) Remove the one screw **F** and **G** attaching the spring holder. (See Fig.10)
- (2) Lift up the shaft from the tramecha assembly. (See Fig.10)
- (3) Remove the two screws **H** attaching the lack. (See Fig.11)

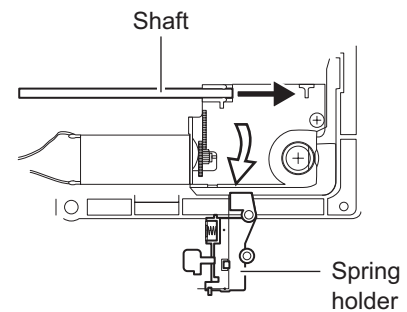
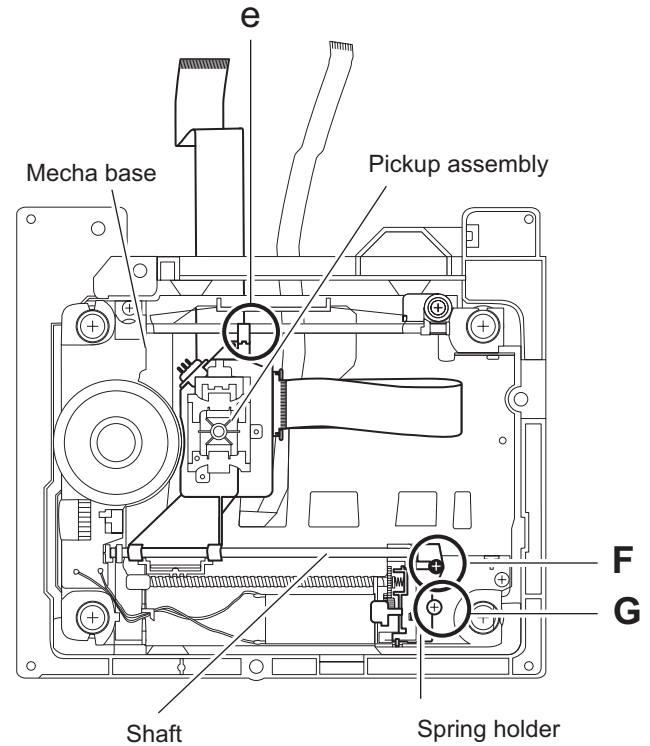


Fig.10

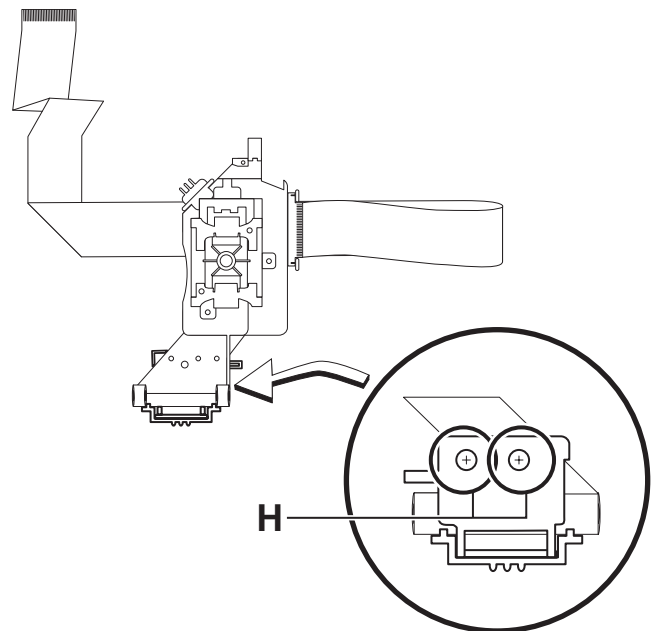


Fig.11

3.3.7 Removing the side (L)

(See Fig.12 to 14)

- (1) Remove the two screws **J** attaching the side (L). (See Fig.12)
- (2) From the side of body, remove the spacer fixing the tray switch board and motor board. Disconnect connector **CN3** on the tray switch board and detach the side (L) upward. (See Fig.13)
- (3) Remove the one screw **K** attaching the tray switch board. (See Fig.14)
- (4) Push the joint tab **d** of the side (L) in the direction of the arrow and remove the tray switch board outward, then release joint **f**. (See Fig.14)

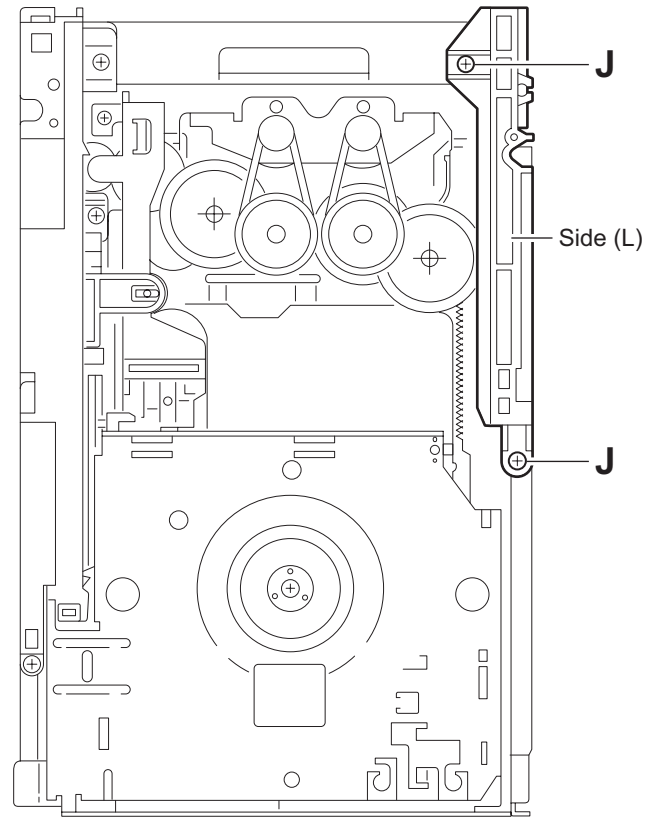


Fig.12

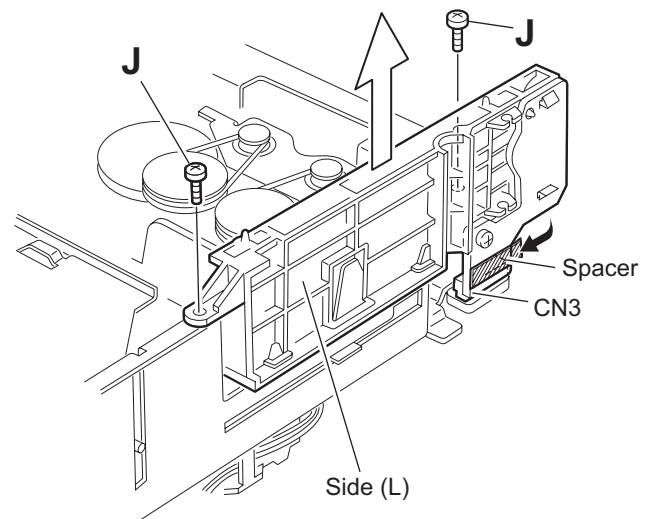


Fig.13

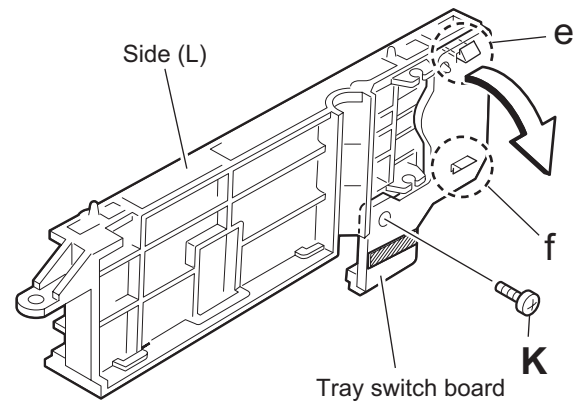


Fig.14

3.3.8 Removing the side (R) assembly (See Fig.15 to 19)

- (1) Remove the three screws **L** attaching the side (R) assembly. (See Fig.15)
- (2) Remove the spring attached to part **g** of the hook on the right side of the body. (See Fig.16)
- (3) Push and release the two tabs **h** of the gear cover through the notches inside the side (R) assembly. Remove the gear cover outward. (See Fig.17)
- (4) From top of the body, turn the 1 gear clockwise to move the elevator cam rearward. Move the two slots **k** and joint **m** of the elevator cam as shown Fig.18 and remove the elevator cam outward.
- (5) Remove the three screws **M** and detach the side (R) upward. (See Fig.19)

Caution:

When reattaching the side (R) assembly, make sure to fit the shaft into the slot of the select lever.





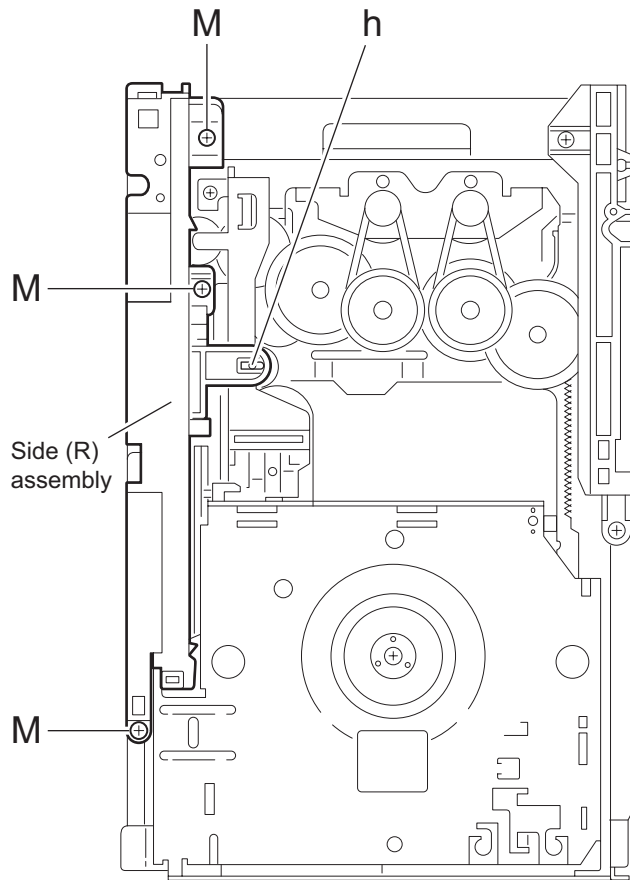


Fig.15

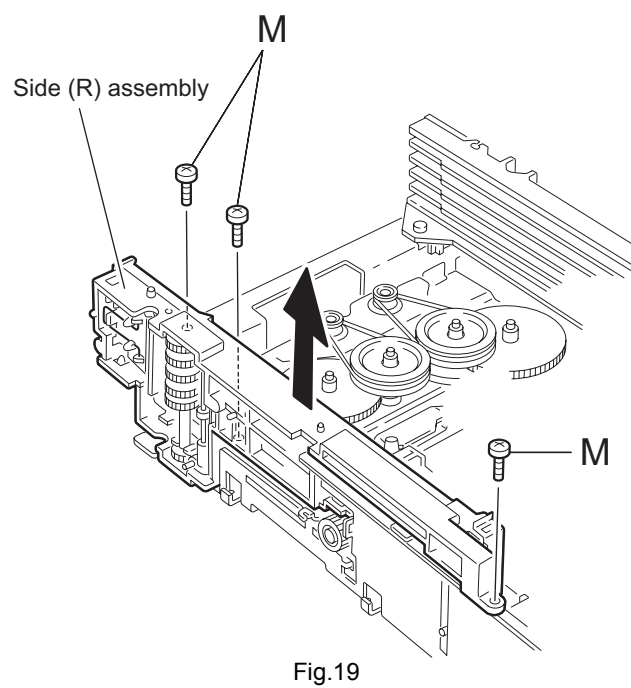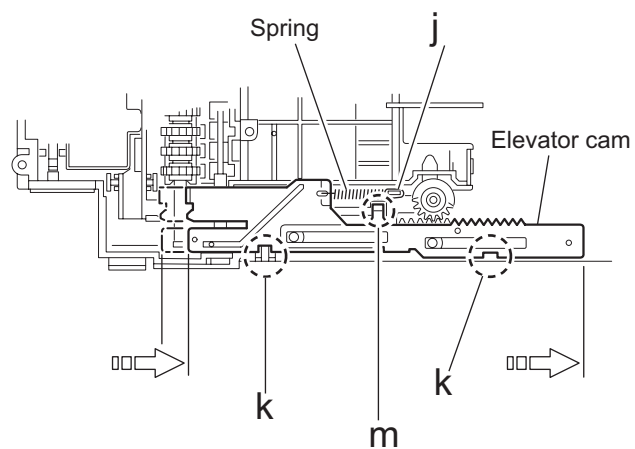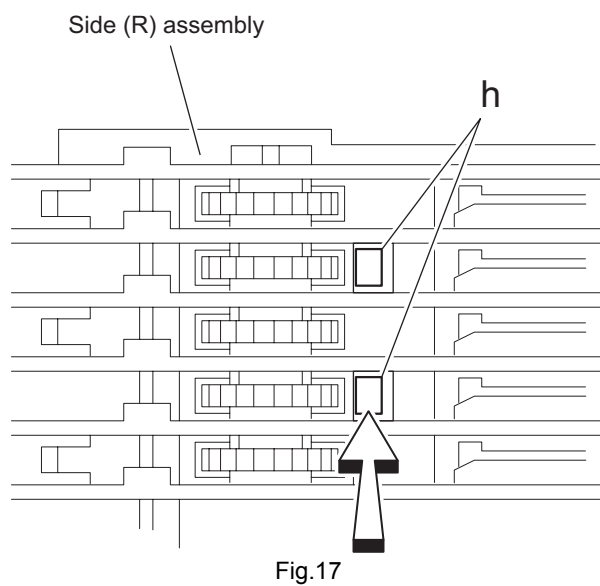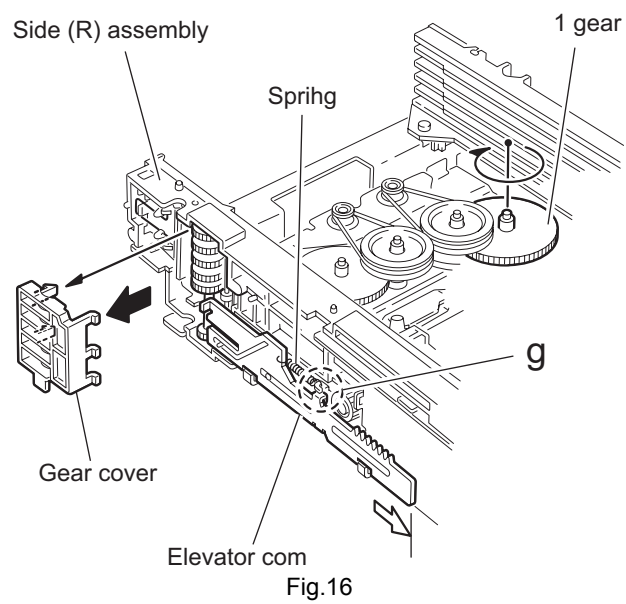

3.3.9 Removing the lifter assembly (See Fig.20 to 24)

- (1) From top of the body, turn the 1 gear clockwise to move the lifter assembly upward. (See Fig.20)
- (2) From top of the body, turn 2 gear clockwise to move the hook toward the front until it stops. (See Fig.20)
- (3) Move the hook stopper in the direction of the arrow while pushing the tab **n** of the hook stopper to unlock it. Release four joints **p** to detach from rack holder. Release the rod from part **q**. (See Fig.21 and 22)
- (4) Turn 1 gear clockwise again to move the lifter assembly upward. (See Fig.23)
- (5) Remove the lifter assembly from the body upward at position **r** where the four pins on the right and left sides of the lifter assembly fit to the notches of the **s**. Move the lifter assembly toward the front and release from the hook. (See Fig.23 and 24)

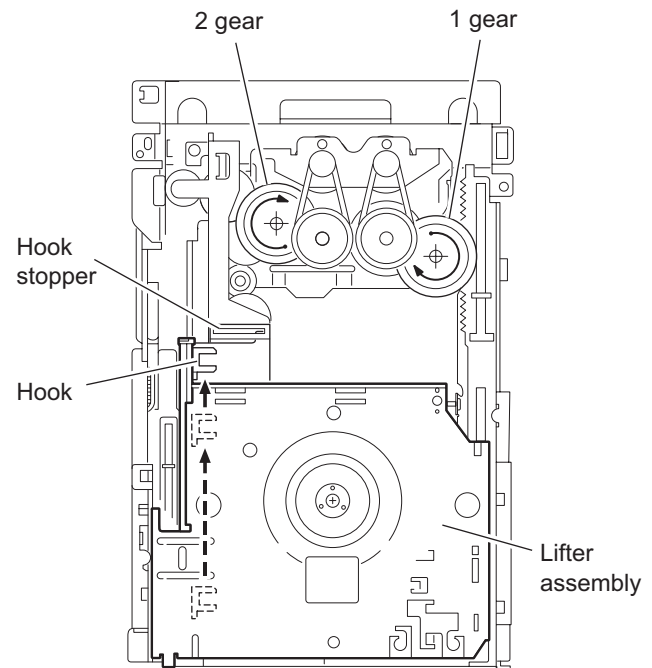


Fig.20

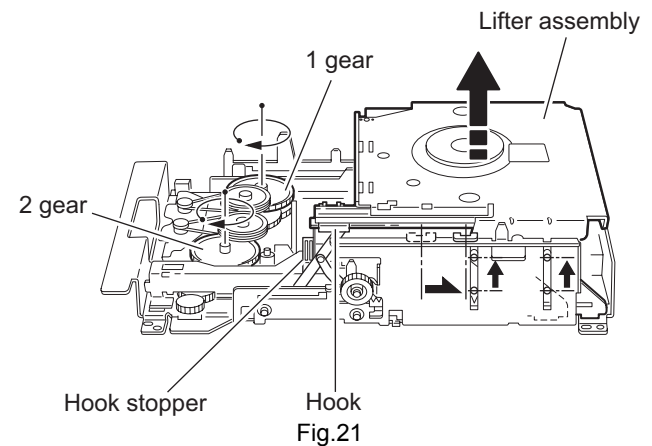


Fig.21

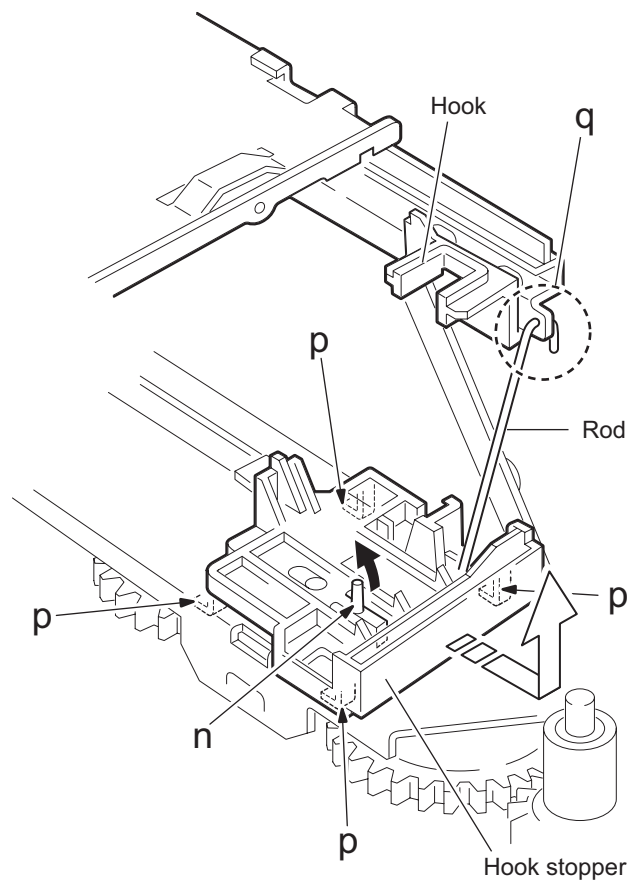


Fig.22

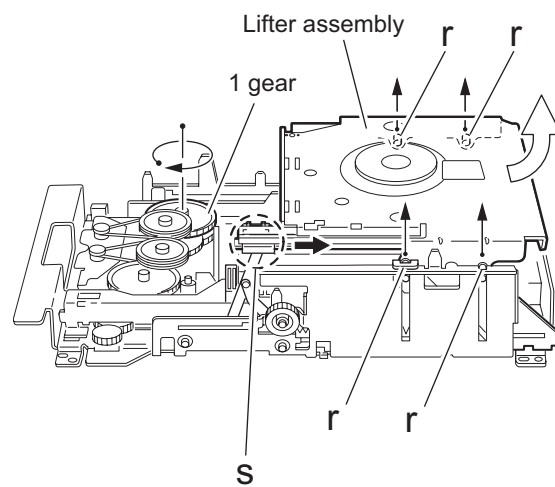


Fig.23

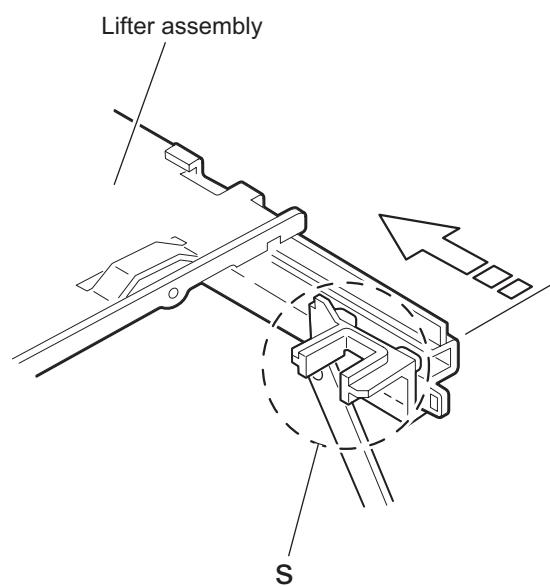


Fig.24

3.3.10 Removing the rack holder assembly / sensor assembly (See Fig.25 to 30)

Attention:

If the slide gear of the body places at joint **u** of the rack holder assembly, turn the 1 gear counterclockwise to move the slide gear toward the front. Remove the rack holder assembly.

- (1) Remove the three screws **N** attaching the rack holder assembly. Release joint **u** from the notch.

Caution:

When reattaching the rack holder assembly, do not nip the wire **v** extending from the sensor assembly.

- (2) Move the sensor assembly in the direction of the arrow to release from slot at joint **y**.
- (3) Remove the spring attached to the bottom of the sensor assembly from the boss **z** on the sensor slider.
- (4) Remove the screw **P** and **Q** attaching the sensor board and SV resister respectively. If necessary, unsolder the sensor board.


Caution:

When reattaching the SV resister, attach the sensor slider to the sensor bracket and fit the lever on the bottom of the SC resister into slot **a'** of the sensor slider.

Caution:

When reattaching the rack holder assembly, turn the 1 gear clockwise to move the slide gear and slide lever inside the body rearward.

- Let the wire extending from the sensor assembly through notch **x** to the bottom of the body.
- Fix pin **c'** of the slide lever into hole **b'** on the sensor slider on the bottom of the sensor assembly while attaching the spring to the boss **z** of the sensor slider.
- Engage joint **y** of the sensor assembly to the notch of the body.

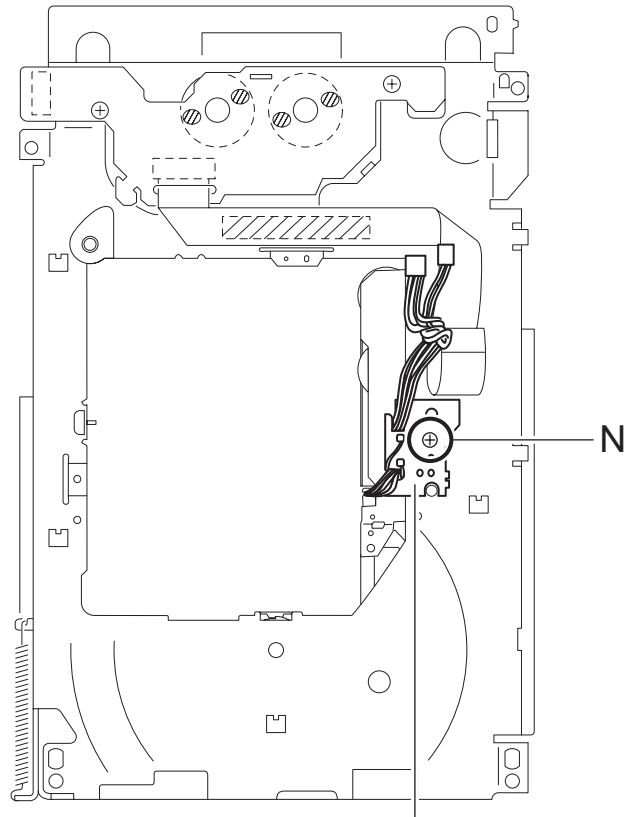

Switch board

Fig.25





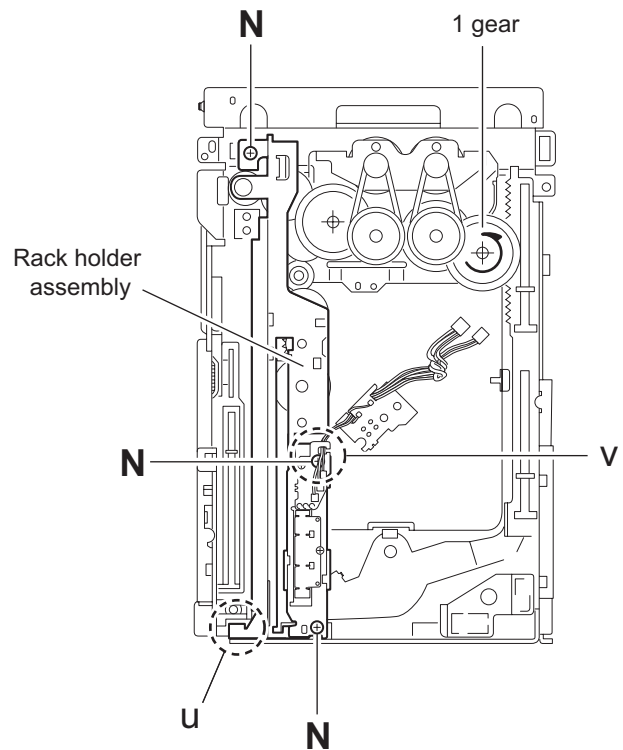


Fig.26

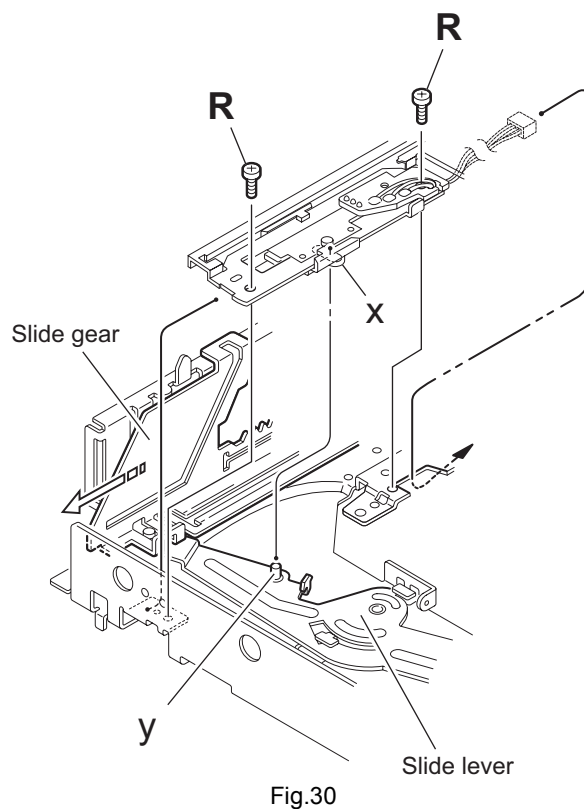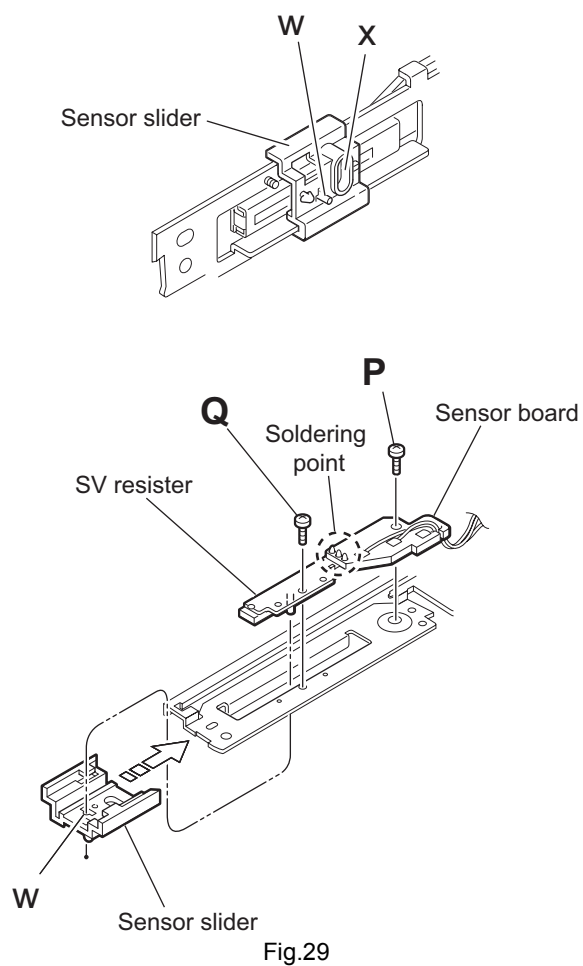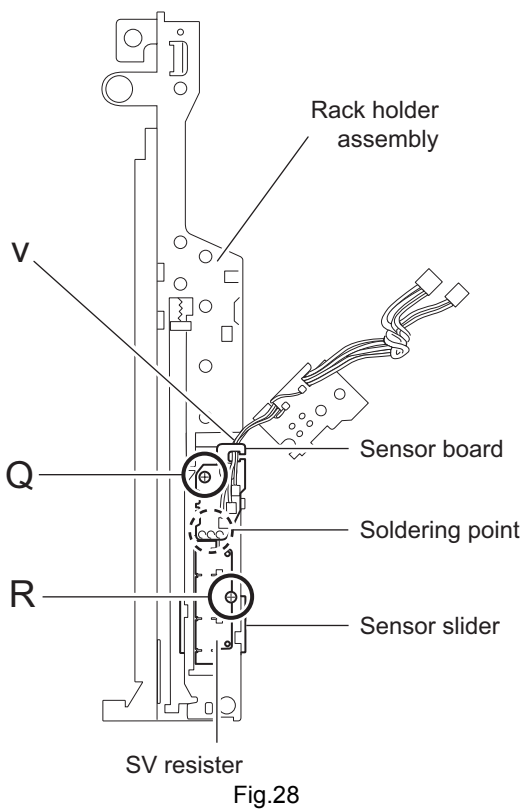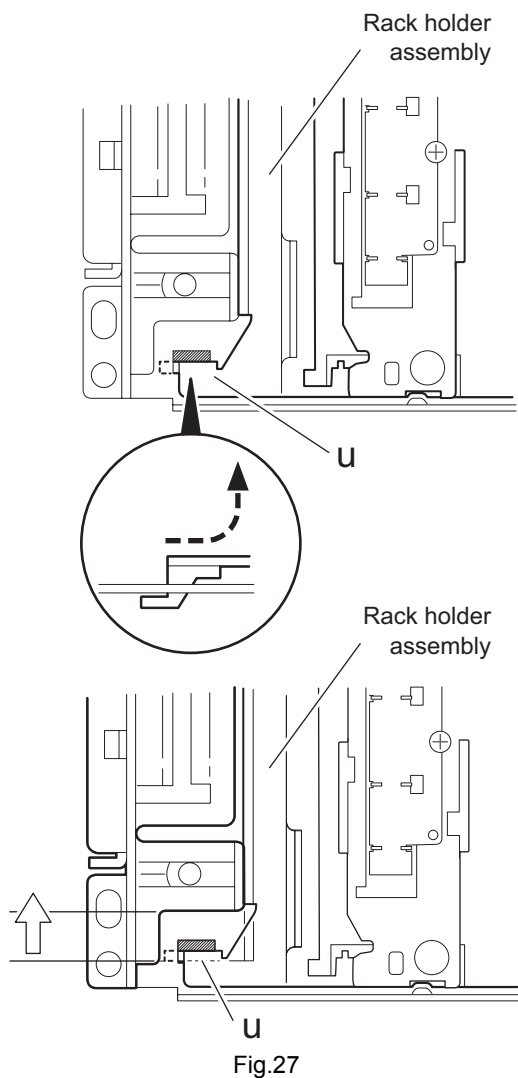

3.3.11 Removing the motor (See Fig.31 and 32)

Attention:

You need not to remove the tray assembly, and in such case, move it.

- (1) Remove the two belts on top of the body.
- (2) Remove the two screws **S** attaching the motor.
- (3) Remove the motor from the bottom of the body.

Attention:

When removing the motor board with the motor, you need not to unsolder four solder parts.

Caution:

When reattaching the motor, turn the side where the label should be put to the front side.

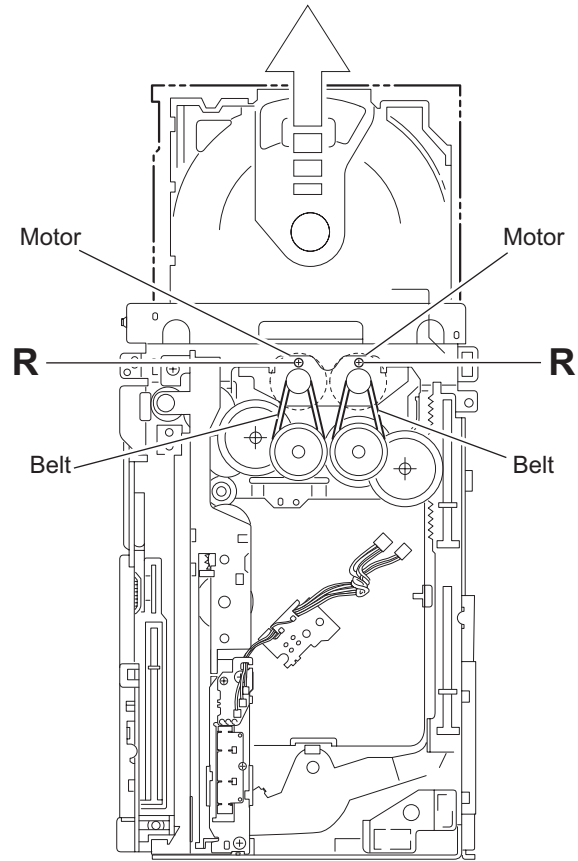


Fig.31

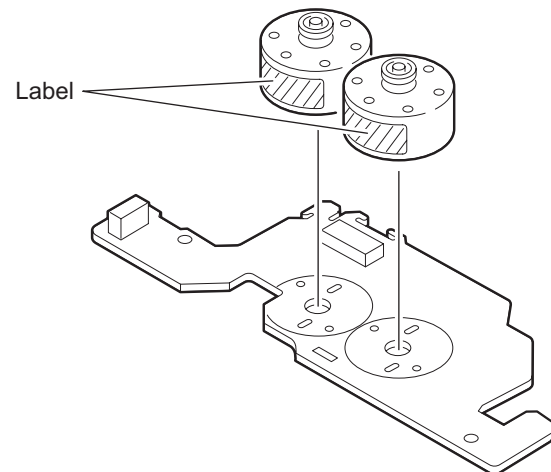


Fig.32

3.3.12 Taking out the disc in play mode (See Fig.33 to 36)

Attention:

Refer to "Removing the tray assembly".

- (1) Remove the top cover upward.
- (2) Unlock the tray assembly and draw out the tray assembly toward the front.
- (3) From top of the body, turn the 1 gear clockwise to move the lifter assembly upward.
- (4) From top of the body, turn 2 gear clockwise to move the sub tray remaining inside the lifter assembly toward the front, then pull out.
- (5) Take out the disc on the sub tray.
- (6) After clearing away the disc, insert the sub tray into the main tray.

Caution:

When reattaching the sub tray, move the tray stopper on the bottom of the tray in the direction of the arrow to lock the sub tray certainly.

- (7) Push the tray assembly toward to body and reattach.

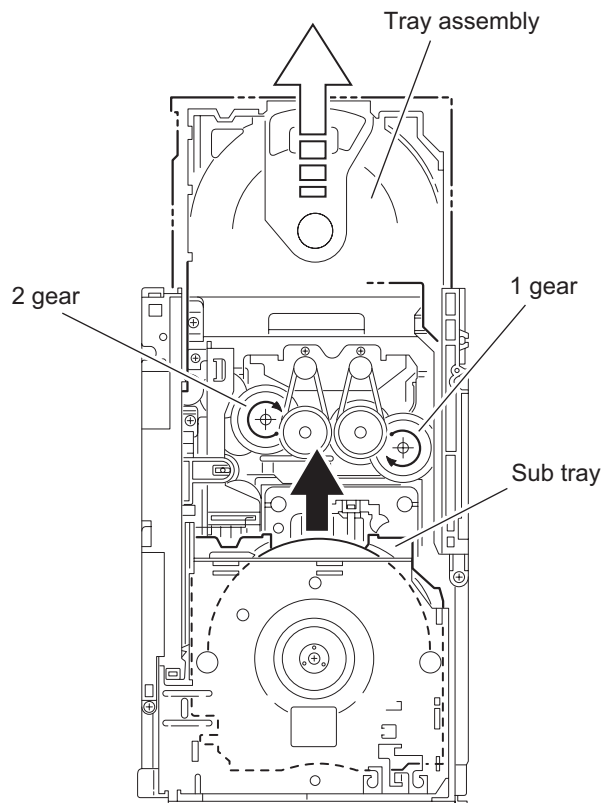


Fig.33

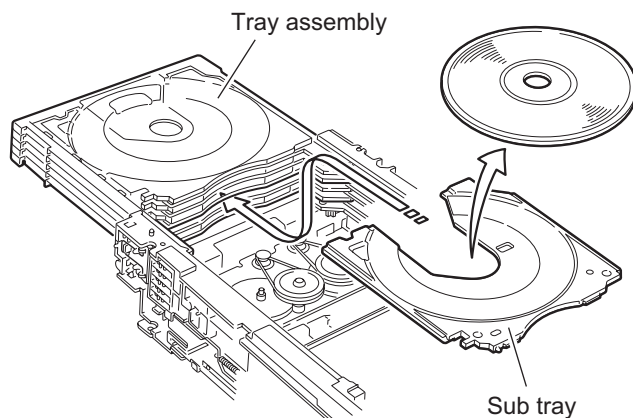


Fig.34

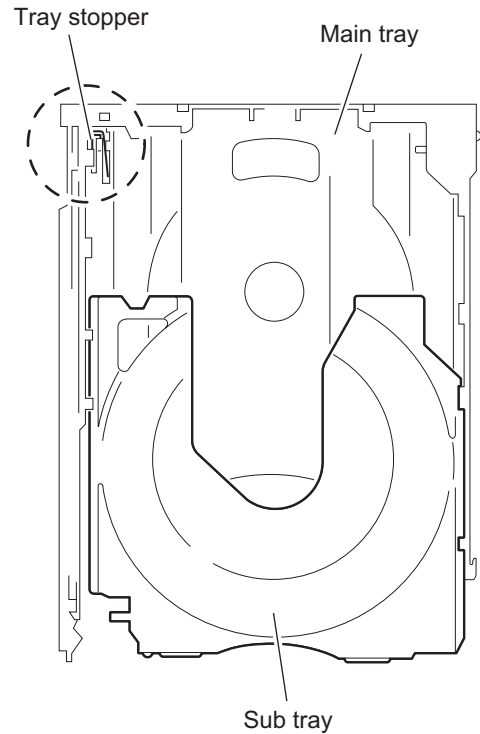


Fig.35

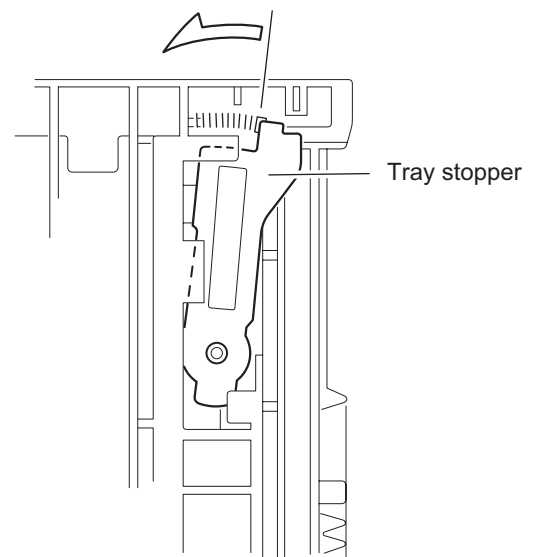


Fig.36

SECTION 4 ADJUSTMENT

4.1 ATTENTION IN SERVICE OF DVD SECTION

- (1) When pickup, Flash ROM ,DVD module board were changed, initialize EEPROM by all means.
- (2) When full initialization was excuted, excute learning with a DVD test disc by all means.
 Test disc : VT-501, VT-502
 Learning method : It is adjusted automatically by normal playback of a DVD disc.

4.2 TEST MODE

4.2.1 OUTLINE

To the set which is using the DVD module, in order to perform common correspondence in production, TEST mode is prepared. Table 1 is corresponded in TEST mode.

MODE	CONTENTS
The destination, a region, study state check mode	Indication the distination code, region number and study state fo DVD micon.
NORMAL initialize, FULL initialize	Mode of DVD micon initialize. Initialize has NORMAL initialize and FULL initialize. NORMAL initialize : Initialize the value of user setting item, like a indication contents of SETUP OSD. FULL initialize : Plus the contents of study which are carrying out the memory by FRONT END for lead shortening are initialized for NORMAL initialize contents.
Device key write (CPPM, CPRM)	For device key writing mode. Device key have CPPM(DVD Audio) and CPRM(VR).
Device key check sum indication mode	Indication the wrote device key check sum. Indication this value, it can check the device key was wrote or not.
Micon version indication mode	Indication System micon, DVD micon, other ROM version. With a set, correspondence and the contents of correspondence shall be individual, and shall be decided.
FL all on mode	Mode of FL (LCD) all on. With a set, correspondence and the contents of correspondence shall be individual, and shall be decided.
FRONT END check mode	Mode of relation of FRONT END.


Table 1. Contents corresponding to TEST mode.

4.2.2 SET OPERATE

TEST mode performs correspondence by operation specially so that a user cannot enter.

- * TEST MODE start should be press PLAY key & POWER key of main unit together and keep condition, connect AC.
- * After set up TEST MODE, mode select by MENU key.

The changes to the key in TEST mode are shown in Fig. 1.

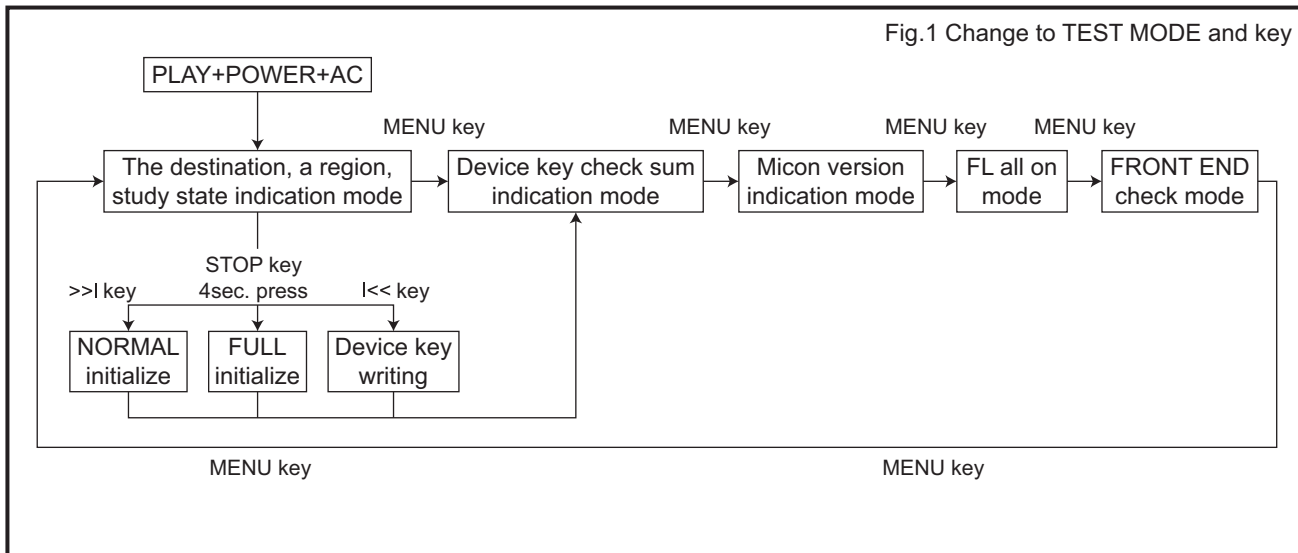

(*1) : Shift from destination, region and study state indication mode to NORMAL initialize, FULL initialize and device writing mode should only can main unit key.

4.2.3 PROCESS

Below, FL (LCD) display to operation and communication with a DVD back end micon are shown.

* Since the number of beams changes with sets about FL (LCD) display, also set differing from the contents of specification to O.K.

* Since there are arrangement and a relation of existence with a set also about a key, also set differing from the contents of specification to O.K.

STEP	OPERATION	MOVEMENT	FL (LCD) indication													REMARKS
			1	2	3	4	5	6	7	8	9	10	11	12	13	
1	Release AC, press PLAY & POWER key together of main unit.															
2	Keep STEP 1, connect AC.	The destination, a region, study state indication mode. Indication the destination by TEST mode power on.	T		J	C	#		*	*						Version indication Version code is next; 0x01:J.C 0x02:1U 0x03:D 0x04:E 0x05:2U 0x06:3U 0x07:UB 0x08:UT 0x09:4U 0x0a:UY 0x0b:EE 0x0c:UF Region indication (#part) Learning state and initialize state from backend are indicate displayed in 7th and 8th column of FL indication. It is blank indication in 0xFF. Learning state (7th column) 0x07:BCA CHECK OK incomplete DVD learning incomplete CD learning incomplete (indication 7) 0x06:BCA CHECK OK incomplete DVD learning complete CD learning incomplete (indication 6) 0x05:BCA CHECK OK incomplete DVD learning incomplete CD learning complete (indication 5) 0x04:BCA CHECK OK incomplete DVD learning complete CD learning complete (indication 4) 0x03:BCA CHECK OK complete DVD learning incomplete CD learning incomplete (indication 3) 0x02:BCA CHECK OK complete DVD learning complete CD learning incomplete (indication 2) 0x01:BCA CHECK OK complete DVD learning incomplete CD learning complete (indication 1) 0x00:BCA CHECK OK complete DVD learning complete CD learning complete (indication 0) (Result of BCA READ CHECK becomes only BCA READ OK with completion.) Initial state (the 8th column) 0x03:FULL initialization end (indicate 3) 0x00:NORML initialization end (indicate 0) 0xFF:Initialization incomplete (Blank indication)
①	Press >>I key of main unit. (NORMAL initialize)		T		J	C	#		*	*						
②	Long press(4sec) STOP key of main unit. (FULL initialize)		T		J	C	#		*	*						
③	Press << key of main unit.	Mode to device key writing mode	D		K	E	Y									Mode to device key writing mode. AVC protocol change to high speed mode
3	Press MENU key of remocon.	Device key check sum indication mode. Indication check sum of device key for FL. (4byte)	①	②	③	④	⑤	⑥	⑦	⑧						AVC protocol change from high speed mode to normal speed mode. (Release from test mode, it should change to normal speed mode.) CHECK SUM is displayed on FL. CPPM: ① ② ③ ④ CPRM: ⑤ ⑥ ⑦ ⑧
①	Press MENU key of remocon.	Indication the micon version and Backend version for FL.	a	b	b		c	c	c	c						bb:Syscon Version a:Syscom Romcorr Version cccc:DVD Backend Version d:Mechacon Romcorr Version ee:Mechacon Version
②	Press MENU key of remocon.	Indication the mecha micon version for FL.	d	e	e											
5	Press MENU key of remocon.	All on the FL and LED.														
6	Press MENU key of remocon.	Indication the FRONT END check mode for FL.	C	H	E	C	K									
①	Press 1 at 10 key of remocon.	Disc startup and through playback (Playback starts from the start position).	C	H	E	C	K									
②	Press 4 at 10 key of remocon.	CD_LD on & Laser current indication.	*	*	*	*	*	*	*	*						Upper:Laser current value (Backup value, Real measured value) Lower:0
③	Press 5 at 10 key of remocon.	DVD_LD on & Laser current indication.	*	*	*	*	*	*	*	*						Upper:Laser current value (Backup value, Real measured value) Lower:0
④	Press 6 at 10 key of remocon.	DVD_SL x 1 jitter measurement mode.	*	*	*	*	*	*	*	*						Upper:Laser current value (Backup value, Real measured value) Lower:0

STEP	OPERATION	MOVEMENT	FL (LCD) indication													REMARKS
			1	2	3	4	5	6	7	8	9	10	11	12	13	
7	⑤ Press 10 at 10 key of remocon.	DVD-DL (parallel, opposite), Serch & jitter measurement of the specified position of DVD-SL.	*	*	*	*	*	*	*	*	*					Upper:0x00-0x06 (Measured position with VT-501) Lower:Jitter value
	⑥ Press STOP key of main unit/ remocon.	Disc stop, LD-OFF.	C	H	E	C	K									
	⑦ Press OPEN/CLOSE key of main unit/remocon.	Tray open/close.														
	⑧ Press PLAY key of main unit/ remocon.	Disc playback.	*	*	*	*	*	*	*	*	*					Upper:Laser current value (Backup value, Real measured value) Lower:Jitter value
7	Press MENU key of remocon.	Return to STEP2.														
	Press POWER key of main unit.	Releasr the TEST MODE.														When this key is pushed any STEP, the test mode is canceled.

*1 Mode toggle by press MENU key.

*2 STEP2-3 and STEP3 are only for DVD-AUDIO or VR correspondence model.

4.3 DVD special mode

4.3.1 Special mode

Mode name	Operation	Function
DVD up grade	Load up grade disc	Do the update the DVD firmware.
ROM CORR (System micon)	Load ROM CORR disc	Do the repair of system micon problem. Model number of ROM CORR is A300
ROM CORR (Mecha micon)	Load ROM CORR disc	Do the repair of mecha micon problem. Invalid the inside of TEST mode.

4.3.2 DVD upgrade

Processing	FL indication	Display (OSD) indication	Remarks
TOC READ	"READING"	NOW READING	TOC reading
DATA READ	"UPGRADE"	VERSION UP DISC PROGRAM&DESTINATION MODE CURRENT VERSION **** NEW VERSION **** READING.. SECTOR ****	Disc data reading Indicate firm current versin, new version and reminder sector quantity. Only [POWER] [OPEN/CLOSE] key of a main unit is validated.
WRITING	"_OPEN_"	VERSION UP DISC PROGRAM&DESTINATION MODE CURRENT VERSION **** NEW VERSION **** WRITING..	Writing the data to flash rom. Input a main unit and all the key of remote control are forbidden.
END	"_OPEN_"	OPEN	Upgrade completed. Prohibition of a key input is canceled as initialization end status.

4.3.3 ROM correction (System micon)

Processing	FL indication	Display (OSD) indication	Remarks
TOC READ	"READING"	NOW READING	TOC reading
DATA READ	"ROM_CORR"	VERSION UP DISC SYSCON UPG MODE CURRENT VERSION **** READING.. SECTOR 1	Disc data reading Indicate firm current versin. Only [POWER] [OPEN/CLOSE] key of a main unit is validated.
WRITING	"ROM_CORR"	VERSION UP DISC SYSCON UPG MODE CURRENT VERSION **** WRITING..	Writing the data to EEPROM. Input a main unit and all the key of remote control are forbidden.
END	"COMPLETE"	VERSION UP DISC SYSCON UP MODE CURRENT VERSION **** WRITING..	ROM CORRECTION completed. Prohibition of a key input is canceled as ROM CORR completed status.

*ROM CORR data confirm

The following processings are performed in order to prevent that fault occurs, when a new micon / the old micon / ROM collection is intermingled.

The data (ID) which a micon should make a judgment standard is stored in a [E2PROM] start address [2 bytes].

A data format presupposes that it is free (the version of the data which can be differentiated etc. is desirable).

When the [ROM coll data area] of [E2PROM] is read at the time of a reset start and data exists, it processes by judging whether it is by the [ROM coll] data which should be applied.

In the case of the data which should be applied [good] : It progresses to the following step by un-processing.

In the case of the data which should be applied and which does not come out, it is [no] : All the [ROM coll data area] of [E2PROM] is cleared (FF).

4.3.4 ROM correction (Mecha micon)

Processing	FL indication	Display (OSD) indication	Remarks
TOC READ	"READING_"	NOW READING	TOC reading
DATA READ	"READING_" "READING_"	VERSION UP DISC SYSCON UPG MODE CURRENT VERSION **** READING.. SECTOR 1	Disc data reading Indicate firm current versin. Only [POWER] [OPEN/CLOSE] key of a main unit is validated.
WRITING	"REDING_"	VERSION UP DISC SYSCON UPG MODE CURRENT VERSION **** WRITING..	Writing the data to EEPROM. Input a main unit and all the key of remote control are forbidden.
END	"MECH_OK_"	VERSION UP DISC SYSCON UP MODE CURRENT VERSION **** WRITING..	ROM CORRECTION completed. Prohibition of a key input is canceled as without disc type is UPGRADE status.

4.4 Key special mode

Mode name	Operation	Function
Tuner 9k/10k select (U*version)	Press STOP key & PLAY key together at TUNER AM then 9kHz step.	9kHz/10kHz step select of TUNER AM band. Indication "9k STEP" , "10k STEP"
	Press STOP key & PAUSE key together at TUNER AM then 10kHz step.	
TRAY LOCK	Press STOP key & EJECT1 key together at P.OFF.	Do the TRAY LOCK mode select. Temporaly P.ON operation, select "LOCKED", "UNLOCKED". (Not done P.ON operation). Transience (2sec.) indication end, and then return to P.OFF mode. When press the EJECT key at LOCK mode, at P.OFF condition tempraly P.ON operation and then transience (2sec.) indication "LOCKED". At P.ON condition, transience (2sec.) indication "LOCKED".
DVD TEST MODE	At AC off line condition, press PLAY+POWER together and keep condition, connect AC.	"Operation to TEST mode to on of DVD backend. Operation of internal TEST MODE is refer the TEST mode."

4.5 Remocon special mode

Mode name	Operation	Function
COLD START	2-times input at P.OFF.	"Fix by 2 time input, operation temporaly P.ON and then transience(3sec.) indication "COLD SET". Indication end, done the P.OFF mode. AC to off line, operation the COLD START.B330 : remote controller press POWER + STOP + 0 key together."
FL all on Preset frequency writeing	Input at P.ON.	"Rewrite preset frequency, LED on chek(each 300ms), FL all on. LED on turn: STANDBY - ILLUMI - REMOCON<VOL+> - <VOL->Volume control of key input, keep high-speed mode until POWER OFF. B331 : Remocon POWER + STOP + 1 key together"
Version indication	Input at P.ON.	"Indication turn Syscon version - Unit version - Distination, Chip select by transience(5 sec.). Syscon version : "SC ## \$" (## : Sys version,\$: Sys ROM-corr) Unit version : "BE %%" "(%% : Unit version) Distination, Chip select 1 : "\$K%H%"(\$\$: sys distination, K% : KARAOKE H% : HDMI CS, S% : SOURCE CS % are each select status 0 or 1) B33E : Press remocon POWER + STOP + 10 key together."

SECTION 5 TROUBLESHOOTING

This service manual does not describe TROUBLESHOOTING.



Victor Company of Japan, Limited
Audio/Video Systems Category 10-1, 1chome, Ohwatari-machi, Maebashi-city, 371-8543, Japan

(No.MB511)



Printed in Japan
VPT

PARTS LIST

TH-C60J,TH-C60C
TH-C50J,TH-C50C
TH-C40J,TH-C40C


* All printed circuit boards and its assemblies are not available as service parts.


- Contents -

Exploded view of general assembly and parts list (Block No.M1)	3- 2
Speaker assembly and parts list(Subwoofer) (Block No.M2)	
(TH-C60J,TH-C60C,TH-C50J,TH-C50C)	3- 5
Speaker assembly and parts list(Subwoofer) (Block No.M3)	
(TH-C40J,TH-C40C)	3- 7
DVD mechanism assembly and parts list (Block No.MJ)	3- 9
DVD changer mechanism assembly and parts list (Block No.MK)	3-11
Electrical parts list (Block No.01~05)	3-13
Packing materials and accessories parts list (Block No.M4)(TH-C60J,TH-C60C)	3-24
Packing materials and accessories parts list (Block No.M5)(TH-C50J,TH-C50C)	3-26
Packing materials and accessories parts list (Block No.M6)(TH-C40J,TH-C40C)	3-28

Exploded view of general assembly and parts list

Block No. M 1 M M

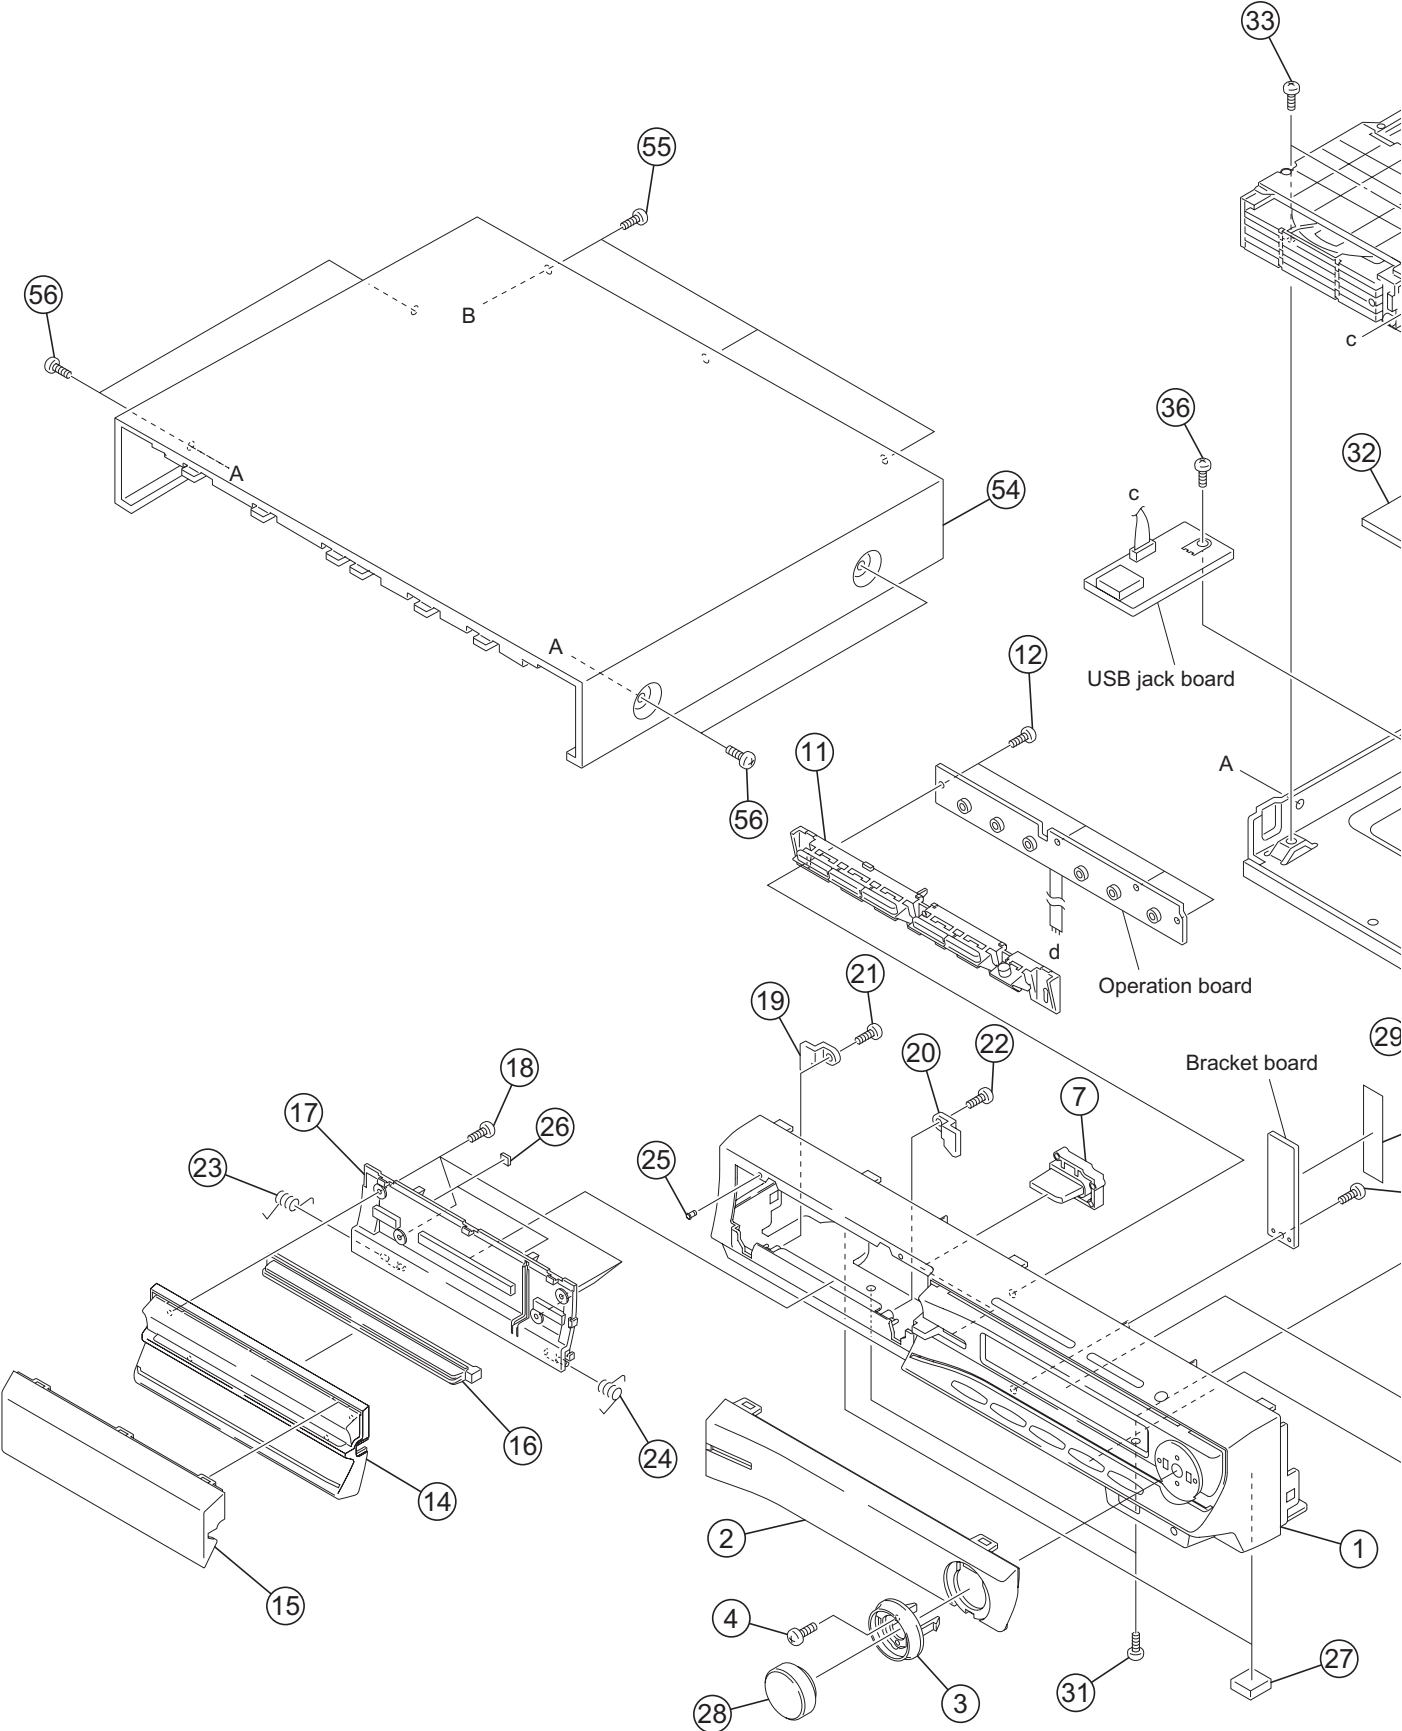

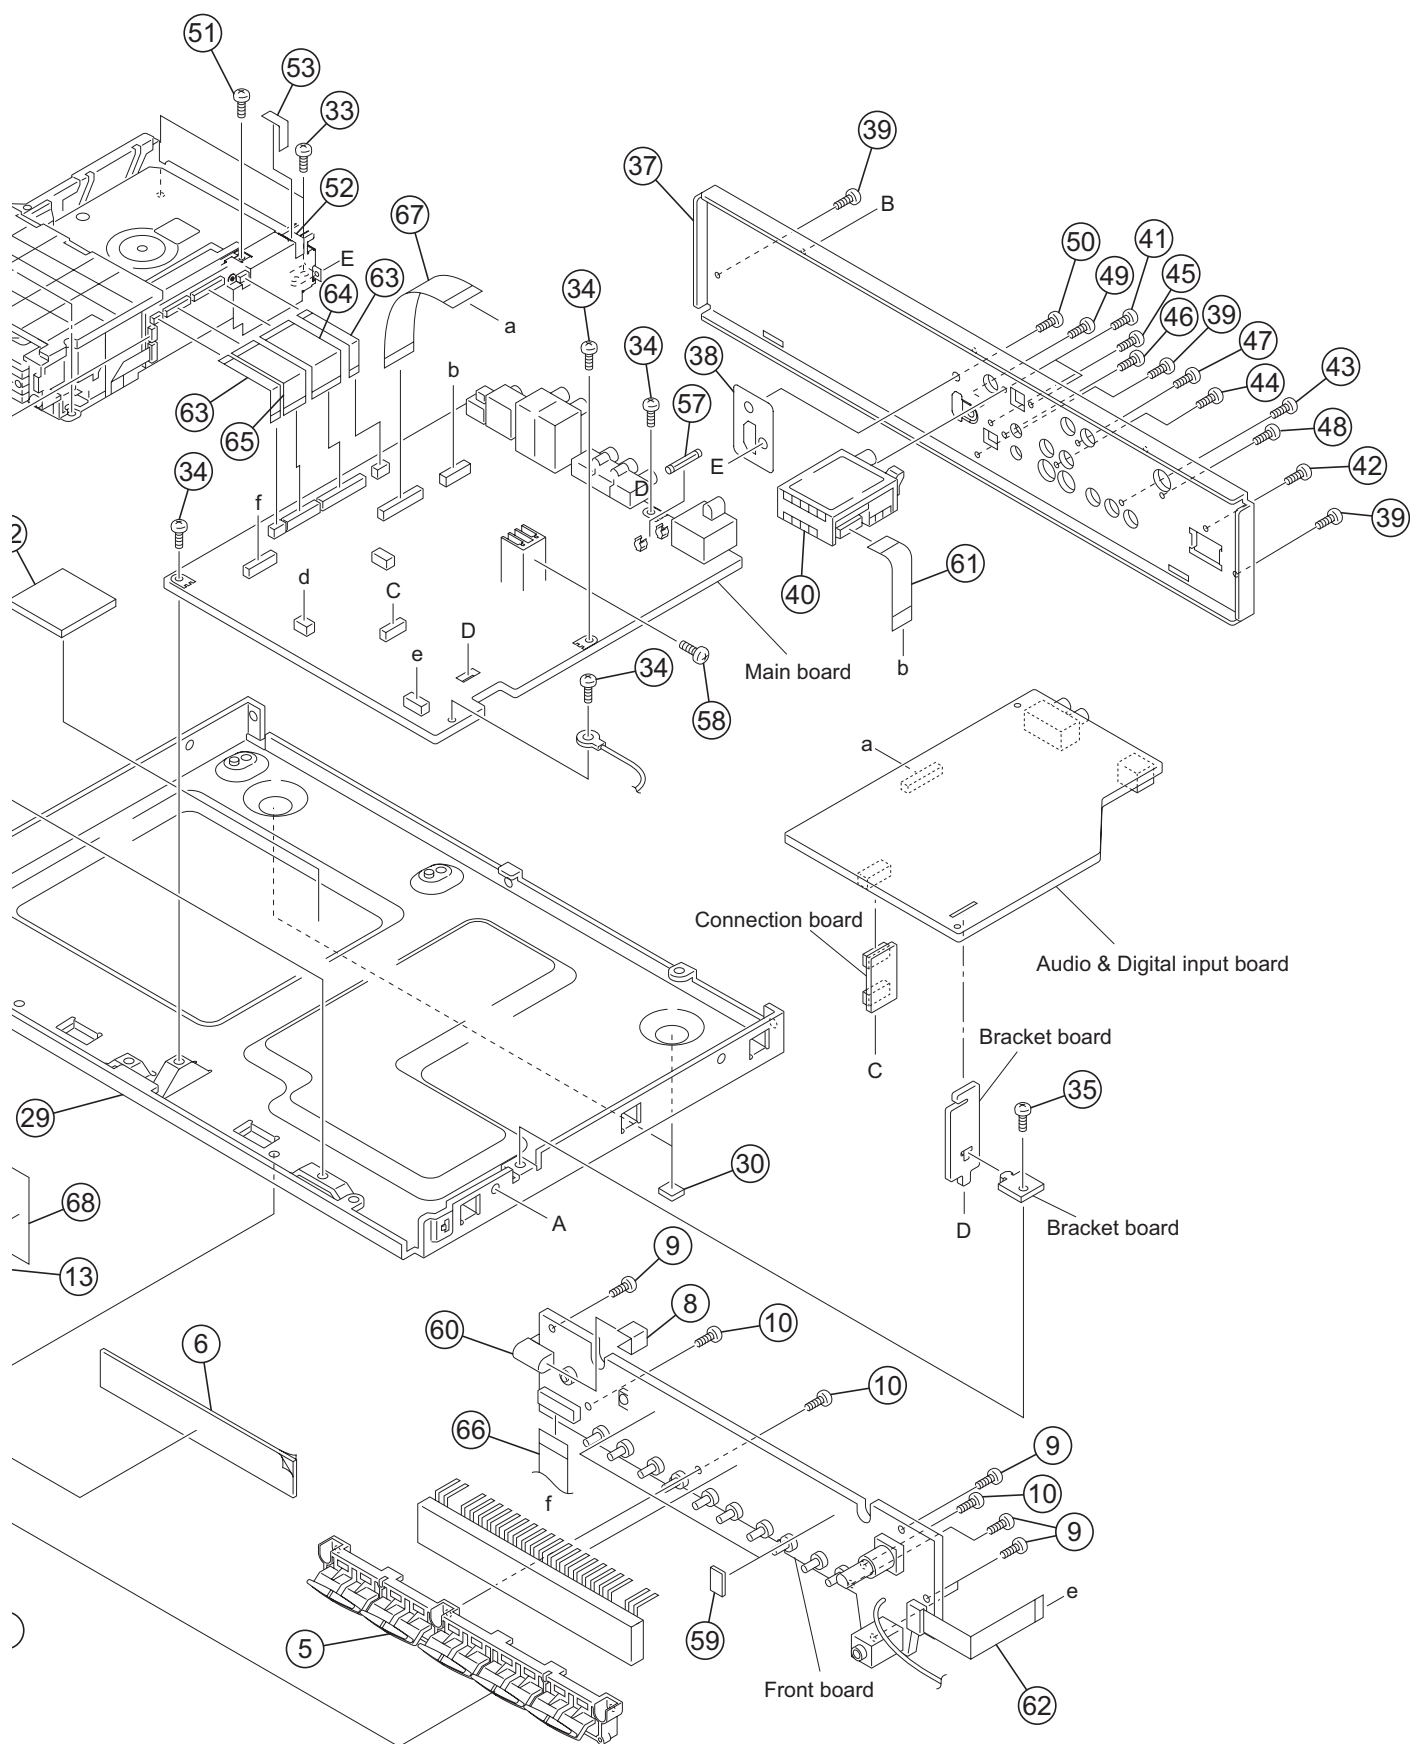

General Assembly

Block No. [M][1][M][M]


Symbol No.	Part No.	Part Name	Description	Local
1	LV11209-001A	FRONT PANEL		
2	LV22243-001A	FRONT LENS		
3	LV34588-001A	VOL RING		
4	QYSDSF2608ZA	TAP SCREW	M2.6 x 8mm	
5	LV22242-001A	BUTTON(DISC)		C60J,C60C,C50J,C50C
5	LV22242-002A	BUTTON(DISC)		C40J,C40C
6	LV42851-006A	FL SCREEN		
7	LV36581-001A	POWER BTN ASSY		
8	LV30227-045A	SPACER		
9	QYSBSF2610ZA	TAP SCREW	M2.6 x 10mm(x5)	
10	QYSBSF2610ZA	TAP SCREW	M2.6 x 10mm(x3)	
11	LV22244-001A	BUTTON(TOP)		
12	QYSBSF2610ZA	TAP SCREW	M2.6 x 10mm(x4)	
13	QYSBSF2610ZA	TAP SCREW	M2.6 x 10mm	
14	LV22246-002A	DOOR COVER		
15	LV22247-020A	DOOR LENS		C60J,C60C
15	LV22247-015A	DOOR LENS		C50J,C50C
15	LV22247-019A	DOOR LENS		C40J,C40C
16	LV36583-001A	ILLUMI LENS		
17	LV22245-001A	DOOR BASE		
18	QYSDSF2608ZA	TAP SCREW	M2.6 x 8mm(x4)	
19	LV41694-201A	DOOR BKT(L)		
20	LV41695-201A	DOOR BKT(R)		
21	QYSDSF2608ZA	TAP SCREW	M2.6 x 8mm	
22	QYSDSF2608ZA	TAP SCREW	M2.6 x 8mm	
23	LV44491-002A	DOOR SPRING (L)		
24	LV44492-002A	DOOR SPRING (R)		
25	E69897-002	CUSHION		
26	LV30227-050A	SPACER	(x2)	
27	LV40301-002A	FELT SPACER	(x2)	
28	LV34594-002A	VOLUME KNOB		C60J,C60C,C50J,C50C
28	LV34594-001A	VOLUME KNOB		C40J,C40C
29	LV11210-001A	CHASSIS BASE		
30	LV40301-002A	FELT SPACER	(x2)	
31	QYSBST3006EA	TAP SCREW	M3 x 6mm(x2)	
32	LV30227-054A	SPACER		
33	QYSBST3006EA	TAP SCREW	M3 x 6mm(x4)	
34	QYSBST3006EA	TAP SCREW	M3 x 6mm(x4)	
35	QYSBST3006EA	TAP SCREW	M3 x 6mm	
36	QYSBST3006EA	TAP SCREW	M3 x 6mm	
37	LV22249-026A	REAR PANEL		C60J,C60C
37	LV22249-025A	REAR PANEL		C50J,C50C
37	LV22249-024A	REAR PANEL		C40J,C40C
38	LV44683-001A	SHIELD		
39	QYSBSGY3008EA	TAP SCREW	M3 x 8mm(x3)	
40	QAU0412-001	TUNER		
41	QYSBSGY3008EA	TAP SCREW	M3 x 8mm(x2)	
42	QYSBSGY3008EA	TAP SCREW	M3 x 8mm	
43	QYSBSGY3008EA	TAP SCREW	M3 x 8mm	
44	QYSBSGY3008EA	TAP SCREW	M3 x 8mm	
45	QYSBSGY3008EA	TAP SCREW	M3 x 8mm	
46	QYSBSGY3008EA	TAP SCREW	M3 x 8mm	
47	QYSBSGY3008EA	TAP SCREW	M3 x 8mm	
48	QYSBST3006EA	TAP SCREW	M3 x 6mm	
49	QYSBST3006EA	TAP SCREW	M3 x 6mm	
50	QYSBSGY3008EA	TAP SCREW	M3 x 8mm	
51	LV44339-001A	SPECIAL SCREW		
52	LV44697-001A	SHIELD		
53	LV30225-0M7A	SPACER		
54	LV22248-001A/S/	METAL COVER		
55	QYSBSGY3008EA	TAP SCREW	M3 x 8mm(x3)	
56	E406308-007	SPECIAL SCREW	(x4)	
57	QMFZ059-1R0-E	FUSE	F901 1A	
58	QYSBSE3008ZA	TAP SCREW	M3 x 8mm	
59	LV30227-051A	SPACER	(x2)	
60	LV36587-001A	LED HOLDER		
61	QUQQ12-1107CJ-E	FFC WIRE	11pin 7cm	
62	QUQQ12-0712CJ-E	FFC WIRE	7pin 12cm	
63	QUQV10-0507CJ-E	FFC WIRE	5pin 7cm(x2)	
64	QUQV10-2807CJ-E	FFC WIRE	28pin 7cm	
65	QUQV10-1807CJ-E	FFC WIRE	18pin 7cm	
66	QUQV10-1715CJ-E	FFC WIRE	17pin 15cm	
67	QUQV10-2507CJ-E	FFC WIRE	25pin 7cm	
68	LV30225-0M7A	SPACER		

Speaker assembly and parts list

(Subwoofer)

Block No. M 2 M M

(TH-C60J,TH-C60C,TH-C50J,TH-C50C)

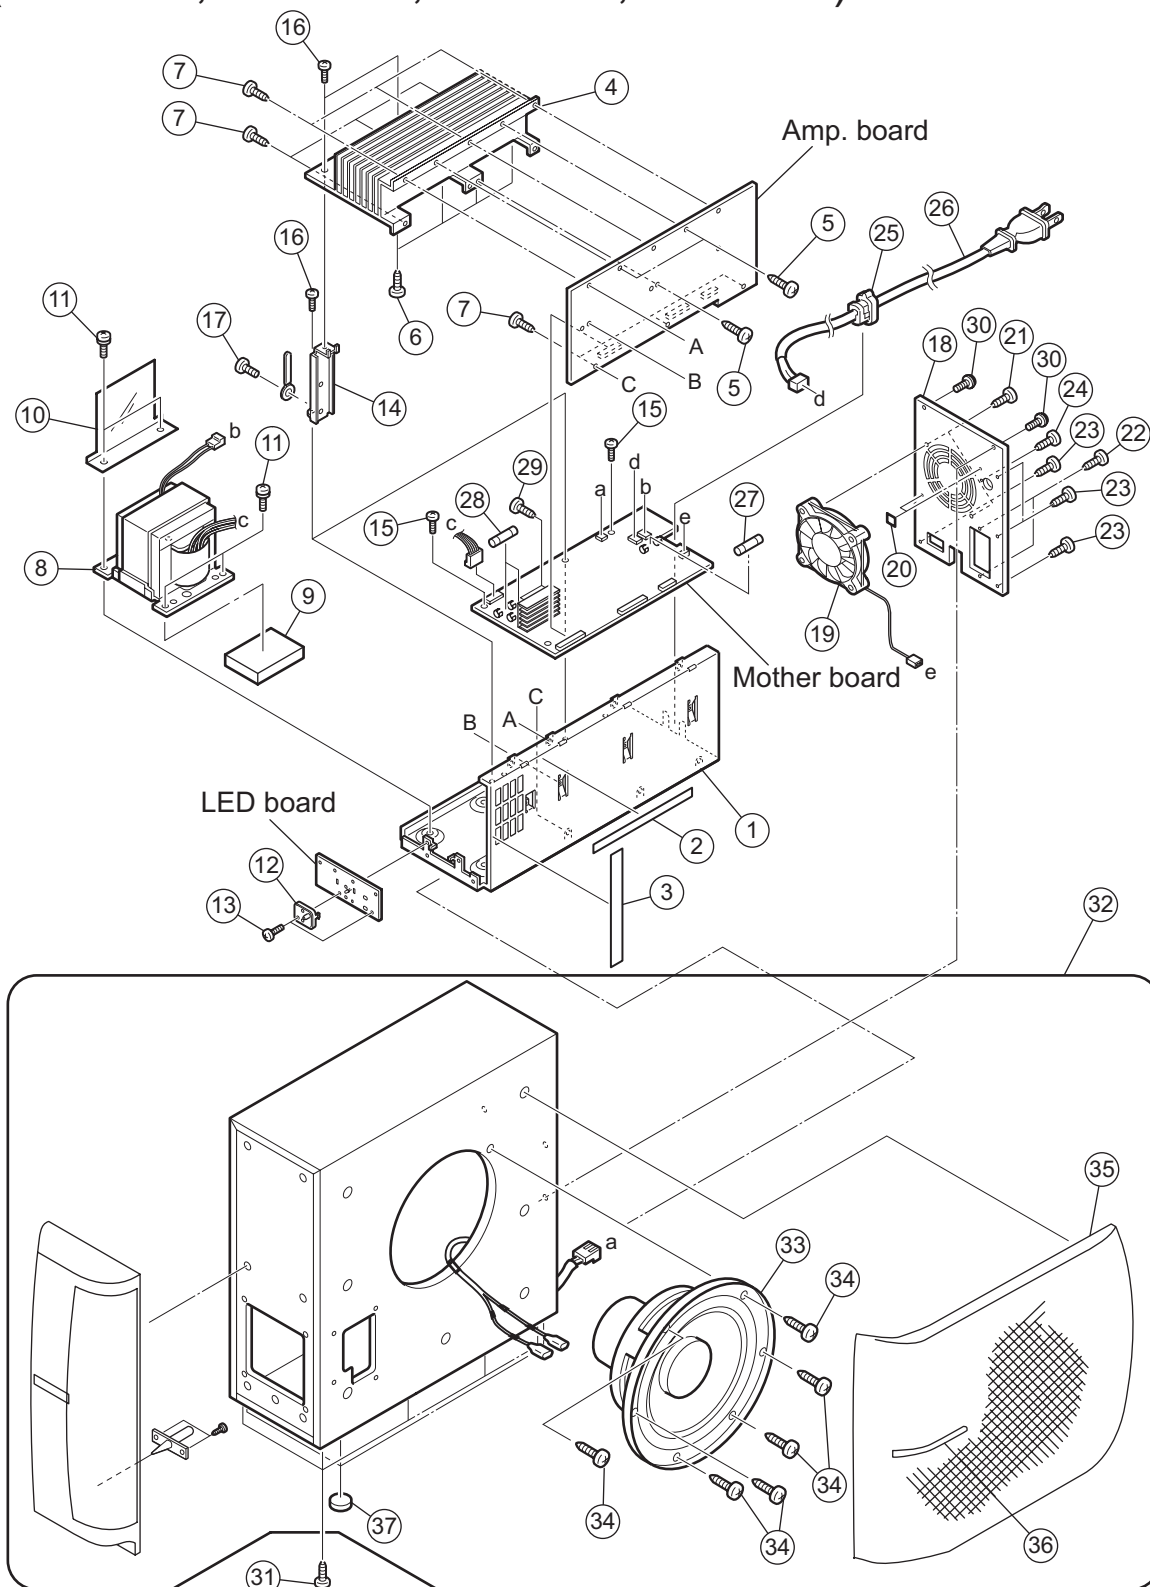

The parts without symbol number are not service.

Speaker(Subwoofer) (TH-C60J,TH-C60C,TH-C50J,TH-C50C)


Block No. [M][2][M][M]

△	Symbol No.	Part No.	Part Name	Description	Local
	1	LV10875-002A	CHASSIS BASE		
	2	LV30225-0T5A	SPACER		
	3	LV30225-0T6A	SPACER		
	4	LV10951-201A	HEAT SINK		
	5	QYSBSG3010EA	TAP SCREW	M3 x 10mm(x3)	
	6	QYSBSG3016EA	TAP SCREW	M3 x 16mm(x4)	
	7	QYSBSG3010EA	TAP SCREW	M3 x 10mm(x9)	
△	8	QQT0522-001	POWER TRANSF		
	9	LV30225-0Z7A	SPACER		
	10	LV44309-201A	BARRIER		
	11	QYSDSTL4008EA	TAP SCREW	M4 x 8mm(x4)	
	12	LV43692-002A	LED HOLDER		
	13	QYSBSG3010EA	TAP SCREW	M3 x 10mm(x2)	
	14	LV34712-001A	HEAT SINK BKT	(x2)	
	15	QYSBSG3010EA	TAP SCREW	M3 x 10mm(x2)	
	16	QYSBSG3010EA	TAP SCREW	M3 x 10mm(x4)	
	17	QYSBSG3006ZA	TAP SCREW	M3 x 6mm(x2)	
	18	LV21652-028A	REAR PANEL		
	19	QAR0377-001	COOLING FAN		
	20	LV30225-0D5A	SPACER	(x2)	
	21	QYSBSGY3008MA	TAP SCREW	M3 x 8mm(x2)	
	22	QYSBSGY3008MA	TAP SCREW	M3 x 8mm(x2)	
	23	QYSBSGY3008MA	TAP SCREW	M3 x 8mm(x4)	
	24	QYSBST3006EA	TAP SCREW	M3 x 6mm	
△	25	QZW0033-001	STRAIN RELIEF		
△	26	QMPD330-200-JD	POWER CORD(US/CA)	2m BLACK	
△	27	QMF51U1-8R0-J8	FUSE	F101 8A AC125V	
△	28	QMF51U1-100-J8	FUSE	F153 F154 10A AC125V(x2)	
	29	QYSPSPD3008ZA	SCREW	M3 x 8mm(x2)	
	30	QYSDSA4016MA	TAP SCREW	M4 x 16mm(x2)	
	31	QYSDST4014MA	TAP SCREW	M4 x 14mm(x8)	
	32	QAS0419-001	SPK WITH BOX		
	33	LE10016-069A	CONE SPK		
	34	7001541606	TAPPING SCREW	(x6)	
	35	LV11246-001A	SIDE PANEL ASSY		
	36	LV36781-001A	BADGE		
	37	9000007961	FOOT	(x4)	

(TH-C40J, TH-C40C)

Block No.

M	3	M	M
---	---	---	---

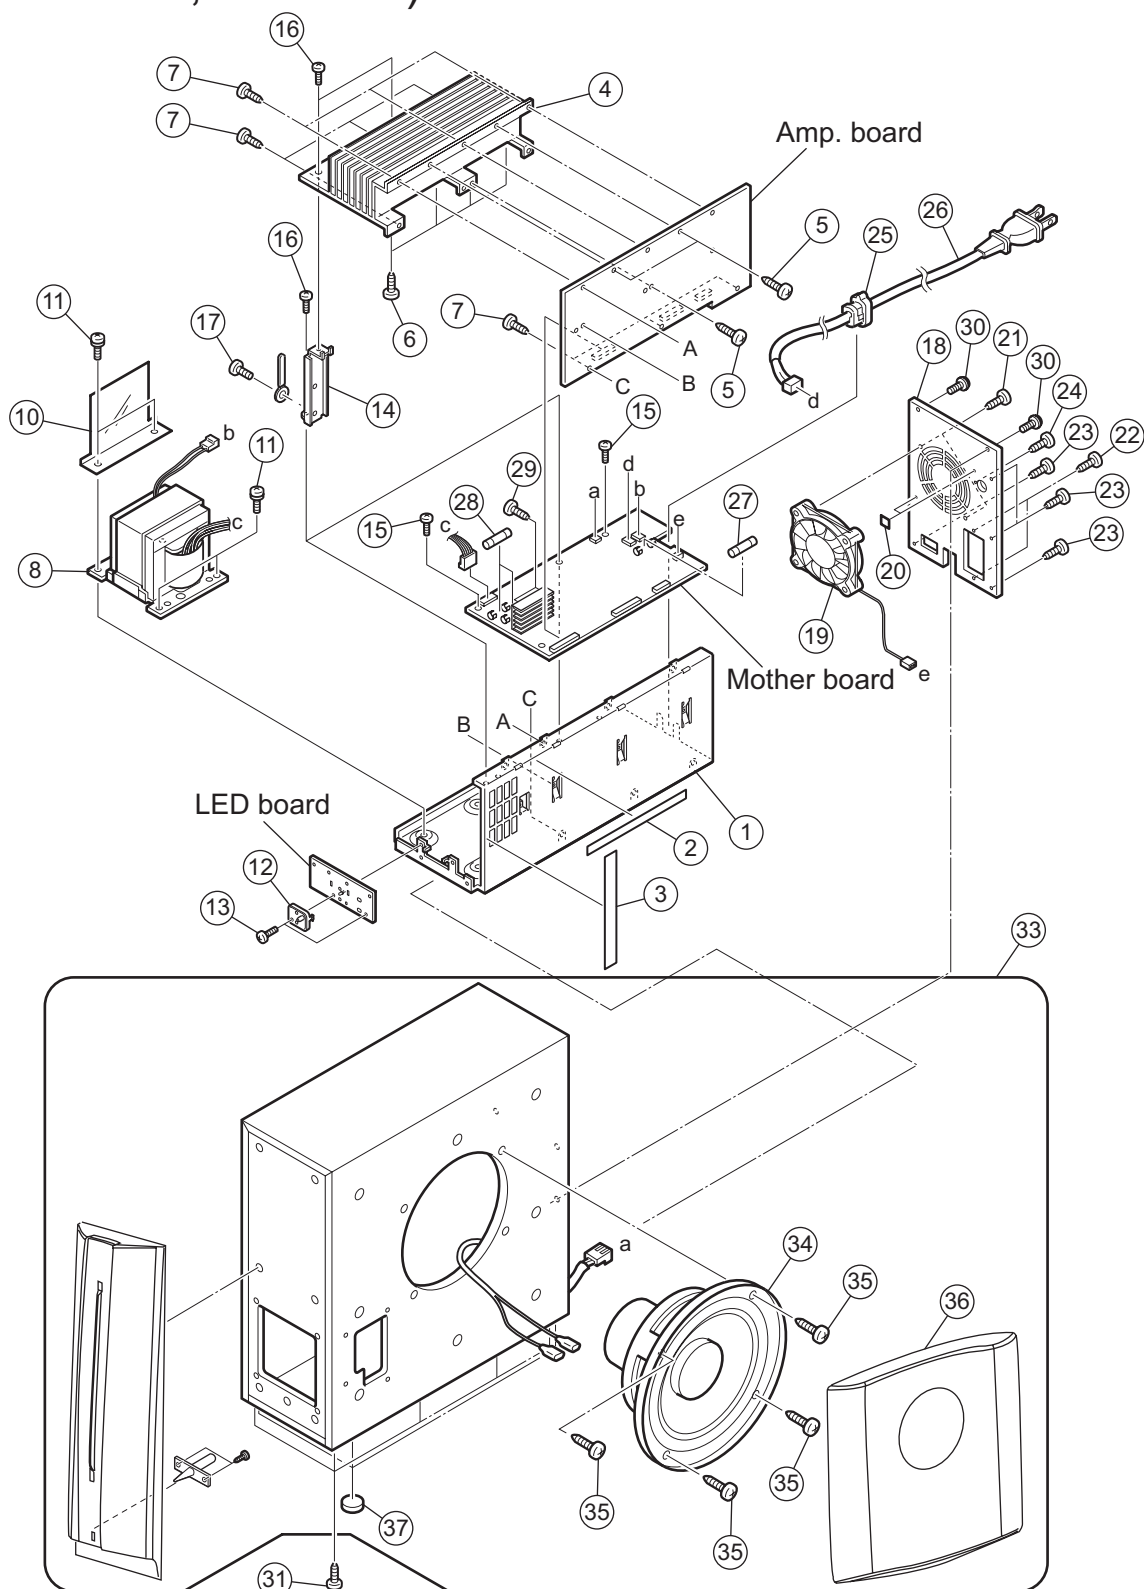

The parts without symbol number are not service.


Speaker(Subwoofer) (TH-C40J,TH-C40C)

Block No. [M][3][M][M]

△	Symbol No.	Part No.	Part Name	Description	Local
	1	LV10875-002A	CHASSIS BASE		
	2	LV30225-0T5A	SPACER		
	3	LV30225-0T6A	SPACER		
	4	LV10951-201A	HEAT SINK		
	5	QYSBSG3010EA	TAP SCREW	M3 x 10mm(x3)	
	6	QYSBSG3016EA	TAP SCREW	M3 x 16mm(x4)	
	7	QYSBSG3010EA	TAP SCREW	M3 x 10mm(x9)	
△	8	QQT0482-004	POWER TRANSF		
	10	LV44309-201A	BARRIER		
	11	QYSBSTL4008EA	TAP SCREW	M4 x 8mm(x4)	
	12	LV43692-002A	LED HOLDER		
	13	QYSBSG3010EA	TAP SCREW	M3 x 10mm(x2)	
	14	LV34712-001A	HEAT SINK BKT	(x2)	
	15	QYSBSG3010EA	TAP SCREW	M3 x 10mm(x2)	
	16	QYSBSG3010EA	TAP SCREW	M3 x 10mm(x4)	
	17	QYSBSG3006ZA	TAP SCREW	M3 x 6mm(x2)	
	18	LV21652-027A	REAR PANEL		
	19	QAR0377-001	COOLING FAN		
	20	LV30225-0D5A	SPACER	(x2)	
	21	QYSBSGY3008MA	TAP SCREW	M3 x 8mm(x2)	
	22	QYSBSGY3008MA	TAP SCREW	M3 x 8mm(x2)	
	23	QYSBSGY3008MA	TAP SCREW	M3 x 8mm(x4)	
	24	QYSBST3006EA	TAP SCREW	M3 x 6mm	
△	25	QZW0033-001	STRAIN RELIEF		
△	26	QMPD330-200-JD	POWER CORD(US/CA)	2m BLACK	
△	27	QMF51U1-8R0-J8	FUSE	F101 8A AC125V	
△	28	QMF51U1-100-J8	FUSE	F153 F154 10A AC125V(x2)	
	29	QYSPSPD3008ZA	SCREW	M3 x 8mm(x2)	
	30	QYSDSA4016MA	TAP SCREW	M4 x 16mm(x2)	
	31	QYSDST4014MA	TAP SCREW	M4 x 14mm(x8)	
	33	QAS0418-001	SPK WITH BOX		
	34	LE10016-063A	CONE SPK		
	35	7001541606	TAPPING SCREW	(x4)	
	36	9916013701	SIDE PANEL ASSY		
	37	9000007961	FOOT	(x4)	

DVD mechanism assembly and parts list

Block No. M J M M

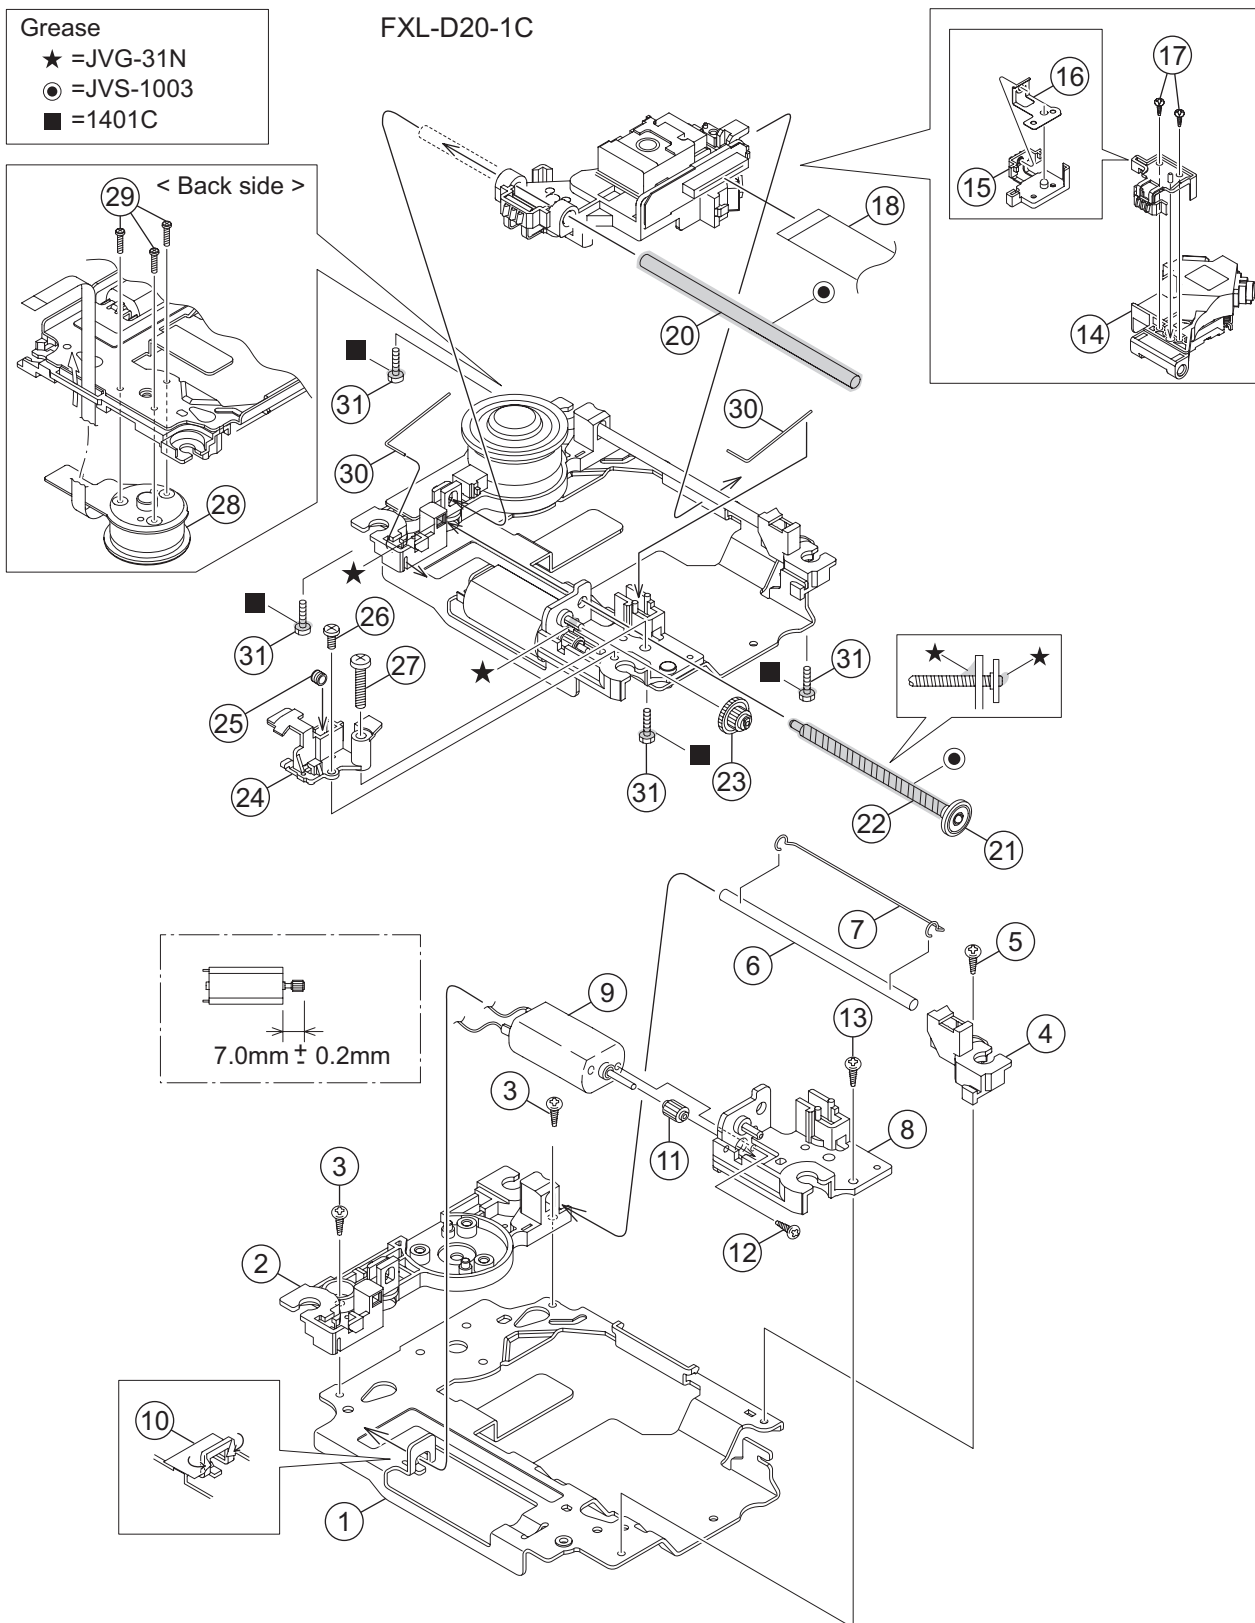

The parts without symbol number are not service.

DVD mechanism

Block No. [M][J][M][M]

△	Symbol No.	Part No.	Part Name	Description	Local
1		LV22234-001A	TM.CHASSIS		
2		LV22294-001A	C.SPINDLE BASE		
3		QYSDST2005ZA	TAP SCREW	M2 x 5mm(x2)	
4		LV36791-001A	C.G.S.HOLDER		
5		QYSDST2005ZA	TAP SCREW	M2 x 5mm	
6		LV44041-002A	GUIDE SHAFT		
7		LV44479-001A	BAR SPRING		
8		LV22236-001A	FEED HOLDER		
9		QAR0165-001	FEED MOTOR		
10		LV30225-0X5A	SPACER		
11		LV36557-001A	F.M.GEAR		
12		QYSPSPT2030MA	SCREW	M2 x 3mm	
13		QYSDST2005ZA	TAP SCREW	M2 x 5mm	
14		QAL0786-002	P.UP		
15		LV22237-001A	RACK ARM		
16		LV36560-001A	RACK ARM SPRING		
17		QYSPSFU1740ZA	TAP SCREW	M1.7 x 4mm(x2)	
18		QUQK05-2424AC-E	FFC WIRE	24pin 24cm	
20		LV44041-002A	GUIDE SHAFT		
21		LV36559-001A	L.S.GEAR		
22		LV41517-003A	LEAD SCREW		
23		LV36558-001A	MIDDLE GEAR		
24		LV36556-001A	SPRING HOLDER		
25		LV44623-001A	COMP.SPRING		
26		QYSDST2005ZA	TAP SCREW	M2 x 5mm	
27		QYSDST2616MA	TAP SCREW	M2.6 x 16mm	
28		QAR0387-001	S.MOTOR		
29		QYSPSPU1775ZA	SCREW	M1.7 x 7.5mm(x3)	
30		LV44042-001A	ROD SPRING	(x2)	
31		LE40858-002A	SPECIAL SCREW	(x4)	

DVD changer mechanism assembly and parts list

Block No. M K M M


FMU-SB3-1C

Grease

★=JVG-31N

▲=JVS-1003

CH6-BASE-1M

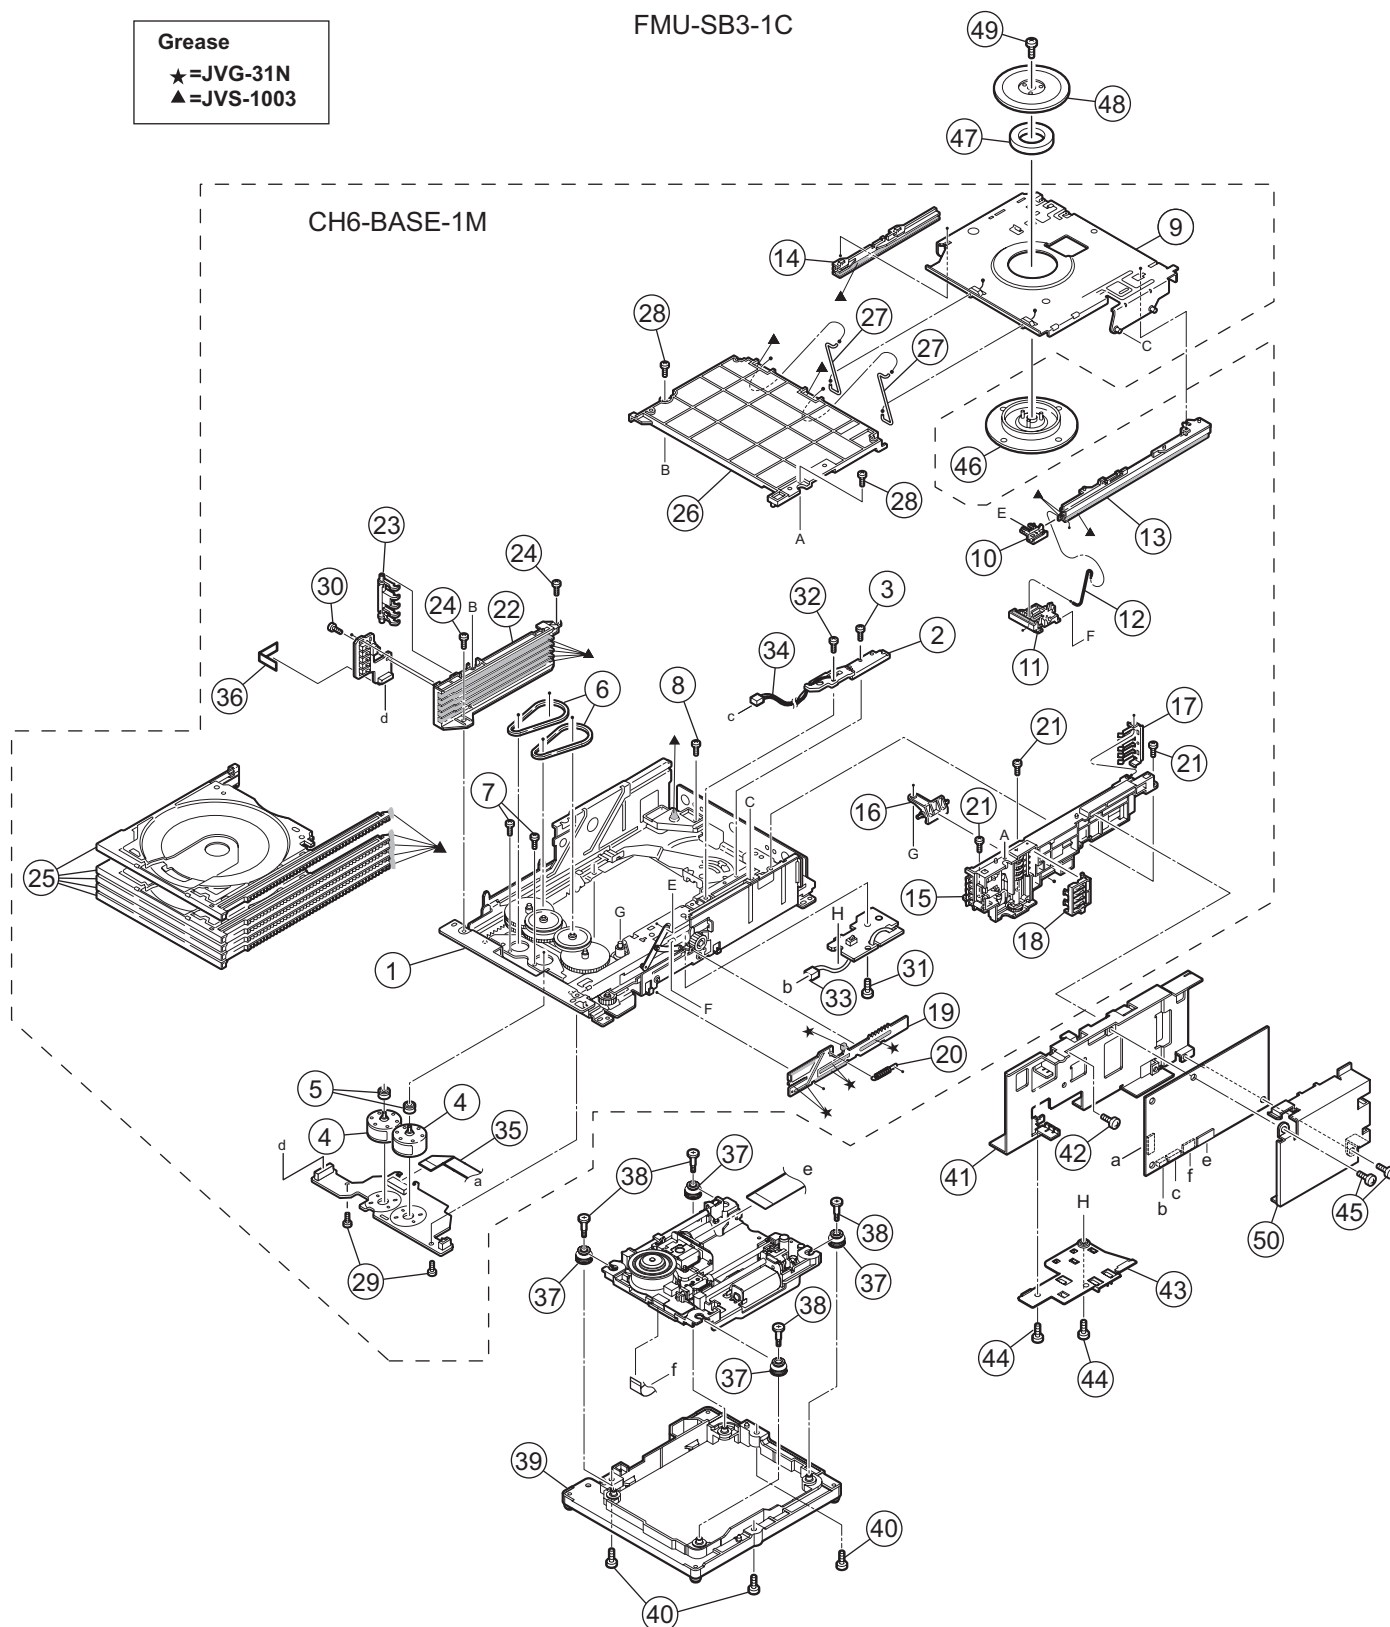

The parts without symbol number are not service.

DVD changer mechanism

Block No. [M][K][M][M]

Symbol No.	Part No.	Part Name	Description	Local
1	LV10913-007A	LOADER ASSY		
2	QVY0027-B14	S V RESISTOR		
3	QYSDST2004ZA	TAP SCREW	M2 x 4mm	
4	QAR0164-001	MOTOR	(x2)	
5	LV42340-001A	MOTOR PULLEY	(x2)	
6	LV41431-002A	BELT	(x2)	
7	QYSPSPU1725NA	SCREW	M1.7 x 2.5mm(x2)	
8	QYSDST2605ZA	TAP SCREW	M2.6 x 5mm	
9	LV33965-008A	LIFTER ASSY		
10	LV33963-001A	HOOK		
11	LV33964-002A	HOOK STOPPER		
12	LV43285-001A	ROD (L)		
13	LV21408-002A	RAIL(R)		
14	LV21409-002A	RAIL(L)		
15	LV21520-005A	SIDE(R) ASSY		
16	LV33974-002A	SELECT LEVER		
17	LV33977-002A	CLICK SPRING		
18	LV33975-001A	GEAR COVER		
19	LV33976-002A	ELEVATOR CAM		
20	LV43287-001A	ELEVATOR SPRING		
21	QYSDST2605ZA	TAP SCREW	M2.6 x 5mm(x3)	
22	LV10749-003A	SIDE(L)		
23	LV33980-002A	OPEN DET.LEVER		
24	QYSDST2605ZA	TAP SCREW	M2.6 x 5mm(x2)	
25	LV10746-007A	TRAY ASSY	(x5)	
26	LV10750-003A	TOP COVER		
27	LV43289-003A	ROD	(x2)	
28	QYSDSF2608ZA	TAP SCREW	M2.6 x 8mm(x2)	
29	QYSDST2605ZA	TAP SCREW	M2.6 x 5mm(x2)	
30	QYSDSF2608ZA	TAP SCREW	M2.6 x 8mm	
31	QYSDST2605ZA	TAP SCREW	M2.6 x 5mm	
32	QYSDST2004ZA	TAP SCREW	M2 x 4mm	
33	WJM0330-002A-E	E-SI C WIRE C-F		
34	WJM0331-001A-E	E-SI C WIRE C-F		
35	QUQW10-1521BF-E	FFC WIRE	15pin 21cm	
36	LV30227-044A	SPACER		
37	LE40900-003A	INSULATOR	(x4)	
38	LV44045-001A	SPECIAL SCREW	(x4)	
39	LV11252-002A	C.TM.HOLDER		
40	QYSDST2605ZA	TAP SCREW	M2.6 x 5mm(x3)	
41	LV22274-001A	PWB BKT		
42	QYSDSF2608ZA	TAP SCREW	M2.6 x 8mm	
43	LV22275-001A	WIRE HOLDER		
44	QYSDST2605ZA	TAP SCREW	M2.6 x 5mm(x2)	
45	QYSDST2605ZA	TAP SCREW	M2.6 x 5mm(x2)	
46	LV32417-001A	CLAMPER		
47	LV42930-003A	P.C.MAGNET		
48	LV33992-001A	DVD YOKE		
49	LE40906-002A	SPECIAL SCREW		
50	LV36585-001A	SHIELD CASE		

Electrical parts list

Main board

Block No. [0][1]

△ Symbol No.	Part No.	Part Name	Description	Local
IC411	MM1233XF-X	IC C/M		
IC431	MM1623XF-X	IC		
IC471	MN101C49GPW	IC MASK		
IC472	S-80840CNNB-G-W	IC		
IC473	SN74AHCT08NS-X	IC		
IC477	BR24L08F-W-X	IC(DIGITAL)		
IC481	TORX147	OPT RECEIVER		
IC491	KIA7805API	IC		
△ IC901	MIP4170MDSLJ	SW-IC		
Q951	2SC3576-JVC-T	TRANSISTOR		
Q953	KTA1267/YG/-T	TRANSISTOR		
Q954	RTR030P02-X	MOS FET		
Q958	KTA1273/Y/-T	TRANSISTOR		
Q959	RT1N241C-X	DIGI TRANSISTOR		
Q965	RT1P441C-X	DIGI TRANSISTOR		
Q969	RT1N241C-X	DIGI TRANSISTOR		
Q974	RTR030P02-X	MOS FET		
Q979	RT1N241C-X	DIGI TRANSISTOR		
Q980	RT1N241C-X	DIGI TRANSISTOR		
Q982	KTA1267/YG/-T	TRANSISTOR		
Q983	KTC3203/OY/-T	TRANSISTOR		
Q984	RTR030P02-X	MOS FET		
Q989	RT1N241C-X	DIGI TRANSISTOR		
Q991	KTC3875/YG/-X	TRANSISTOR		
Q4091	KTA1271/OY/-T	TRANSISTOR		
Q4092	2SC3928A/QR/-X	TRANSISTOR		
Q4701	RT1N140C-X	DIGI TRANSISTOR		
Q4703	RT1N141C-X	DIGI TRANSISTOR		
Q4811	RT1P141C-X	DIGI TRANSISTOR		
Q4812	RT1N141C-X	DIGI TRANSISTOR		
Q4821	RT1N141C-X	DIGI TRANSISTOR		
Q4822	2SD2114K/VW/-X	TRANSISTOR		
Q4831	RT1N141C-X	DIGI TRANSISTOR		
Q4832	RT1P430C-X	TRANSISTOR		
Q4833	RT1N430C-X	TRANSISTOR		
Q4961	KTC3203/OY/-T	TRANSISTOR		
△ D901	DI106	BRIDGE DIODE		
D902	20NFA60-FC5	FR DIODE		
D904	FR104S-T5	FR DIODE		
D911	RB160M-30-X	SB DIODE		
D950	MTZJ24D-T2	Z DIODE I/M		
D951	FR104S-T5	FR DIODE		
D952	FR104S-T5	FR DIODE		
△ D954	UF202G-F26	FR EIODE		
D955	MA111-X	SI DIODE		
△ D956	FR104S-T5	FR DIODE		
D960	MTZJ2.2A-T2	S.B.DIODE		
△ D973	SB360-F82	FUSEIODE		
D981	MTZJ4.3B-T2	Z DIODE		
D992	MTZJ2.0A-T2	Z DIODE		
D993	MTZJ3.3B-T2	Z DIODE		
△ D998	1N4003S-T5	SI DIODE		
△ D999	1N4003S-T5	SI DIODE		
D4091	1SS133-T2	SI DIODE		
D4092	MTZJ6.8A-T2	Z DIODE		
D4093	1SS133-T2	SI DIODE		
D4703	MTZJ4.7B-T2	Z DIODE		
D4705	1SS133-T2	SI DIODE		
D4708	1SS133-T2	SI DIODE		
D4709	10EDB20-T4	DIODE		
D4811	1SS133-T2	SI DIODE		
D4831	1SS133-T2	SI DIODE		
D4832	1SS133-T2	SI DIODE		
D4833	1SS133-T2	SI DIODE		
D4834	1SS133-T2	SI DIODE		
D4835	MTZJ6.8A-T2	Z DIODE		
D4841	MTZJ2.0A-T2	Z DIODE		
D4842	MTZJ3.3A-T2	Z DIODE		
D4891	MTZJ6.2C-T2	Z DIODE		
D4961	MTZJ4.7A-T2	Z DIODE		

△ Symbol No.	Part No.	Part Name	Description	Local
D4962	1SS133-T2	SI DIODE		
D4963	1SS133-T2	SI DIODE		
△ PC901	PC123Y22FZ	PHOTO COUPLER		
△ C902	QFZ9073-683	MM CAPACITOR	0.068uF AC250V M	
△ C903	QFZ9073-683	MM CAPACITOR	0.068uF AC250V M	
△ C904	QCZ9079-102	C CAPACITOR	1000pF AC250V M	
△ C905	QCZ9079-102	C CAPACITOR	1000pF AC250V M	
△ C907	QETM2DM-157	E CAPACITOR	150uF 200V M	
C908	QCZ0401-222	C CAPACITOR	2200pF	
C909	QCZ0131-331	C CAPACITOR	330pF 2kV K	
C910	NDC31HJ-120X	C CAPACITOR	12pF 50V J	
C913	QCZ0403-221	C CAPACITOR	220pF	
C914	QEZ0658-476Z	E CAPACITOR	47uF	
△ C916	QCZ9079-222	C CAPACITOR	2200pF AC250V M	
C918	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C920	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C921	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C950	NDC31HJ-221X	C CAPACITOR	220pF 50V J	
C951	NDC31HJ-221X	C CAPACITOR	220pF 50V J	
C952	QCZ0136-101Z	C CAPACITOR	100pF 1kV K	
C954	NDC31HJ-221X	C CAPACITOR	220pF 50V J	
C955	NDC31HJ-221X	C CAPACITOR	220pF 50V J	
C956	NDC31HJ-221X	C CAPACITOR	220pF 50V J	
C957	NDC31HJ-221X	C CAPACITOR	220pF 50V J	
C960	QEZ0655-826Z	E CAPACITOR	82uF	
C961	QCZ0202-155Z	C CAPACITOR	1.5uF 25V Z	
C962	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
C963	QEZ0658-396Z	E CAPACITOR	39uF	
C964	QEZ0658-226Z	E CAPACITOR	22uF	
C968	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C969	QETN1AM-227Z	E CAPACITOR	220uF 10V M	
C973	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
C975	QEZ0654-108Z	E CAPACITOR	1000uF	
C976	QEZ0654-477Z	E CAPACITOR	470uF 10V M	
C977	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C978	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C979	QETN1AM-227Z	E CAPACITOR	220uF 10V M	
C981	QCZ0202-155Z	C CAPACITOR	1.5uF 25V Z	
C982	QEZ0656-567Z	E CAPACITOR	560uF	
C983	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C984	QEZ0655-227Z	E CAPACITOR	220uF	
C989	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C990	QETN1EM-107Z	E CAPACITOR	100uF 25V M	
C991	QCZ0202-155Z	C CAPACITOR	1.5uF 25V Z	
C992	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
C993	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	
C994	QCB31HK-223Y	C CAPACITOR	0.022uF 50V K	
C996	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C997	QEZ0655-227Z	E CAPACITOR	220uF	
C998	NDC31HJ-331X	C CAPACITOR	330pF 50V J	
C999	QEZ0655-827Z	E CAPACITOR	820uF	
C4002	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C4006	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	
C4011	NDC31HJ-221X	C CAPACITOR	220pF 50V J	
C4012	NDC31HJ-221X	C CAPACITOR	220pF 50V J	
C4016	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4017	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z	
C4020	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4021	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4031	NCB31HK-562X	C CAPACITOR	5600pF 50V K	
C4032	NCB31HK-562X	C CAPACITOR	5600pF 50V K	
C4033	NCB31HK-562X	C CAPACITOR	5600pF 50V K	
C4034	NCB31HK-562X	C CAPACITOR	5600pF 50V K	
C4035	NCB31HK-472X	C CAPACITOR	4700pF 50V K	
C4036	NCB31HK-562X	C CAPACITOR	5600pF 50V K	
C4091	QETN1CM-226Z	E CAPACITOR	22uF 16V M	
C4092	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C4101	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C4102	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C4111	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4112	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C4121	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C4122	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C4171	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	

△ Symbol No.	Part No.	Part Name	Description	Local
C4172	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C4173	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C4191	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C4192	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4301	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C4311	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4321	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C4331	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C4341	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C4351	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C4391	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C4392	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C4394	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C4395	QETN1HM-226Z	E CAPACITOR	22uF 50V M	
C4401	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C4402	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C4411	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4412	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C4421	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C4423	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C4431	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C4432	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C4441	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C4442	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C4451	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C4452	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C4705	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4706	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4707	QETN1AM-477Z	E CAPACITOR	470uF 10V M	
C4708	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4709	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4710	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4711	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C4718	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4719	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4771	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C4772	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C4773	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C4774	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C4791	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C4844	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	
C4891	NCB31HK-221X	C CAPACITOR	220pF 50V K	
C4892	NCB31HK-221X	C CAPACITOR	220pF 50V K	
C4893	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C4902	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4903	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C4904	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C4961	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
R521	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R522	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
R526	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R527	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
R528	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	
R901	QRL02DJ-683X	OMF RESISTOR	68kΩ 2W J	
△ R903	QRZ9005-270X	FUSI RESISTOR	27Ω	
R904	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	
R905	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J	
R908	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R909	NRSA63J-432X	MG RESISTOR	4.3kΩ 1/16W J	
△ R921	QRZ9037-335	COMP RESISTOR	3.3MΩ 1/2W K	
△ R922	QRZ9037-335	COMP RESISTOR	3.3MΩ 1/2W K	
R951	QRE141J-150Y	C RESISTOR	15Ω 1/4W J	
R952	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R953	NRSA02J-223X	MG RESISTOR	22kΩ 1/10W J	
△ R954	QRZ9005-100X	FUSI RESISTOR	10Ω	
R955	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R960	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R961	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R963	NRSA63D-151X	MG RESISTOR	150Ω 1/16W D	
R965	NRSA63J-132X	MG RESISTOR	1.3kΩ 1/16W J	
R968	NRSA63D-222X	MG RESISTOR	2.2kΩ 1/16W D	
R969	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R971	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R972	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R973	QRT027J-R30	MF RESISTOR	0.3Ω 2W J	
R980	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R981	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	

△ Symbol No.	Part No.	Part Name	Description	Local
R982	QRT027J-R56	MF RESISTOR	0.56Ω 2W J	
R983	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R984	NRSA63J-243X	MG RESISTOR	24kΩ 1/16W J	
R985	QRE141J-132Y	C RESISTOR	1.3kΩ 1/4W J	
R986	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J	
R987	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R988	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R989	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R990	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R4011	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R4012	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R4091	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R4092	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4093	NRSA63J-821X	MG RESISTOR	820Ω 1/16W J	
R4101	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R4111	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R4121	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R4191	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R4201	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R4202	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R4211	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R4212	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R4221	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R4222	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R4231	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R4232	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R4241	NRSA63J-620X	MG RESISTOR	62Ω 1/16W J	
R4242	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R4251	NRSA63J-620X	MG RESISTOR	62Ω 1/16W J	
R4252	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R4401	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R4411	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R4421	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R4431	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R4441	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R4451	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R4702	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R4703	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R4704	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4705	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R4707	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4708	QRE141J-221Y	C RESISTOR	220Ω 1/4W J	
R4709	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R4710	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R4711	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R4712	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R4713	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R4714	QRE141J-103Y	C RESISTOR	10kΩ 1/4W J	
R4752	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J	
R4753	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4754	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4755	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4756	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4757	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4758	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4759	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4760	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R4761	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4762	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4763	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J	
R4772	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4773	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4774	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4775	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R4776	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R4777	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R4778	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R4791	NRSA02J-221X	MG RESISTOR	220Ω 1/10W J	
△ R4811	QRZ9006-4R7X	FUSI RESISTOR	4.7Ω	
R4821	QRE141J-181Y	C RESISTOR	180Ω 1/4W J	
R4822	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
R4823	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
R4824	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
R4825	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
R4826	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
R4827	QRE141J-151Y	C RESISTOR	150Ω 1/4W J	
R4831	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J	
R4833	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J	

△ Symbol No.	Part No.	Part Name	Description	Local
R4834	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J	
R4835	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R4841	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J	
R4843	QRT017J-2R2	MF RESISTOR	2.2Ω 1W J	
△ R4844	QRZ9005-470X	FUSI RESISTOR	47Ω	
R4846	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4848	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4849	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4852	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R4861	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R4863	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R4864	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R4866	NRSA63J-272X	MG RESISTOR	2.7kΩ 1/16W J	
R4871	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R4872	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R4873	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R4875	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R4876	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R4881	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R4882	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R4883	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R4884	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R4886	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R4891	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R4892	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
R4893	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
△ R4921	QRZ9005-100X	FUSI RESISTOR	10Ω	
R4961	QRE141J-271Y	C RESISTOR	270Ω 1/4W J	
△ L901	QQR0908-001	LINE FILTER		
L951	QQL244K-R22Z	COIL	0.22uH K	
L955	QQL31AK-220Z	COIL	22uH K	
L957	QQL26AK-100Z	COIL	10uH K	
L972	QQL31AK-220Z	COIL	22uH K	
L4391	QQL25CK-221Z	COIL	220uH K	
△ T901	QQS0371-001	SW TRANSF		
CN401	QGF1036C2-05	CONNECTOR	FFC/FPC (1-5)	
CN402	QGF1036C2-28	CONNECTOR	FFC/FPC (1-28)	
CN403	QGF1036C2-18	CONNECTOR	FFC/FPC (1-18)	
CN404	QGF1036C2-05	CONNECTOR	FFC/FPC (1-5)	
CN410	QGF1205C2-11	CONNECTOR	FFC/FPC (1-11)	
CN411	QGF1036C2-25	CONNECTOR	FFC/FPC (1-25)	
CN413	QGB2501J1-06	CONNECTOR	B-B (1-6)	
CN450	QGF1036C2-17	CONNECTOR	FFC/FPC (1-17)	
CN451	QGF1205C2-07	CONNECTOR	FFC/FPC (1-7)	
CN457	QGD2504C1-03Z	CONNECTOR	(1-3)	
△ CP951	ICP-N10-T	IC PROTECTOR	400mA	
△ CP999	ICP-N20-T	IC PROTECTOR	800mA	
EP401	QNZ0870-001	EARTH PLATE		
EP901	QNZ0870-001	EARTH PLATE		
EP903	QNZ0870-001	EARTH PLATE		
FC901	QNG0003-001Z	FUSE CLIP		
FC902	QNG0003-001Z	FUSE CLIP		
FW521	QUM213-08DGZ4-E	PARA RIBON WIRE		
HS901	LV40057-002A	HEAT SINK		
J4401	QNN0570-001	PIN JACK		
J4402	QNN0572-001	PIN JACK		
J4891	QNS0089-001	3.5 JACK		
J4891 or	QNS0221-001	3.5 JACK		
K4702	QQR0621-001Z	COIL		
△ P901	QNC0082-001	AC INLET		
PP401	QZW0112-001	WIRE CLAMP		
PP402	QZW0112-001	WIRE CLAMP		
PP403	QZW0112-001	WIRE CLAMP		
PP404	QZW0112-001	WIRE CLAMP		
S522	QSW1120-001Z	PUSH SW I.M		
S523	QSW1120-001Z	PUSH SW I.M		
S526	QSW1120-001Z	PUSH SW I.M		
S527	QSW1120-001Z	PUSH SW I.M		
S528	QSW1120-001Z	PUSH SW I.M		
S529	QSW1120-001Z	PUSH SW I.M		
X4701	QAX0246-001Z	C RESONATOR	8.00MHz	

Audio board

Block No. [0][2]

△ Symbol No.	Part No.	Part Name	Description	Local
IC101	R2S15902FP	IC		
IC111	RC4580ID-X	IC		
IC112	RC4580ID-X	IC		
IC113	RC4580ID-X	IC		
IC121	RC4580ID-X	IC		
IC131	RC4580ID-X	IC		
IC501	PT6315	IC		
IC511	GP1UM261XKVF	IR DETECT UNIT		
Q1101	2SA1530A/QR/-X	TRANSISTOR		
Q1102	RT1N141C-X	DIGI TRANSISTOR		
Q1121	IMX9-W	TRANSISTOR		
Q1122	IMX9-W	TRANSISTOR		
Q1123	IMX9-W	TRANSISTOR		
Q1131	RT1N141C-X	DIGI TRANSISTOR		
Q1132	2SA1530A/QR/-X	TRANSISTOR		
Q1133	IMX9-W	TRANSISTOR		
Q2921	KTC3203/OY/-T	TRANSISTOR		
D511	SLR-343VC/NPQ-T	LED		
D551	SELU2E10C-P	LED		
D2921	MTZJ11C-T2	Z DIODE		
D2922	1SS133-T2	SI DIODE		
C506	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C507	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C511	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C515	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C517	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C518	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C541	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C542	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C1101	NDC31HJ-331X	C CAPACITOR	330pF 50V J	
C1102	NDC31HJ-331X	C CAPACITOR	330pF 50V J	
C1103	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C1104	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C1111	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C1112	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C1170	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	C60J,C60C, C50J,C50C
C1170	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	C40J,C40C
C1171	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	C60J,C60C, C50J,C50C
C1171	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	C40J,C40C
C1172	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	C60J,C60C, C50J,C50C
C1172	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	C40J,C40C
C1203	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C1204	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C1205	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C1206	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C1209	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C1210	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C1211	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C1212	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C1215	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
C1216	QTE1H46-475Z	E CAPACITOR	4.7uF 50V	C60J,C60C, C50J,C50C
C1216	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	C40J,C40C
C1217	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C1218	QTE1H46-475Z	E CAPACITOR	4.7uF 50V	C60J,C60C, C50J,C50C
C1218	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	C40J,C40C
C1221	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C1222	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C1223	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C1224	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C1225	NDC31HJ-471X	C CAPACITOR	470pF 50V J	
C1226	NDC31HJ-470X	C CAPACITOR	47pF 50V J	
C1441	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C1442	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C1443	QCB81HK-222Y	C CAPACITOR	2200pF 50V K	
C1443 or	QDXB1CM-222Y	C CAPACITOR	2200pF 16V M	
C1444	QCB81HK-222Y	C CAPACITOR	2200pF 50V K	
C1444 or	QDXB1CM-222Y	C CAPACITOR	2200pF 16V M	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C1445	QCB11HK-222Y	C CAPACITOR	2200pF 50V K		R506	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J	
C1445	or QDXB1CM-222Y	C CAPACITOR	2200pF 16V M		R511	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
C1446	QDGB1HK-102Y	C CAPACITOR	1000pF 50V K	C60J,C60C, C50J,C50C	R531	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
C1446	QCB11HK-222Y	C CAPACITOR	2200pF 50V K	C40J,C40C	R532	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
C1446	or QDXB1CM-222Y	C CAPACITOR	2200pF 16V M	C40J,C40C	R533	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	
C2501	QTE1H46-475Z	E CAPACITOR	4.7uF 50V	C60J,C60C, C50J,C50C	R534	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
C2501	QETN1HM-105Z	E CAPACITOR	1uF 50V M	C40J,C40C	R536	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
C2502	QTE1H46-475Z	E CAPACITOR	4.7uF 50V	C60J,C60C, C50J,C50C	R537	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	
C2502	QETN1HM-105Z	E CAPACITOR	1uF 50V M	C40J,C40C	R538	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	
C2503	NCB21CK-224X	C CAPACITOR	0.22uF 16V K		R539	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
C2504	NCB21CK-224X	C CAPACITOR	0.22uF 16V K		R541	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C2505	NCB21CK-224X	C CAPACITOR	0.22uF 16V K		R542	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C2506	QTE1H46-475Z	E CAPACITOR	4.7uF 50V	C60J,C60C, C50J,C50C	R552	NRSA63J-121X	MG RESISTOR	120Ω 1/16W J	
C2506	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	C40J,C40C	R1101	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
C2511	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R1102	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
C2512	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R1108	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
C2513	NCB21CK-224X	C CAPACITOR	0.22uF 16V K		R1109	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
C2514	NCB21CK-224X	C CAPACITOR	0.22uF 16V K		R1110	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J	
C2515	NCB31CK-393X	C CAPACITOR	0.039uF 16V K		R1111	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J	
C2516	NCB31CK-393X	C CAPACITOR	0.039uF 16V K		R1116	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C2517	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M		R1117	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C2518	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M		R1133	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C2521	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M		R1134	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C2522	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M		R1135	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
C2530	QTE1E46-476Z	E CAPACITOR	47uF 25V	C60J,C60C, C50J,C50C	R1136	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
C2530	QETN1CM-107Z	E CAPACITOR	100uF 16V M	C40J,C40C	R1137	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
C2531	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R1138	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
C2532	NCB31CK-153X	C CAPACITOR	0.015uF 16V K		R1141	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C2533	QETN1CM-107Z	E CAPACITOR	100uF 16V M		R1142	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C2534	NCB31HK-473X	C CAPACITOR	0.047uF 50V K		R1143	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
C2535	NCB31HK-473X	C CAPACITOR	0.047uF 50V K		R1144	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
C2536	QFV61HJ-473Z	MF CAPACITOR	0.047uF 50V J		R1145	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
C2537	QFV61HJ-154Z	MF CAPACITOR	0.15uF 50V J		R1146	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
C2538	QFV61HJ-473Z	MF CAPACITOR	0.047uF 50V J		R1149	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C2539	QFV61HJ-154Z	MF CAPACITOR	0.15uF 50V J		R1150	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C2540	QFV61HJ-223Z	MF CAPACITOR	0.022uF 50V J		R1151	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
C2541	QFV61HJ-223Z	MF CAPACITOR	0.022uF 50V J		R1152	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
C2550	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M		R1155	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
C2551	QETN1HM-226Z	E CAPACITOR	22uF 50V M		R1156	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
C2552	QTE1E46-476Z	E CAPACITOR	47uF 25V	C60J,C60C, C50J,C50C	R1158	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C2552	QETN1EM-476Z	E CAPACITOR	47uF 25V M	C40J,C40C	R1159	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C2553	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M		R1160	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C2554	NCF21CZ-105X	C CAPACITOR	1uF 16V Z	C60J,C60C, C50J,C50C	R1161	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C2554	NCB31HK-104X	C CAPACITOR	0.1uF 50V K	C40J,C40C	R1162	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	C50J,C50C, C40J,C40C
C2556	NCB31CK-473X	C CAPACITOR	0.047uF 16V K		R1163	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	C50J,C50C, C40J,C40C
C2557	NCB31CK-473X	C CAPACITOR	0.047uF 16V K		R1164	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C2560	QETN1EM-476Z	E CAPACITOR	47uF 25V M		R1165	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C2601	NDC31HJ-560X	C CAPACITOR	56pF 50V J		R1166	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	C60J,C60C, C50J,C50C
C2602	NDC31HJ-560X	C CAPACITOR	56pF 50V J		R1166	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	C40J,C40C
C2603	QETN1AM-227Z	E CAPACITOR	220uF 10V M		R1167	NRSA63J-912X	MG RESISTOR	9.1kΩ 1/16W J	C60J,C60C
C2604	QETN1AM-227Z	E CAPACITOR	220uF 10V M		R1167	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	C50J,C50C
C2610	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R1167	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J	C40J,C40C
C2611	QETN1HM-106Z	E CAPACITOR	10uF 50V M		R1168	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
C2921	QETN1EM-476Z	E CAPACITOR	47uF 25V M		R1169	NRSA63J-273X	MG RESISTOR	27kΩ 1/16W J	
C2922	QEZ0807-107Z	E CAPACITOR	100uF	C60J,C60C, C50J,C50C	R1171	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
C2922	QETN1CM-107Z	E CAPACITOR	100uF 16V M	C40J,C40C	R1172	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	C60J,C60C
C6001	NCB31CK-223X	C CAPACITOR	0.022uF 16V K		R1173	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	C50J,C50C, C40J,C40C
C6002	NCB31CK-223X	C CAPACITOR	0.022uF 16V K		R1174	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J	C60J,C60C
C6003	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		R1174	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	C50J,C50C, C40J,C40C
C6004	NCB31HK-103X	C CAPACITOR	0.01uF 50V K		R1175	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
C6101	NCB31HK-182X	C CAPACITOR	1800pF 50V K		R1176	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
C6102	NCB31HK-182X	C CAPACITOR	1800pF 50V K		R1181	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C6103	NDC31HJ-150X	C CAPACITOR	15pF 50V J		R1182	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C6104	NDC31HJ-150X	C CAPACITOR	15pF 50V J		R1183	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C6105	NCB31HK-103X	C CAPACITOR	0.01uF 50V K		R1184	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
C6205	NCB31HK-103X	C CAPACITOR	0.01uF 50V K		R1185	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R501	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R1186	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R502	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R2501	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R503	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R2502	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R505	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J		R2503	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
					R2504	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
					R2505	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
					R2506	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	

△ Symbol No. Part No. Part Name Description Local

R2511	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R2512	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R2513	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R2514	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R2520	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2521	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2551	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R2552	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R2553	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J	
R2554	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2555	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2556	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2557	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R2558	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2559	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R2560	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2561	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2601	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2602	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2603	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2604	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R2605	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2606	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2607	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2608	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R2609	QRE141J-390Y	C RESISTOR	39Ω 1/4W J	
R2610	QRE141J-390Y	C RESISTOR	39Ω 1/4W J	
R2611	QRE141J-100Y	C RESISTOR	10Ω 1/4W J	
R2612	QRE141J-100Y	C RESISTOR	10Ω 1/4W J	
R2613	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R2614	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R2620	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R2621	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R2922	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6001	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R6107	NRSA63J-390X	MG RESISTOR	39Ω 1/16W J	
R6207	NRSA63J-390X	MG RESISTOR	39Ω 1/16W J	

CN101	QGB2501J1-06	CONNECTOR	B-B (1-6)	
CN102	QGF1036F2-25	CONNECTOR	FFC/FPC (1-25)	
CN414	QGB2501K2-06	CONNECTOR	B-B (1-6)	
CN415	QGB2501K2-06	CONNECTOR	B-B (1-6)	
CN501	QGF1036F2-17	CONNECTOR	FFC/FPC (1-17)	
CN502	QGF1205F2-07	CONNECTOR	FFC/FPC (1-7)	
CN511	WJP0079-002A-E	E-SH C WIRE C-B		
DI501	QLF0168-001	FL TUBE		
EP511	QNZ0870-001	EARTH PLATE		
J1101	QNN0598-001	PIN JACK		
J1103	QND0118-001	DIN CONNECTOR		
J6001	QNS0231-001	JACK		
J6101	QNZ0851-001	USB CONNECTOR		
JS541	QSW1059-001	JOG VOLUME		
K501	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K502	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K503	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K504	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K6001	NQR0007-002X	FERRITE BEADS		
K6002	NQR0007-002X	FERRITE BEADS		
K6003	NQR0007-002X	FERRITE BEADS		
K6004	NQR0007-002X	FERRITE BEADS		
K6101	NQR0502-001X	FERRITE BEADS		
K6102	NQR0022-002X	FERRITE BEADS		
K6103	NQR0022-002X	FERRITE BEADS		
K6104	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
S521	QSW1120-001Z	PUSH SW I.M		
S531	QSW0522-002Z	PUSH SW I.M		
S532	QSW0522-002Z	PUSH SW I.M		
S533	QSW0522-002Z	PUSH SW I.M		
S534	QSW0522-002Z	PUSH SW I.M		
S535	QSW0522-002Z	PUSH SW I.M		
S536	QSW0522-002Z	PUSH SW I.M		
S537	QSW0522-002Z	PUSH SW I.M		
S538	QSW0522-002Z	PUSH SW I.M		
S539	QSW0522-002Z	PUSH SW I.M		
S540	QSW0522-002Z	PUSH SW I.M		

Mother board

Block No. [0][3]

△ Symbol No.	Part No.	Part Name	Description	Local
△ IC201	STK413-430	IC		
△ IC202	STK413-430	IC		
IC301	RC4558D-X	IC		
IC302	RC4558D-X	IC		
IC303	RC4558D-X	IC		
IC601	MN101C427NB	IC		
Q152	KTC2026/Y/	TRANSISTOR		
Q501	RT1P441C-X	DIGI TRANSISTOR		
Q502	2SC3928A/QR/-X	TRANSISTOR		C60J,C60C, C40J
Q502	KTC3875/YG/-X	TRANSISTOR		C50J,C50C, C40C
Q503	2SC3928A/QR/-X	TRANSISTOR		C60J,C60C, C40J
Q503	KTC3875/YG/-X	TRANSISTOR		C50J,C50C, C40C
Q504	2SA1530A/QR/-X	TRANSISTOR		
Q505	RT1N44HC-X	DIGI TRANSISTOR		
Q517	RT1N431C-X	TRANSISTOR		
Q523	2SC3928A/QR/-X	TRANSISTOR		C60J,C60C, C40J
Q523	KTC3875/YG/-X	TRANSISTOR		C50J,C50C, C40C
Q524	2SA1530A/QR/-X	TRANSISTOR		
Q525	2SC3928A/QR/-X	TRANSISTOR		C60J,C60C, C40J
Q525	KTC3875/YG/-X	TRANSISTOR		C50J,C50C, C40C
Q542	RT1N136C-X	DIGI TRANSISTOR		
Q603	2SC3928A/QR/-X	TRANSISTOR		C60J,C60C, C40J
Q603	KTC3875/YG/-X	TRANSISTOR		C50J,C50C, C40C
Q604	KTC3265/Y/-X	TRANSISTOR		
Q2101	2SA1530A/QR/-X	TRANSISTOR		
Q2201	2SA1530A/QR/-X	TRANSISTOR		
Q2301	2SA1530A/QR/-X	TRANSISTOR		
Q2401	2SA1530A/QR/-X	TRANSISTOR		
Q2501	2SA1530A/QR/-X	TRANSISTOR		
Q2601	2SA1530A/QR/-X	TRANSISTOR		
Q2701	2SC3928A/QR/-X	TRANSISTOR		C60J,C60C, C40J
Q2701	KTC3875/YG/-X	TRANSISTOR		C50J,C50C, C40C
Q2702	KTA1046/Y/	TRANSISTOR		
Q2703	RT1N141C-X	DIGI TRANSISTOR		
Q2707	KTA1267/YG/-T	TRANSISTOR		
Q2708	KTC3199/GL/-T	TRANSISTOR		
Q2709	KTC2026/Y/	TRANSISTOR		C60J,C60C, C50J,C50C
Q2710	2SA1530A/QR/-X	TRANSISTOR		C60J,C60C, C50J,C50C
Q2711	RT1P141C-X	DIGI TRANSISTOR		C60J,C60C, C50J,C50C
Q3702	RT1P141C-X	DIGI TRANSISTOR		
Q3703	RT1N241C-X	DIGI TRANSISTOR		
Q3704	KTC2026/Y/	TRANSISTOR		
D101	1SS133-T2	SI DIODE		
△ D151	GBU803	BRIDGE DIODE		
△ D152	GBU803	BRIDGE DIODE		
D154	1SS133-T2	SI DIODE		
D163	1SS133-T2	SI DIODE		
D164	MTZJ6.2B-T2	Z DIODE		
D165	MTZJ6.8C-T2	Z DIODE		
D166	MTZJ6.8C-T2	Z DIODE		
D501	1SS133-T2	SI DIODE		
D504	1SS133-T2	SI DIODE		
D505	UDZS5.1B-X	Z DIODE		
D506	1SS133-T2	SI DIODE		
D507	1SS355-X	SI DIODE		
D510	1SS133-T2	SI DIODE		
D514	1SS133-T2	SI DIODE		
D515	1SS133-T2	SI DIODE		
D516	MTZJ30C-T2	Z DIODE		

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
D521	MTZJ6.8C-T2	Z DIODE			C605	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z	
D535	1SS133-T2	SI DIODE			C606	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
D541	1SS133-T2	SI DIODE			C2102	NCB31CK-473X	C CAPACITOR	0.047uF 16V K	
D543	1SS133-T2	SI DIODE			C2103	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
D546	1SS133-T2	SI DIODE			C2104	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
D548	1SS133-T2	SI DIODE			C2105	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
D549	1SS133-T2	SI DIODE			C2106	NDC31HJ-3R0X	C CAPACITOR	3pF 50V J	
D550	1SS133-T2	SI DIODE			C2107	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
D551	1SS133-T2	SI DIODE			C2108	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
D553	1SS133-T2	SI DIODE			C2202	NCB31HK-471X	C CAPACITOR	470pF 50V K	
D561	SLR-342MC-T12	LED			C2203	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
D611	1SS133-T2	SI DIODE			C2204	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
D612	1SS133-T2	SI DIODE			C2205	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
D2101	1SS133-T2	SI DIODE			C2206	NDC31HJ-3R0X	C CAPACITOR	3pF 50V J	
D2201	1SS133-T2	SI DIODE			C2207	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
D2301	1SS133-T2	SI DIODE			C2208	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
D2401	1SS133-T2	SI DIODE			C2302	NCB31HK-471X	C CAPACITOR	470pF 50V K	
D2501	1SS133-T2	SI DIODE			C2303	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
D2601	1SS133-T2	SI DIODE			C2304	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
D2701	MTZJ15C-T2	Z DIODE			C2305	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
D2702	MTZJ15C-T2	Z DIODE			C2306	NDC31HJ-3R0X	C CAPACITOR	3pF 50V J	
D2703	MTZJ20C-T2	Z DIODE		C60J,C60C, C50J,C50C	C2307	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
D2703	MTZJ16C-T2	Z DIODE		C40J,C40C	C2308	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
D2704	1SS133-T2	SI DIODE			C2402	NCB31HK-471X	C CAPACITOR	470pF 50V K	
D2705	1SS133-T2	SI DIODE			C2403	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
D2706	MTZJ24C-T2	Z DIODE		C60J,C60C, C50J,C50C	C2404	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
D3101	1SS133-T2	SI DIODE			C2405	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
D3102	1SS133-T2	SI DIODE			C2406	NDC31HJ-3R0X	C CAPACITOR	3pF 50V J	
D3201	1SS133-T2	SI DIODE			C2407	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
D3202	1SS133-T2	SI DIODE			C2408	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
D3301	1SS133-T2	SI DIODE			C2502	NCB31HK-471X	C CAPACITOR	470pF 50V K	
D3302	1SS133-T2	SI DIODE			C2503	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
D3401	1SS133-T2	SI DIODE			C2504	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
D3402	1SS133-T2	SI DIODE			C2505	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
D3501	1SS133-T2	SI DIODE			C2506	NDC31HJ-3R0X	C CAPACITOR	3pF 50V J	
D3502	1SS133-T2	SI DIODE			C2507	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
D3601	1SS133-T2	SI DIODE			C2508	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
D3602	1SS133-T2	SI DIODE			C2602	NCB31HK-471X	C CAPACITOR	470pF 50V K	
D3703	MTZJ15C-T2	Z DIODE			C2603	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M	
△ C101	QCZ9105-472	C CAPACITOR	4700pF 250V M		C2604	QETN1CM-107Z	E CAPACITOR	100uF 16V M	
C153	NCF21HZ-473X	C CAPACITOR	0.047uF 50V Z		C2605	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
C154	NCF21HZ-473X	C CAPACITOR	0.047uF 50V Z		C2606	NDC31HJ-3R0X	C CAPACITOR	3pF 50V J	
C155	NCF21HZ-473X	C CAPACITOR	0.047uF 50V Z		C2607	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
C156	NCF21HZ-473X	C CAPACITOR	0.047uF 50V Z		C2608	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	
C157	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	C60J,C60C, C50J,C50C	C2701	QETN1JM-107Z	E CAPACITOR	100uF 63V M	C60J,C60C, C50J,C50C
C157	NCF21HZ-223X	C CAPACITOR	0.022uF 50V Z	C40J,C40C	C2701	QETN1HM-107Z	E CAPACITOR	100uF 50V M	C40J,C40C
C158	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	C60J,C60C, C50J,C50C	C2702	QETN1EM-476Z	E CAPACITOR	47uF 25V M	
C159	NCB21HK-104X	C CAPACITOR	0.1uF 50V K	C60J,C60C, C50J,C50C	C2703	QETN1JM-107Z	E CAPACITOR	100uF 63V M	C60J,C60C, C50J,C50C
C159	NCF21HZ-223X	C CAPACITOR	0.022uF 50V Z	C40J,C40C	C2703	QETN1HM-107Z	E CAPACITOR	100uF 50V M	C40J,C40C
C161	QEZ0799-478	E CAPACITER	4700uF	C60J,C60C, C50J,C50C	C2704	QETN1HM-476Z	E CAPACITOR	47uF 50V M	
C161	QEZ0736-478	E CAPACITER	4700uF	C40J,C40C	C2705	QETN1JM-107Z	E CAPACITOR	100uF 63V M	C60J,C60C, C50J,C50C
C162	QEZ0799-478	E CAPACITER	4700uF	C60J,C60C, C50J,C50C	C2705	QETN1HM-107Z	E CAPACITOR	100uF 50V M	C40J,C40C
C162	QEZ0736-478	E CAPACITER	4700uF	C40J,C40C	C2706	QETN1JM-107Z	E CAPACITOR	100uF 63V M	C60J,C60C, C50J,C50C
C163	QETM1EM-478	E CAPACITOR	4700uF 25V M		C2706	QETN1HM-107Z	E CAPACITOR	100uF 50V M	C40J,C40C
C164	QETM1EM-478	E CAPACITOR	4700uF 25V M		C2707	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C167	QETN1EM-476Z	E CAPACITOR	47uF 25V M		C2708	QETN1HM-106Z	E CAPACITOR	10uF 50V M	C60J,C60C, C50J,C50C
C168	QETN1CM-107Z	E CAPACITOR	100uF 16V M		C2711	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
C171	QETN1CM-107Z	E CAPACITOR	100uF 16V M		C2712	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z	
C172	QETN1CM-107Z	E CAPACITOR	100uF 16V M		C2713	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z	
C501	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M		C3101	NCB31HK-152X	C CAPACITOR	1500pF 50V K	
C503	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M		C3104	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C512	QETN1HM-475Z	E CAPACITOR	4.7uF 50V M		C3201	NCB31HK-152X	C CAPACITOR	1500pF 50V K	
C522	QETN1HM-106Z	E CAPACITOR	10uF 50V M		C3204	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C523	QETN1EM-476Z	E CAPACITOR	47uF 25V M	C60J,C60C, C50J,C50C	C3301	NCB31HK-152X	C CAPACITOR	1500pF 50V K	
C523	QETN1EM-107Z	E CAPACITOR	100uF 25V M	C40J,C40C	C3304	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C571	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z		C3401	NCB31HK-152X	C CAPACITOR	1500pF 50V K	
C591	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z		C3404	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C592	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z		C3501	NCB31HK-152X	C CAPACITOR	1500pF 50V K	
C601	QETN1CM-107Z	E CAPACITOR	100uF 16V M		C3504	QETN1HM-225Z	E CAPACITOR	2.2uF 50V M	
C604	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z		C3601	NCB31HK-152X	C CAPACITOR	1500pF 50V K	
					C3604	QETN1HM-106Z	E CAPACITOR	10uF 50V M	
					C3701	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z	
					C3702	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z	
					C3703	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C3704	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z		R2212	NRSA63J-432X	MG RESISTOR	4.3kΩ 1/16W J	C60J,C60C, C50J,C50C
C3705	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z		R2212	NRSA63J-302X	MG RESISTOR	3kΩ 1/16W J	C40J,C40C
C3706	NCF31HZ-103X	C CAPACITOR	0.01uF 50V Z		R2213	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
C3720	QETN1EM-476Z	E CAPACITOR	47uF 25V M		R2214	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
C3721	QEK1CM-107Z	E CAPACITOR	100uF 16V M		R2301	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R152	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J		R2303	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
△ R163	QRJ146J-221X	UNF C RESISTOR	220Ω 1/4W J		R2304	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J	
R164	QRE141J-332Y	C RESISTOR	3.3kΩ 1/4W J		R2305	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R165	QRL027J-391	OMF RESISTOR	390Ω 2W J		R2306	QRZ0224-R22	EMIT RESISTOR	0.22Ω	
R166	QRL027J-391	OMF RESISTOR	390Ω 2W J		R2307	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
△ R171	QRL027J-470	OMF RESISTOR	47Ω 2W J		R2308	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R501	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R2309	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R502	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R2310	QRK126J-4R7X	UNF C RESISTOR	4.7Ω 1/2W J	
R504	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R2311	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R505	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R2312	NRSA63J-432X	MG RESISTOR	4.3kΩ 1/16W J	C60J,C60C, C50J,C50C
R506	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R2312	NRSA63J-302X	MG RESISTOR	3kΩ 1/16W J	C40J,C40C
R508	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2313	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R510	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R2314	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R523	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2401	NRSA63J-622X	MG RESISTOR	6.2kΩ 1/16W J	C60J,C60C, C50J,C50C
R533	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R2401	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	C40J,C40C
R534	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R2403	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R535	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R2404	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J	
R536	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R2405	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R540	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R2406	QRZ0224-R22	EMIT RESISTOR	0.22Ω	
R553	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J		R2407	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R554	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2408	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R555	QRJ146J-271X	UNF C RESISTOR	270Ω 1/4W J		R2409	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R558	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2410	QRK126J-4R7X	UNF C RESISTOR	4.7Ω 1/2W J	
R559	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2411	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R560	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2412	NRSA63J-622X	MG RESISTOR	6.2kΩ 1/16W J	
R561	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J		R2413	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R562	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J		R2414	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R563	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2501	NRSA63J-622X	MG RESISTOR	6.2kΩ 1/16W J	C60J,C60C, C50J,C50C
R574	NRSA02J-151X	MG RESISTOR	150Ω 1/10W J		R2501	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	C40J,C40C
R601	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R2503	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R602	NRSA63J-392X	MG RESISTOR	3.9kΩ 1/16W J		R2504	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J	
R603	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J		R2505	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R612	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2506	QRZ0224-R22	EMIT RESISTOR	0.22Ω	
R613	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2507	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R614	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2508	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R621	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R2509	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R622	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2510	QRK126J-4R7X	UNF C RESISTOR	4.7Ω 1/2W J	
R623	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R2511	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R624	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R2512	NRSA63J-622X	MG RESISTOR	6.2kΩ 1/16W J	
R625	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R2513	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R626	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R2514	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R627	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R2601	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R628	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R2603	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R629	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R2604	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J	
R646	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R2605	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J	
R667	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R2606	QRZ0224-R22	EMIT RESISTOR	0.22Ω	
R671	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R2607	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2101	NRSA63J-302X	MG RESISTOR	3kΩ 1/16W J	C60J,C60C, C50J,C50C	R2608	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
R2101	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	C40J,C40C	R2609	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R2103	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J		R2610	QRK126J-4R7X	UNF C RESISTOR	4.7Ω 1/2W J	
R2104	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J		R2611	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R2105	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J		R2612	NRSA63J-432X	MG RESISTOR	4.3kΩ 1/16W J	C60J,C60C, C50J,C50C
R2106	QRZ0224-R22	EMIT RESISTOR	0.22Ω		R2612	NRSA63J-302X	MG RESISTOR	3kΩ 1/16W J	C40J,C40C
R2107	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R2613	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R2108	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J		R2614	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R2109	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		△ R2701	QRZ9005-220X	FUSI RESISTOR	22Ω	C60J,C60C, C50J,C50C
R2110	QRK126J-4R7X	UNF C RESISTOR	4.7Ω 1/2W J		△ R2702	QRZ9005-220X	FUSI RESISTOR	22Ω	C40J,C40C
R2111	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J		R2703	QRJ146J-220X	UNF C RESISTOR	22Ω 1/4W J	
R2112	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J		R2704	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R2113	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J		R2705	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R2114	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		△ R2706	QRZ9006-4R7X	FUSI RESISTOR	4.7Ω	
R2201	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		△ R2707	QRZ9006-4R7X	FUSI RESISTOR	4.7Ω	
R2203	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J		△ R2708	QRZ9006-4R7X	FUSI RESISTOR	4.7Ω	
R2204	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J		△ R2709	QRZ9006-4R7X	FUSI RESISTOR	4.7Ω	
R2205	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J		△ R2710	QRZ9005-100X	FUSI RESISTOR	10Ω	
R2206	QRZ0224-R22	EMIT RESISTOR	0.22Ω		R2711	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
R2207	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R2712	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	
R2208	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J						
R2209	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J						
R2210	QRK126J-4R7X	UNF C RESISTOR	4.7Ω 1/2W J						
R2211	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J						

△ Symbol No.	Part No.	Part Name	Description	Local
R2713	NRSA63J-562X	MG RESISTOR	5.6kΩ 1/16W J	C60J,C60C, C50J,C50C C60J,C60C, C50J,C50C
R2721	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R2722	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R2723	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R2724	QRE141J-472Y	C RESISTOR	4.7kΩ 1/4W J	
R3101	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J	
R3104	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R3105	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
R3106	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R3107	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
R3109	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R3110	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R3111	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R3201	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J	
R3204	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R3205	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
R3206	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R3207	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
R3209	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R3210	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R3211	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R3301	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J	
R3304	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R3305	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
R3306	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R3307	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
R3309	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R3310	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R3311	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R3401	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J	
R3404	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R3405	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
R3406	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R3407	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
R3409	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R3410	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R3411	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R3501	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J	
R3504	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R3505	NRSA63J-474X	MG RESISTOR	470kΩ 1/16W J	
R3506	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R3507	NRSA63J-334X	MG RESISTOR	330kΩ 1/16W J	
R3509	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R3510	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R3511	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R3601	NRSA63J-203X	MG RESISTOR	20kΩ 1/16W J	
R3604	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R3605	NRSA63J-154X	MG RESISTOR	150kΩ 1/16W J	
R3607	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R3610	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R3611	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R3717	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R3719	QRE141J-102Y	C RESISTOR	1kΩ 1/4W J	
△ R3720	QRJ146J-100X	UNF C RESISTOR	10Ω 1/4W J	
R3721	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J	
△ R3727	QRL01DJ-180X	OMF RESISTOR	18Ω 1W J	
R3732	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J	
L2101	QQLZ005-R45	COIL	0.45uH	
L2201	QQLZ005-R45	COIL	0.45uH	
L2301	QQLZ005-R45	COIL	0.45uH	
L2401	QQLZ005-R45	COIL	0.45uH	
L2501	QQLZ005-R45	COIL	0.45uH	
L2601	QQLZ005-R45	COIL	0.45uH	
△ CN101	QGA7901C1-02	CONNECTOR	W-B (1-2)	
△ CN102	QGA7901C1-02	CONNECTOR	W-B (1-2)	
CN151	QGA3901C1-05	CONNECTOR	W-B (1-5)	
CN271	QGB2510J1-14	CONNECTOR	B-B (1-14)	
CN272	QGB2510J1-09	CONNECTOR	B-B (1-9)	
CN273	QGB2510J1-14	CONNECTOR	B-B (1-14)	
CN274	QGA3901C1-02	CONNECTOR	W-B (1-2)	
CN371	QGA2501C1-02	CONNECTOR	W-B (1-2)	
CN372	QGB2510K2-09	CONNECTOR	B-B (1-9)	
CN501	QGB2510K2-14	CONNECTOR	B-B (1-14)	
CN502	QGB2510K2-14	CONNECTOR	B-B (1-14)	

△ Symbol No.	Part No.	Part Name	Description	Local
EP201	QNZ0869-001	EARTH PLATE		
EP501	QNZ0869-001	EARTH PLATE		
FC102	QNG0019-001Z	FUSE CLIP		
FC156	QNG0019-001Z	FUSE CLIP		
FC158	QNG0019-001Z	FUSE CLIP		
FW501	QUM213-28Z4Z4-E	RIBBON WIRE		
HS151	QZW0115-001	HEAT SINK		C60J,C60C, C50J,C50C C40J,C40C
HS151	QZW0138-001	HEAT SINK		
J2701	QND0118-001	DIN CONNECTOR		
J2702	QNB0195-001	SPEAKER TERMINA		
△ RY101	QSK0142-001	RELAY		
RY271	QSK0127-001	RELAY		
RY272	QSK0127-001	RELAY		
RY273	QSK0127-001	RELAY		
TH271	NAD0025-103X	N THERMISTOR	10kΩ	
WC201	QZW0112-001	WIRE CLAMP		
X601	QAX0246-001Z	C RESONATOR	8.00MHz	

DVD servo board

Block No. [0][4]

△ Symbol No.	Part No.	Part Name	Description	Local
IC201	LA6502-X	IC		
IC301	ES8381FCC	IC		
IC302	MM1701EH-X	IC		
IC305	MM1663DH-X	IC		
IC306	MM1565AF-X	IC		
IC309	TC74VHC574FT-X	IC		
IC451	MN101C61GNW	IC		
IC452	BR93L56RF-W-X	IC		
IC453	S-80830CNNB-G-W	IC		
IC505	K4S281632F-UC60	IC(DIGITAL)		
IC509	-----	IC		
IC510	BR24L16F-W-X	IC		
IC701	AK4387ET-X	IC		
IC702	AK4387ET-X	IC		
IC703	AK4387ET-X	IC		
IC704	AK5358ET-X	IC		
IC705	MM1615AN-X	IC		
IC801	SI9030CTU	IC		
IC802	SN74CB3T3306U-X	IC		
IC804	MM3141JN-X	IC		
IC805	MM3143DN-X	IC		
IC806	LD2981ABM50-X	IC		
Q101	KTA1001/Y/-X	TRANSISTOR		
Q101	or 2SB1424/R/-W	TRANSISTOR		
Q103	KTA1001/Y/-X	TRANSISTOR		
Q103	or 2SB1424/R/-W	TRANSISTOR		
Q801	2SA1530A/R/-X	TRANSISTOR		
Q802	2SC3928A/R/-X	TRANSISTOR		
Q803	2SC3928A/R/-X	TRANSISTOR		
D301	UDZW5.6B-X	Z DIODE		
D302	UDZW5.6B-X	Z DIODE		
D305	RB521S-30-X	SB DIODE		
D801	NAF0013-001X	ESD SUPPRESSOR	V	
D802	NAF0013-001X	ESD SUPPRESSOR	V	
D803	BAV99L-X	SI DIODE		
C101	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C102	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C103	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C104	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C105	NEAF0JM-476X	E CAPACITOR	47uF 6.3V M	
C106	NBE20JM-226X	TA E CAPACITOR	22uF 6.3V M	
C107	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C108	NBE20JM-226X	TA E CAPACITOR	22uF 6.3V M	
C109	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C110	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C111	NEAF0JM-476X	E CAPACITOR	47uF 6.3V M	
C201	NDC31HJ-221X	C CAPACITOR	220pF 50V J	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C202	NDC31HJ-221X	C CAPACITOR	220pF 50V J		C382	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C203	NCB31HK-103X	C CAPACITOR	0.01uF 50V K		C383	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C204	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C390	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C205	NDC31HJ-121X	C CAPACITOR	120pF 50V J		C391	NCB21AK-225X	C CAPACITOR	2.2uF 10V K	
C208	NCB31HK-561X	C CAPACITOR	560pF 50V K		C392	NCB31HK-471X	C CAPACITOR	470pF 50V K	
C210	NCF31AZ-105X	C CAPACITOR	1uF 10V Z		C393	NEAF0JM-227X	E CAPACITOR	220uF 6.3V M	
C211	NCB31EK-223X	C CAPACITOR	0.022uF 25V K		C401	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C217	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C451	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C251	NCB31AK-474X	C CAPACITOR	0.47uF 10V K		C452	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C253	NCB31HK-561X	C CAPACITOR	560pF 50V K		C453	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C255	NCB31CK-153X	C CAPACITOR	0.015uF 16V K		C454	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C256	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C455	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C257	NCB31HK-822X	C CAPACITOR	8200pF 50V K		C551	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C258	NCB31CK-153X	C CAPACITOR	0.015uF 16V K		C554	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C259	NCB31CK-153X	C CAPACITOR	0.015uF 16V K		C555	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C260	NCB31HK-223X	C CAPACITOR	0.022uF 50V K		C557	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C261	NCB31HK-223X	C CAPACITOR	0.022uF 50V K		C558	NEAF0GM-476X	E CAPACITOR	47uF 4V M	
C262	NCB31HK-223X	C CAPACITOR	0.022uF 50V K		C559	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C263	NEAF1CM-107X	E CAPACITOR	100uF 16V M		C560	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C271	NCB31HK-561X	C CAPACITOR	560pF 50V K		C562	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C274	NCB31HK-561X	C CAPACITOR	560pF 50V K		C563	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C301	NDC31HJ-6R0X	C CAPACITOR	6pF 50V J		C564	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C302	NDC31HJ-6R0X	C CAPACITOR	6pF 50V J		C701	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C303	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z		C702	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C304	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z		C703	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C305	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C704	NEAF0JM-476X	E CAPACITOR	47uF 6.3V M	
C306	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C706	NEAF1CM-106X	E CAPACITOR	10uF 16V M	
C307	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C707	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C308	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C708	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C309	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C709	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C310	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C711	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C311	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C712	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C312	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C713	NCB31AK-105X	C CAPACITOR	1uF 10V K	
C313	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C740	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C314	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C741	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C315	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C742	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C316	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C743	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C317	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C744	NEAF1CM-106X	E CAPACITOR	10uF 16V M	
C318	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C745	NEAF1CM-106X	E CAPACITOR	10uF 16V M	
C319	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C801	NEAF0JM-476X	E CAPACITOR	47uF 6.3V M	
C320	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C802	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C321	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C803	NEAF0GM-476X	E CAPACITOR	47uF 4V M	
C322	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C804	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C323	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C805	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C324	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C806	NEAF0GM-476X	E CAPACITOR	47uF 4V M	
C325	NCB31HK-681X	C CAPACITOR	680pF 50V K		C807	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C326	NCB31HK-681X	C CAPACITOR	680pF 50V K		C809	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C327	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C810	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z	
C328	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C811	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C329	NEAF0GM-476X	E CAPACITOR	47uF 4V M		C812	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C330	NCB31HK-102X	C CAPACITOR	1000pF 50V K		C813	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C331	NDC31HJ-101X	C CAPACITOR	100pF 50V J		C814	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z	
C332	NCB31EK-223X	C CAPACITOR	0.022uF 25V K		C815	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C335	NCB31HK-472X	C CAPACITOR	4700pF 50V K		C816	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z	
C336	NCB31HK-102X	C CAPACITOR	1000pF 50V K		C817	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z	
C337	NCB31AK-154X	C CAPACITOR	0.15uF 10V K		C818	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C338	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C819	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C339	NEAF0GM-476X	E CAPACITOR	47uF 4V M		C820	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C340	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C821	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z	
C341	NEAF0GM-476X	E CAPACITOR	47uF 4V M		C822	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C342	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C823	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C344	NEAF0GM-476X	E CAPACITOR	47uF 4V M		C824	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C345	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C825	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C347	NEAF0GM-476X	E CAPACITOR	47uF 4V M		C826	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C348	NEAF0GM-476X	E CAPACITOR	47uF 4V M		C827	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C349	NCB31HK-271X	C CAPACITOR	270pF 50V K		C829	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C350	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		C830	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C351	NCB31HK-103X	C CAPACITOR	0.01uF 50V K		C831	NEAF0JM-476X	E CAPACITOR	47uF 6.3V M	
C353	NDC31HJ-101X	C CAPACITOR	100pF 50V J		C832	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C354	NCB31AK-474X	C CAPACITOR	0.47uF 10V K		C833	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C355	NCB31AK-474X	C CAPACITOR	0.47uF 10V K						
C358	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		R101	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
C359	NCB31HK-103X	C CAPACITOR	0.01uF 50V K		R102	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
C360	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z		R104	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C361	NEAF1CM-106X	E CAPACITOR	10uF 16V M		R105	NRSA02J-3R9X	MG RESISTOR	3.9Ω 1/10W J	
C371	NCF31AZ-105X	C CAPACITOR	1uF 10V Z		R106	NRSA63J-2R2X	MG RESISTOR	2.2Ω 1/16W J	
C380	NCB21CK-105X	C CAPACITOR	1uF 16V K		R112	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
C381	NCF21CZ-225X	C CAPACITOR	2.2uF 16V Z		R113	NRSA02J-3R9X	MG RESISTOR	3.9Ω 1/10W J	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R114	NRSA63J-2R2X	MG RESISTOR	2.2Ω 1/16W J		R364	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R115	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R365	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R116	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R366	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R117	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R367	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R118	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R368	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
R125	NRSA63J-1R0X	MG RESISTOR	1Ω 1/16W J		R369	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R201	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J		R370	NRSA63J-122X	MG RESISTOR	1.2kΩ 1/16W J	
R202	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R371	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R204	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R372	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R205	NRSA63J-512X	MG RESISTOR	5.1kΩ 1/16W J		R373	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R206	NRSA63J-623X	MG RESISTOR	62kΩ 1/16W J		R374	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R207	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R375	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R208	NRSA63J-363X	MG RESISTOR	36kΩ 1/16W J		R376	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R210	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J		R377	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R213	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R378	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R214	NRSA63J-822X	MG RESISTOR	8.2kΩ 1/16W J		R379	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R215	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R380	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R219	NRSA63J-183X	MG RESISTOR	18kΩ 1/16W J		R381	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R220	NRSA63J-243X	MG RESISTOR	24kΩ 1/16W J		R382	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R221	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J		R384	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R232	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R385	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R251	NRS125J-R39X	MG RESISTOR	0.39Ω 1/2W J		R386	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R254	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J		R387	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R255	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R388	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R259	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R390	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R281	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J		R392	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R282	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J		R394	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R283	NRSA63J-512X	MG RESISTOR	5.1kΩ 1/16W J		R395	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R284	NRSA63J-563X	MG RESISTOR	56kΩ 1/16W J		R400	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R285	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J		R402	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R290	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R403	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R301	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J		R452	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R302	NRSA63J-330X	MG RESISTOR	33Ω 1/16W J		R453	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R303	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R454	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R304	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R455	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R305	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R456	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R306	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R457	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R307	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R458	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R310	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R461	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R313	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R463	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R317	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J		R464	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R318	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J		R465	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R319	NRSA63J-911X	MG RESISTOR	910Ω 1/16W J		R530	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R320	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J		R532	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R321	NRS181J-330X	MG RESISTOR	33Ω 1/8W J		R535	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R322	NRS181J-330X	MG RESISTOR	33Ω 1/8W J		R541	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R323	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J		R542	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R324	NRSA63J-153X	MG RESISTOR	15kΩ 1/16W J		R701	NRSA63J-2R2X	MG RESISTOR	2.2Ω 1/16W J	
R325	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R712	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R326	NRSA63D-391X	MG RESISTOR	390Ω 1/16W D		R713	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R327	NRSA63J-683X	MG RESISTOR	68kΩ 1/16W J		R714	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R328	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J		R715	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R329	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J		R716	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R330	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		R718	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R332	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R721	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R333	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R723	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R334	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J		R724	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R335	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J		R725	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R336	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R727	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R337	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R728	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R338	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R730	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J	
R339	NRSA63J-331X	MG RESISTOR	330Ω 1/16W J		R732	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R340	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R741	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R342	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R742	NRSA63J-5R1X	MG RESISTOR	5.1Ω 1/16W J	
R343	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R799	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R344	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R807	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R345	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R808	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R349	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R809	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R352	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R810	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R354	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R811	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R355	NRSA63J-221X	MG RESISTOR	220Ω 1/16W J		R825	NRSA63J-100X	MG RESISTOR	10Ω 1/16W J	
R356	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J		R826	NRSA63J-100X	MG RESISTOR	10Ω 1/16W J	
R358	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J		R827	NRSA63J-100X	MG RESISTOR	10Ω 1/16W J	
R359	NRSA63J-121X	MG RESISTOR	120Ω 1/16W J		R828	NRSA63J-100X	MG RESISTOR	10Ω 1/16W J	
R360	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J		R829	NRSA63J-100X	MG RESISTOR	10Ω 1/16W J	
R361	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R830	NRSA63J-100X	MG RESISTOR	10Ω 1/16W J	
R362	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R831	NRSA63J-100X	MG RESISTOR	10Ω 1/16W J	
R363	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J		R832	NRSA63J-100X	MG RESISTOR	10Ω 1/16W J	

△ Symbol No.	Part No.	Part Name	Description	Local
R833	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J	
R834	NRSA63J-182X	MG RESISTOR	1.8kΩ 1/16W J	
R837	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R838	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R839	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R840	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R841	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R842	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R843	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R844	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R890	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R891	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R899	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L311	NQL044K-220X	COIL	22uH K	
L801	NQR0597-001X	EMI FILTER		
L802	NQR0597-001X	EMI FILTER		
L803	NQR0597-001X	EMI FILTER		
L804	NQR0597-001X	EMI FILTER		
CN101	QGF0523F3-24W	CONNECTOR	FFC/FPC (1-24)	
CN201	QGF1016F8-08W	CONNECTOR	FFC/FPC (1-8)	
CN451	QGF1016F8-15W	CONNECTOR	FFC/FPC (1-15)	
CN452	QGA2001F6-02X	CONNECTOR	W-B (1-2)	
CN453	QGA2001F6-03X	CONNECTOR	W-B (1-3)	
CN701	QGF1016C6-28W	CONNECTOR	FFC/FPC (1-28)	
CN702	QGF1016C6-18W	CONNECTOR	FFC/FPC (1-18)	
CN703	QGF1016C6-05W	CONNECTOR	FFC/FPC (1-5)	
CN704	QGA2001F6-05X	CONNECTOR	W-B (1-5)	
CN801	QGF1016C6-05W	CONNECTOR	FFC/FPC (1-5)	
J801	NNZ0161-001	CONNECTOR		
K101	NQR0502-001X	FERRITE BEADS		
K125	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K301	NQR0502-001X	FERRITE BEADS		
K302	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K303	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K304	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K305	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K306	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K307	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K308	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K309	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K310	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K317	NQR0022-002X	FERRITE BEADS		
K318	NQR0022-002X	FERRITE BEADS		
K373	NQR0360-002X	FERRITE BEADS		
K374	NQR0360-002X	FERRITE BEADS		
K375	NQR0360-002X	FERRITE BEADS		
K376	NQR0360-002X	FERRITE BEADS		
K378	NQR0360-002X	FERRITE BEADS		
K379	NQR0360-002X	FERRITE BEADS		
K380	NQR0360-002X	FERRITE BEADS		
K381	NQR0360-002X	FERRITE BEADS		
K384	NQR0360-002X	FERRITE BEADS		
K385	NQR0360-002X	FERRITE BEADS		
K386	NQR0360-002X	FERRITE BEADS		
K387	NQR0360-002X	FERRITE BEADS		
K388	NQR0360-002X	FERRITE BEADS		
K454	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K455	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K456	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K501	NQR0502-001X	FERRITE BEADS		
K701	NQR0022-005X	FERRITE BEADS		
K702	NQR0022-005X	FERRITE BEADS		
K703	NQR0022-005X	FERRITE BEADS		
K704	NQR0022-005X	FERRITE BEADS		
K705	NQR0022-005X	FERRITE BEADS		
K706	NQR0022-005X	FERRITE BEADS		
K707	NQR0022-002X	FERRITE BEADS		
K708	NQR0022-002X	FERRITE BEADS		
K709	NQR0022-002X	FERRITE BEADS		
K710	NQR0022-002X	FERRITE BEADS		
K711	NQR0022-002X	FERRITE BEADS		
K712	NQR0022-005X	FERRITE BEADS		
K713	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K714	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K721	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K722	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	

△ Symbol No.	Part No.	Part Name	Description	Local
K801	NQR0502-001X	FERRITE BEADS		
K802	NQR0502-001X	FERRITE BEADS		
K803	NQR0502-001X	FERRITE BEADS		
K804	NQR0502-001X	FERRITE BEADS		
K805	NQR0502-001X	FERRITE BEADS		
K812	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
K813	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
RN551	NRZ0034-330W	NET RESISTOR	33Ω 1/32W J x4	
RN552	NRZ0034-330W	NET RESISTOR	33Ω 1/32W J x4	
RN553	NRZ0034-330W	NET RESISTOR	33Ω 1/32W J x4	
RN554	NRZ0034-330W	NET RESISTOR	33Ω 1/32W J x4	
X301	NAX0741-001X	CRYSTAL		
X451	NAX0248-001X	C OSCILLATOR		

DVD loading board

Block No. [0][5]


△ Symbol No.	Part No.	Part Name	Description	Local
IC1	LB1641	IC		
IC2	LB1641	IC		
D1	MTZJ6.2A-T2	Z DIODE		
C1	QKBC1CM-107Z	E CAPACITOR	100uF 16V M	
C2	QCB1HK-104Y	C CAPACITOR	0.1uF 50V K	
C3	QFLC1HJ-103Z	M CAPACITOR	0.01uF 50V J	
C5	QFLC1HJ-103Z	M CAPACITOR	0.01uF 50V J	
C6	QCB1HK-104Y	C CAPACITOR	0.1uF 50V K	
C7	QCB1HK-104Y	C CAPACITOR	0.1uF 50V K	
CN1	QGF1036F2-15	CONNECTOR	FFC/FPC (1-15)	
CN2	QGB2024K1-07S	CONNECTOR	B-B (1-7)	
CN3	QGB2024J1-07S	CONNECTOR	B-B (1-7)	
SW1	QSW0844-002	PUSH SWITCH		
SW2	QSW0844-002	PUSH SWITCH		
SW3	QSW0844-002	PUSH SWITCH		
SW4	QSW0844-002	PUSH SWITCH		
SW5	QSW0844-002	PUSH SWITCH		
SW6	QSW0854-002	PUSH SW		
SW7	QSW0886-002	DETECT SWITCH		
SW8	QSW0923-001	DETECT SWITCH		

Packing materials and accessories parts list

(TH-C60J,TH-C60C)

Block No. M 4 M M

No additional / supplemental order of WARRANTY CARDS are available.

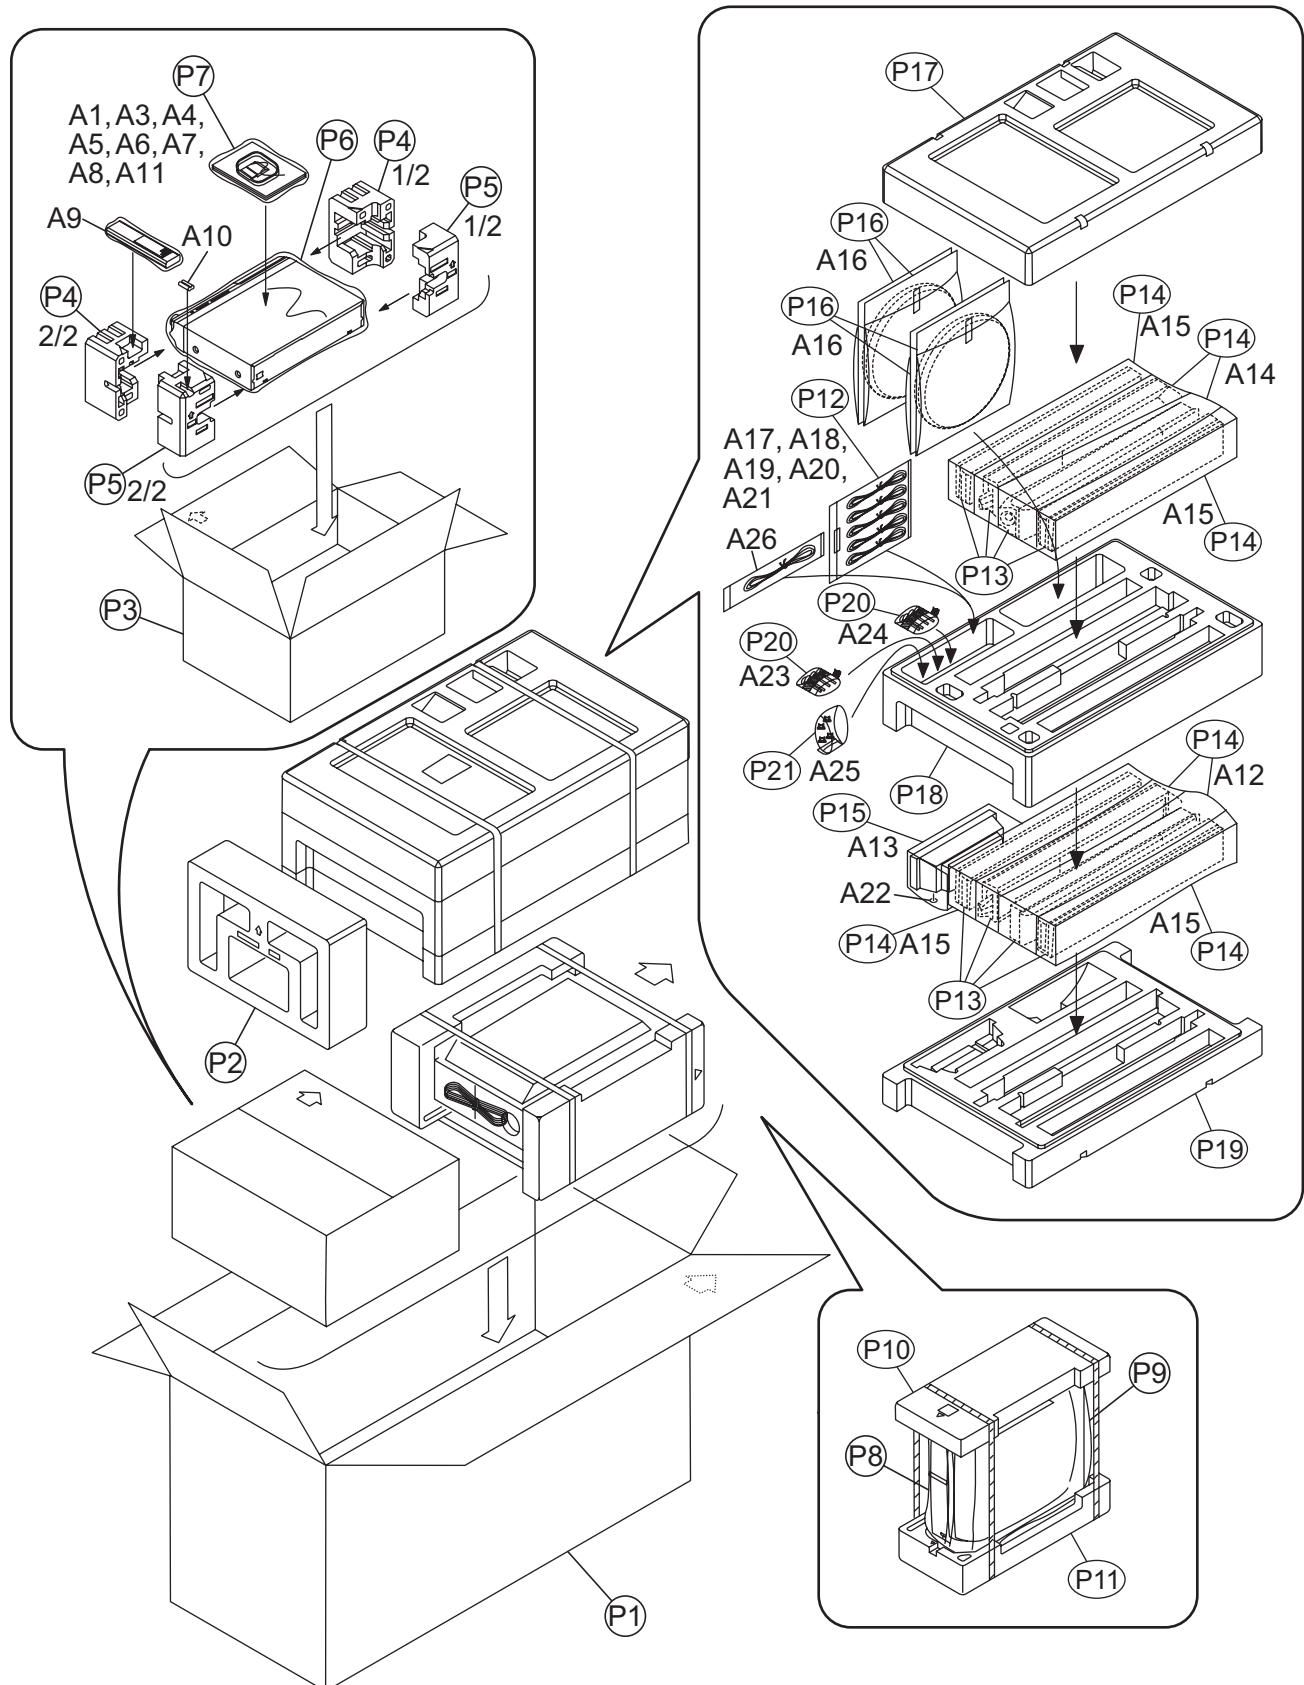

Packing and Accessories (TH-C60J,TH-C60C)

Block No. [M][4][M][M]


△	Symbol No.	Part No.	Part Name	Description	Local
	A 1	LVT1504-003B	INST BOOK	ENG	C60J
	A 1	LVT1504-004B	INST BOOK	ENG FRE	C60C
	A 3	YU20333	SAFETY INST.		
	A 4	BT-51034-2	REGISTRATION CARD		C60J
	A 5	QAM0216-001	SIGNAL CORD		
△	A 6	QMPE180-183-JN	POWER CORD(US/CA)	1.83m BLACK	
	A 7	QAL0457-001	ANT.WIRE		
	A 8	QAL0014-003	AM LOOP ANT		
	A 9	RM-STHC61J	REMOCON UNIT		
	A 10	-----	BATTERY	(x2)	
	A 11	-----	WARRANTY CARD	BT-52006-2	C60C
	A 12	AB050049-01	SPEAKER BOX	FRONT(x2)	
	A 13	AB066004-01	SPEAKER BOX	CENTER	
	A 14	AB050050-01	SPEAKER BOX	SURROUND(x2)	
	A 15	9906600501	STAND ASSY	(x4)	
	A 16	9900035301	BASE ASSY	(x4)	
	A 17	6200045901	SPK CORD-C	CENTER	
	A 18	6200045911	SPK CORD-FR	FRONT RIGHT	
	A 19	6200045921	SPK CORD-FL	FRONT LEFT	
	A 20	6200045931	SPK CORD-SR	SURROUND RIGHT	
	A 21	6200045941	SPK CORD-SL	SURROUND LEFT	
	A 22	9000008411	FOOT	CENTER@SPK(x3)	
	A 23	7010954004	SCREW	(x4)	
	A 24	7010942006	SCREW	(x8)	
	A 25	6400018701	CORD CLAMP	(x4)	
	A 26	6200044901	DIN CABLE		
	P 1	LV36909-006A	MASTER CARTON		
	P 2	LV22328-001A	PACKING PAD		
	P 3	LV36596-013A	CARTON BOX		
	P 4	LV22308-001A	CUSHION (F)		
	P 5	LV22309-001A	CUSHION (R)		
	P 6	QPC05006515P	POLY BAG	50cm x 65cm	
	P 7	QPA02503503P	POLY BAG	25cm x 35cm	
	P 8	8500051881	MIRROR MAT		
	P 9	8500051901	POLY BAG		
	P 10	LV22292-001A	TOP CUSHION		
	P 11	LV22293-001A	BOTTOM CUSHION		
	P 12	8500032771	POLY BAG		
	P 13	8500062251	MIRROR MAT SHEET	(x8)	
	P 14	8500061661	POLY BAG	(x8)	
	P 15	8500061671	POLY BAG		
	P 16	8500062401	MIRROR MAT BAG	(x4)	
	P 17	LV11254-001A	CUSHION A		
	P 18	LV11254-002A	CUSHION B		
	P 19	LV11254-003A	CUSHION C		
	P 20	8500047141	POLY BAG	(x2)	
	P 21	8500035721	POLY BAG		

Packing materials and accessories parts list

(TH-C50J,TH-C50C)

Block No. M 5 M M

No additional / supplemental order of WARRANTY CARDS are available.

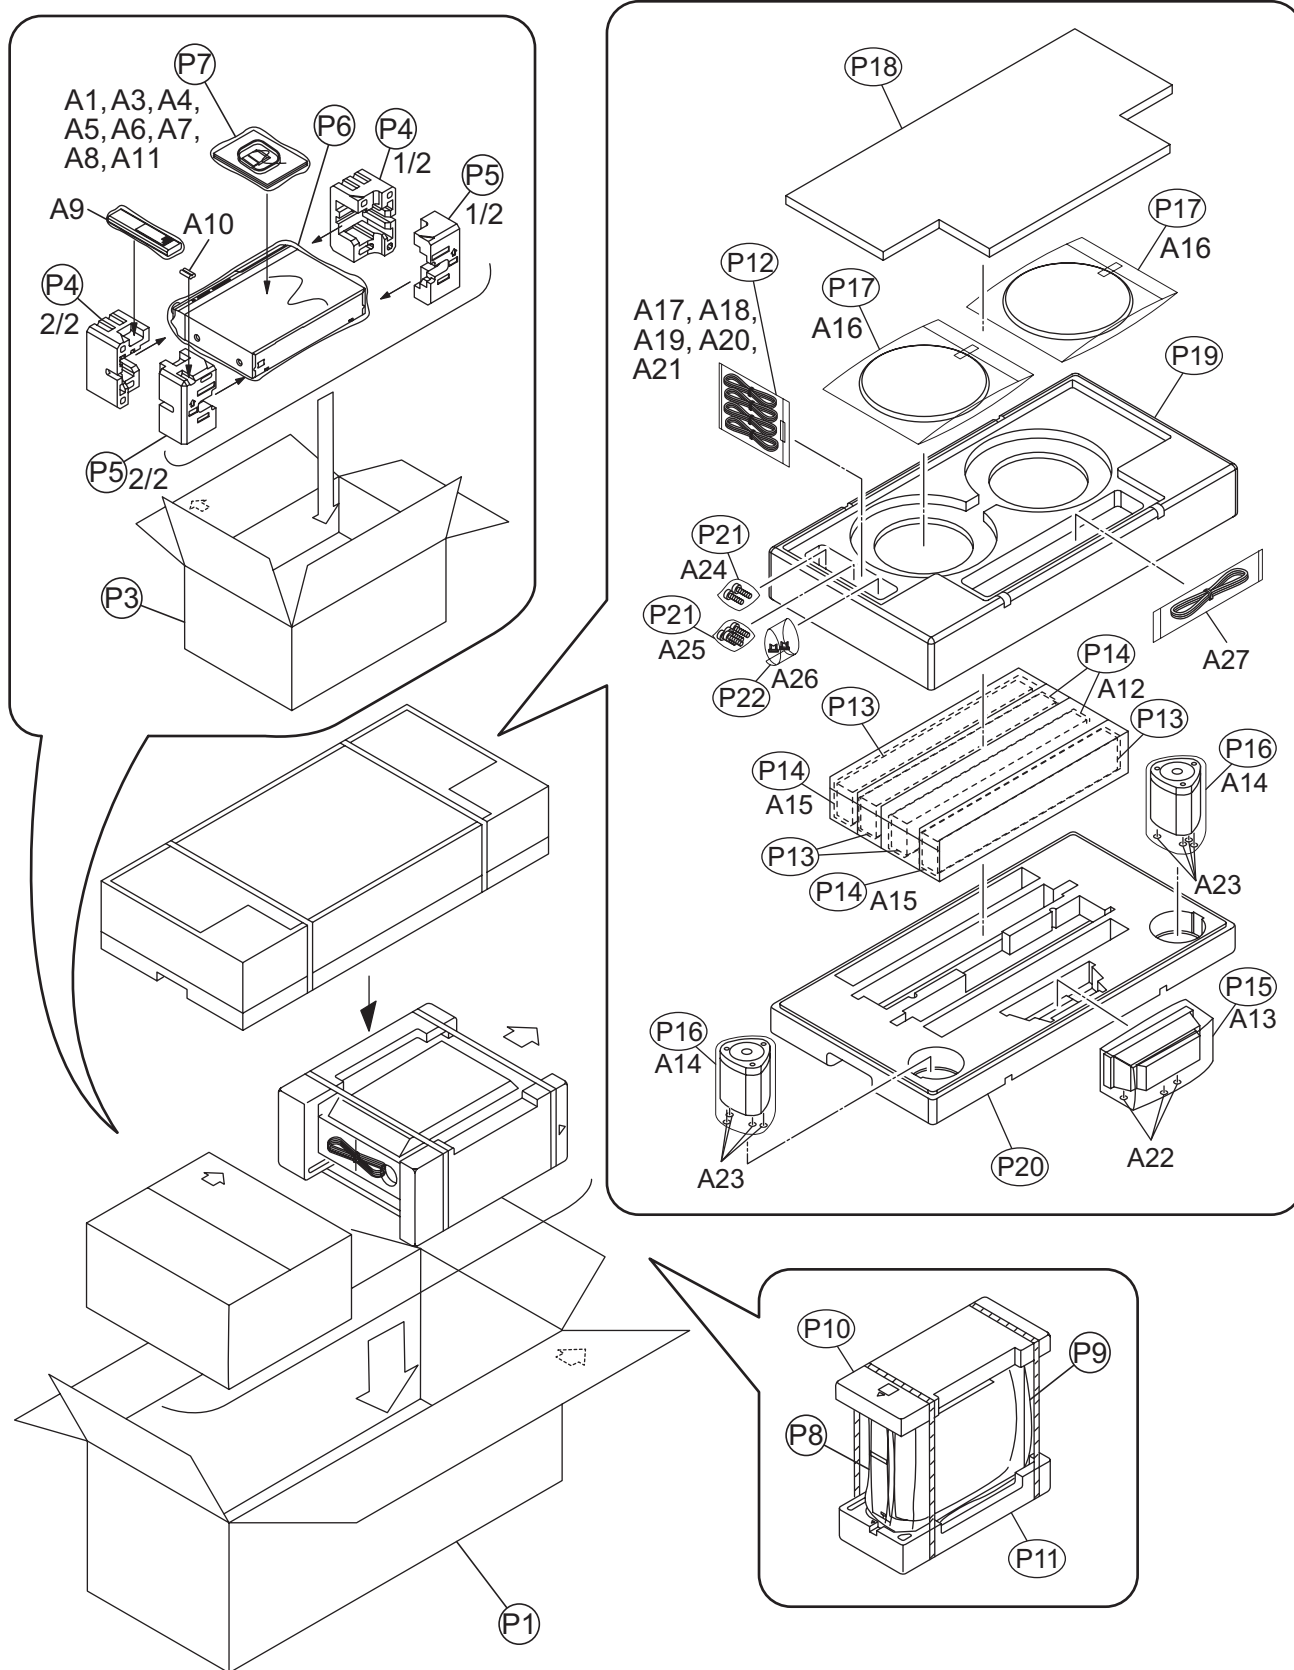

Packing and Accessories (TH-C50J,TH-C50C)

Block No. [M][5][M][M]

△	Symbol No.	Part No.	Part Name	Description	Local
	A 1	LVT1504-003B	INST BOOK	ENG	C50J
	A 1	LVT1504-004B	INST BOOK	ENG FRE	C50C
	A 3	YU20333	SAFETY INST.		
	A 4	BT-51034-2	REGISTRATION CARD		C50J
	A 5	QAM0216-001	SIGNAL CORD		
△	A 6	QMPE180-183-JN	POWER CORD(US/CA)	1.83m BLACK	
	A 7	QAL0457-001	ANT.WIRE		
	A 8	QAL0014-003	AM LOOP ANT		
	A 9	RM-STHC61J	REMOCON UNIT		
	A 10	-----	BATTERY	(x2)	
	A 11	-----	WARRANTY CARD	BT-52006-2	C50C
	A 12	AB050049-01	SPEAKER BOX	FRONT(x2)	
	A 13	AB066004-01	SPEAKER BOX	CENTER	
	A 14	AB080070-01	SPEAKER BOX	SURROUND(x2)	
	A 15	9906600501	STAND ASSY	(x2)	
	A 16	9900035301	BASE ASSY	(x2)	
	A 17	6200045901	SPK CORD-C	CENTER	
	A 18	6200045911	SPK CORD-FR	FRONT RIGHT	
	A 19	6200045921	SPK CORD-FL	FRONT LEFT	
	A 20	6200045931	SPK CORD-SR	SURROUND RIGHT	
	A 21	6200045941	SPK CORD-SL	SURROUND LEFT	
	A 22	9000008411	FOOT	CENTER SPK(x3)	
	A 23	9000008401	RUBBER CUSHION	SURROUND SPK(x8)	
	A 24	7010954004	SCREW	(x2)	
	A 25	7010942006	SCREW	(x4)	
	A 26	6400018701	CORD CLAMP	(x2)	
	A 27	6200044901	DIN CABLE		
	P 1	LV36908-005A	MASTER CARTON		
	P 3	LV36596-012A	CARTON BOX		
	P 4	LV22308-001A	CUSHION (F)		
	P 5	LV22309-001A	CUSHION (R)		
	P 6	QPC05006515P	POLY BAG	50cm x 65cm	
	P 7	QPA02503503P	POLY BAG	25cm x 35cm	
	P 8	8500051881	MIRROR MAT		
	P 9	8500051901	POLY BAG		
	P 10	LV22292-001A	TOP CUSHION		
	P 11	LV22293-001A	BOTTOM CUSHION		
	P 12	8500032771	POLY BAG		
	P 13	8500062251	MIRROR MAT SHEET	(x4)	
	P 14	8500061661	POLY BAG	(x4)	
	P 15	8500061671	POLY BAG		
	P 16	8500063101	MIRROR MAT BAG	(x2)	
	P 17	8500062401	MIRROR MAT BAG	(x2)	
	P 18	LV36793-001A	CUSHION		
	P 19	LV11253-001A	TOP CUSHION		
	P 20	LV11253-002A	BOTTOM CUSHION		
	P 21	8500047141	POLY BAG	(x2)	
	P 22	8500035721	POLY BAG		


Packing materials and accessories parts list

(TH-C40J, TH-C40C)

Block No.

M	6	M	M
---	---	---	---

No additional / supplemental order of WARRANTY CARDS are available.

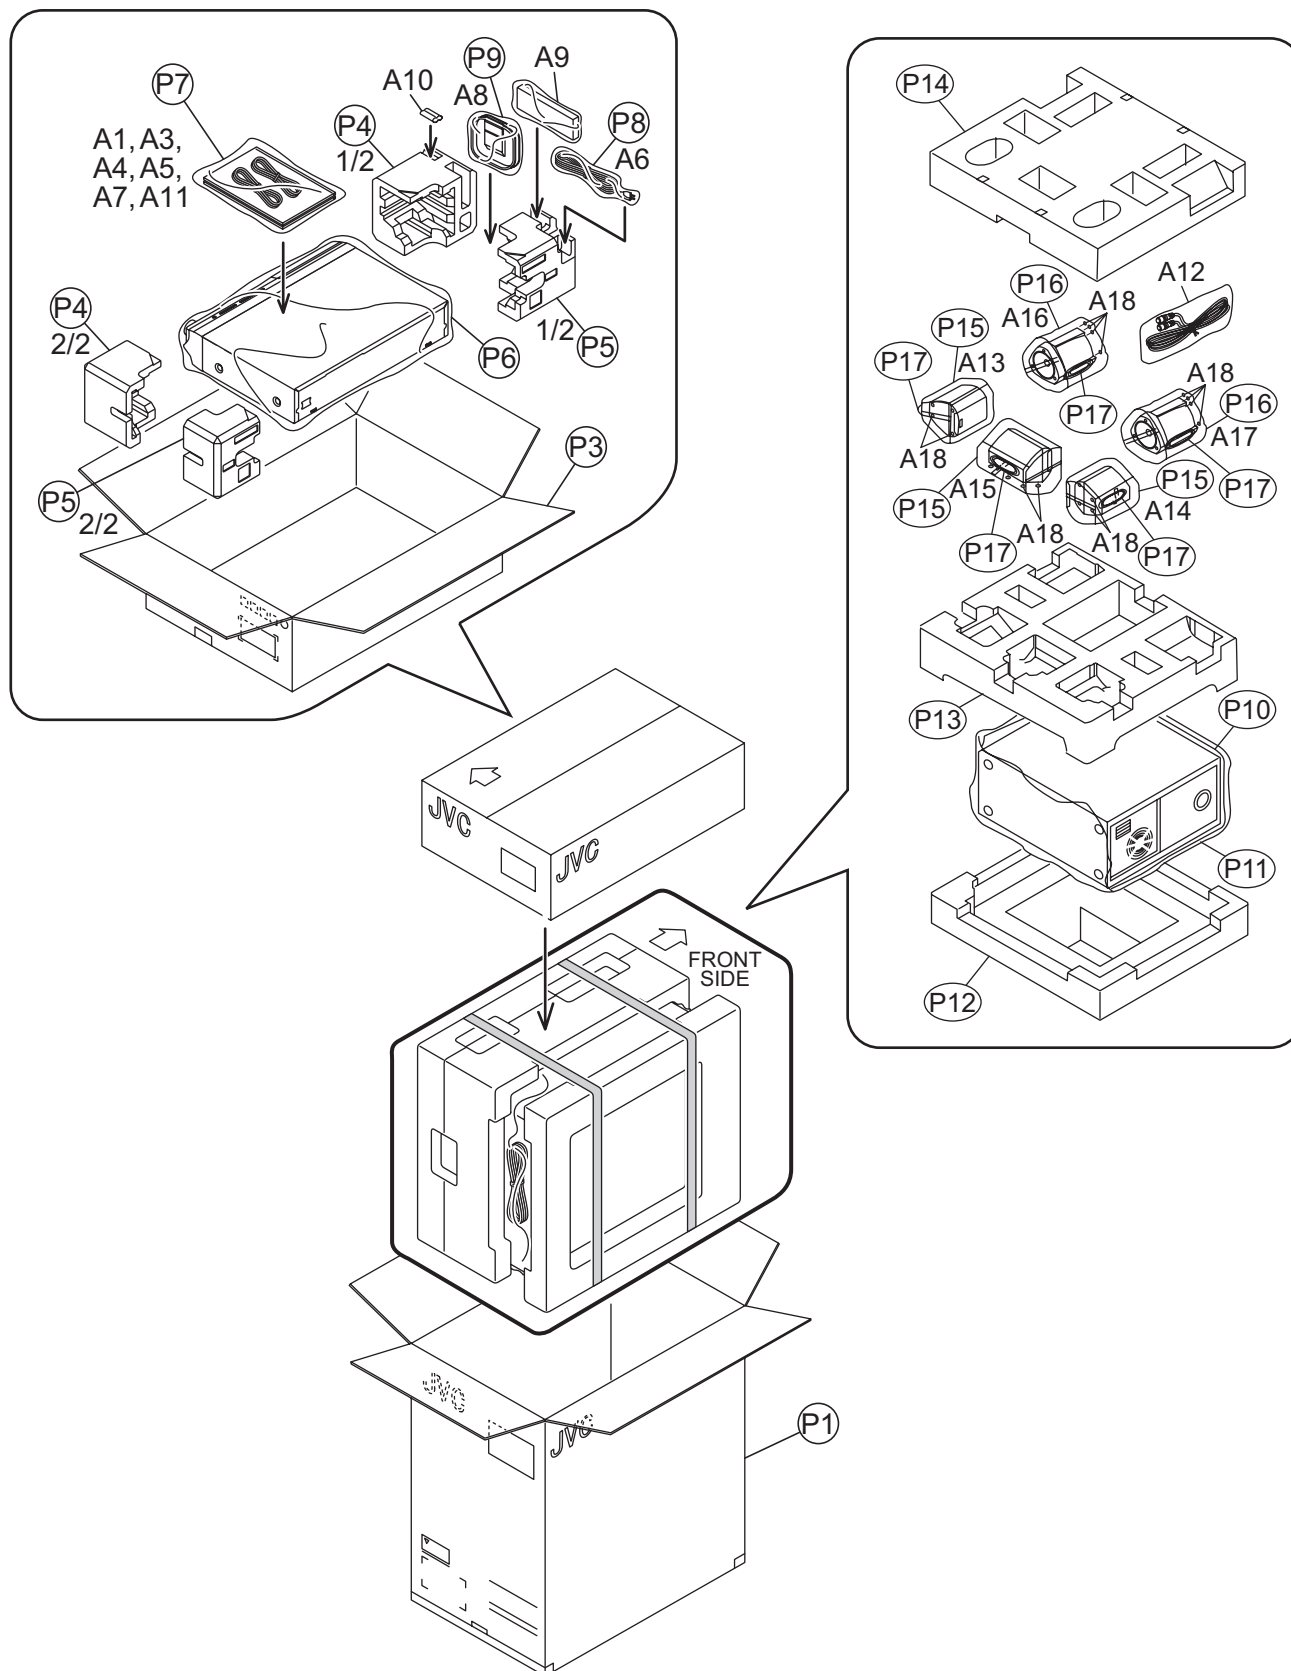

Packing and Accessories (TH-C40J,TH-C40C)

Block No. [M][6][M][M]

△	Symbol No.	Part No.	Part Name	Description	Local
	A 1	LVT1504-003B	INST BOOK	ENG	C40J
	A 1	LVT1504-004B	INST BOOK	ENG FRE	C40C
	A 3	YU20333	SAFETY INST.		
	A 4	BT-51034-2	REGISTRATION CARD		C40J
	A 5	QAM0216-001	SIGNAL CORD		
△	A 6	QMPE180-183-JN	POWER CORD(US/CA)	1.83m BLACK	
	A 7	QAL0457-001	ANT.WIRE		
	A 8	QAL0014-003	AM LOOP ANT		
	A 9	RM-STHC61J	REMOCON UNIT		
	A 10	-----	BATTERY	(x2)	
	A 11	-----	WARRANTY CARD	BT-52006-2	C40C
	A 12	6200044901	DIN CABLE		
	A 13	AB080073-02	SPEAKER BOX	FRONT LEFT	
	A 14	AB080073-01	SPEAKER BOX	FRONT RIGHT	
	A 15	AB080074-01	SPEAKER BOX	CENTER	
	A 16	AB080072-02	SPEAKER BOX	SURROUND LEFT	
	A 17	AB080072-01	SPEAKER BOX	SURROUND RIGHT	
	A 18	9000008401	RUBBER CUSHION	(x20)	
	P 1	LV36907-009A	MASTER CARTON		
	P 3	LV36596-011A	CARTON BOX		
	P 4	LV22251-001A	CUSHION(F)		
	P 5	LV22252-001A	CUSHION(R)		
	P 6	QPC05006515P	POLY BAG	50cm x 65cm	
	P 7	QPA02503503P	POLY BAG	25cm x 35cm	
	P 8	QPA01003003	POLY BAG	10cm x 30cm	
	P 9	QPA01702503P	POLY BAG	17cm x 25cm	
	P 10	8500051881	MIRROR MAT		
	P 11	8500051901	POLY BAG		
	P 12	LV11261-001A	CUSHION A		
	P 13	LV11261-002A	CUSHION B		
	P 14	LV11261-003A	CUSHION C		
	P 15	8500051961	POLY BAG	FRONT/CENTER SPK(x3)	
	P 16	8500043421	POLY BAG	SURROUND SPK(x2)	
	P 17	8500052241	POLY BAG	SPK CORD(x5)	


JVC

SCHEMATIC DIAGRAMS

DVD DIGITAL THEATER SYSTEM

TH-C60J, TH-C60C TH-C50J, TH-C50C TH-C40J, TH-C40C

CD-ROM No.SML200605

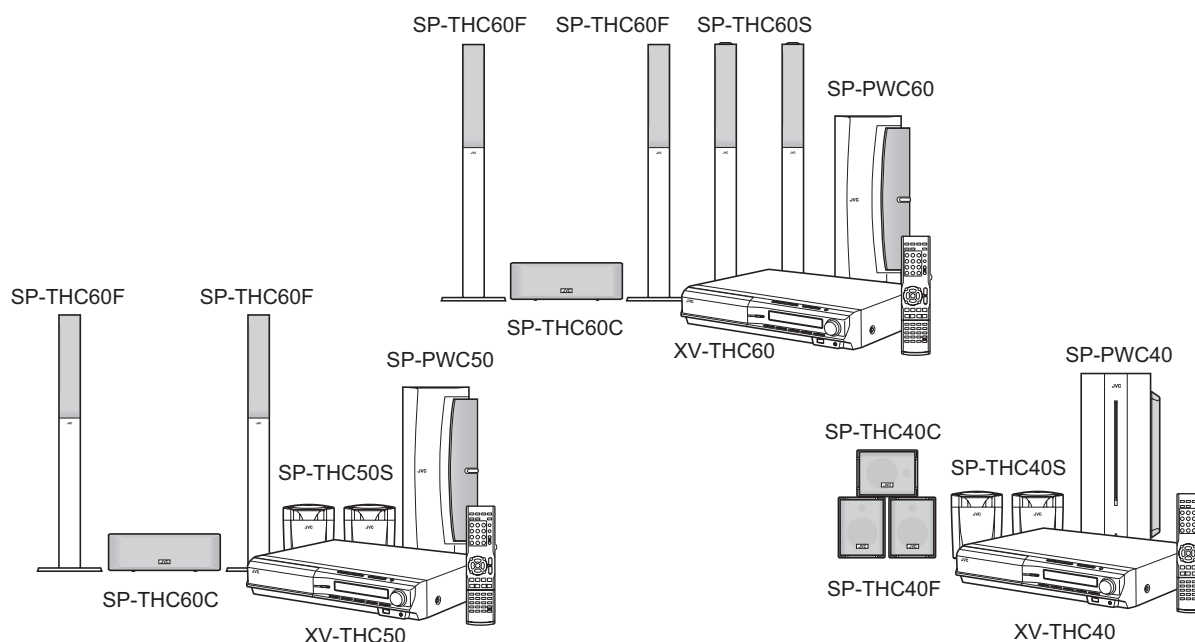

AV COMPU LINK

Digital Direct Progressive Scan

Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)

Contents

Block diagrams	2-1
Standard schematic diagrams	2-3
Printed circuit boards	2-25 to 32



In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (■), diode (▬) and ICP (●) or identified by the "A" mark nearby are critical for safety.

< MEMO >


<Main body section>



<Subwoofer section>

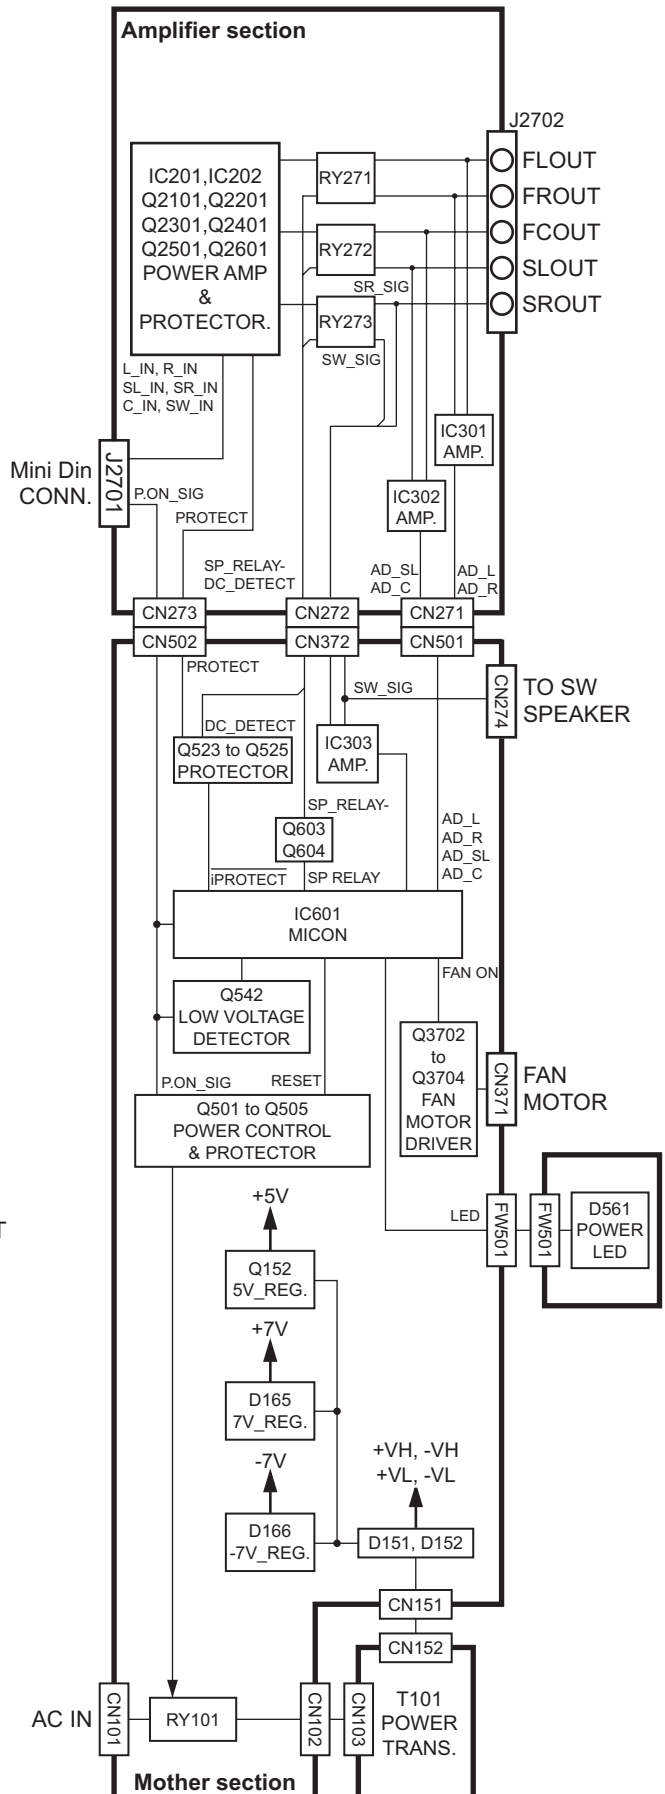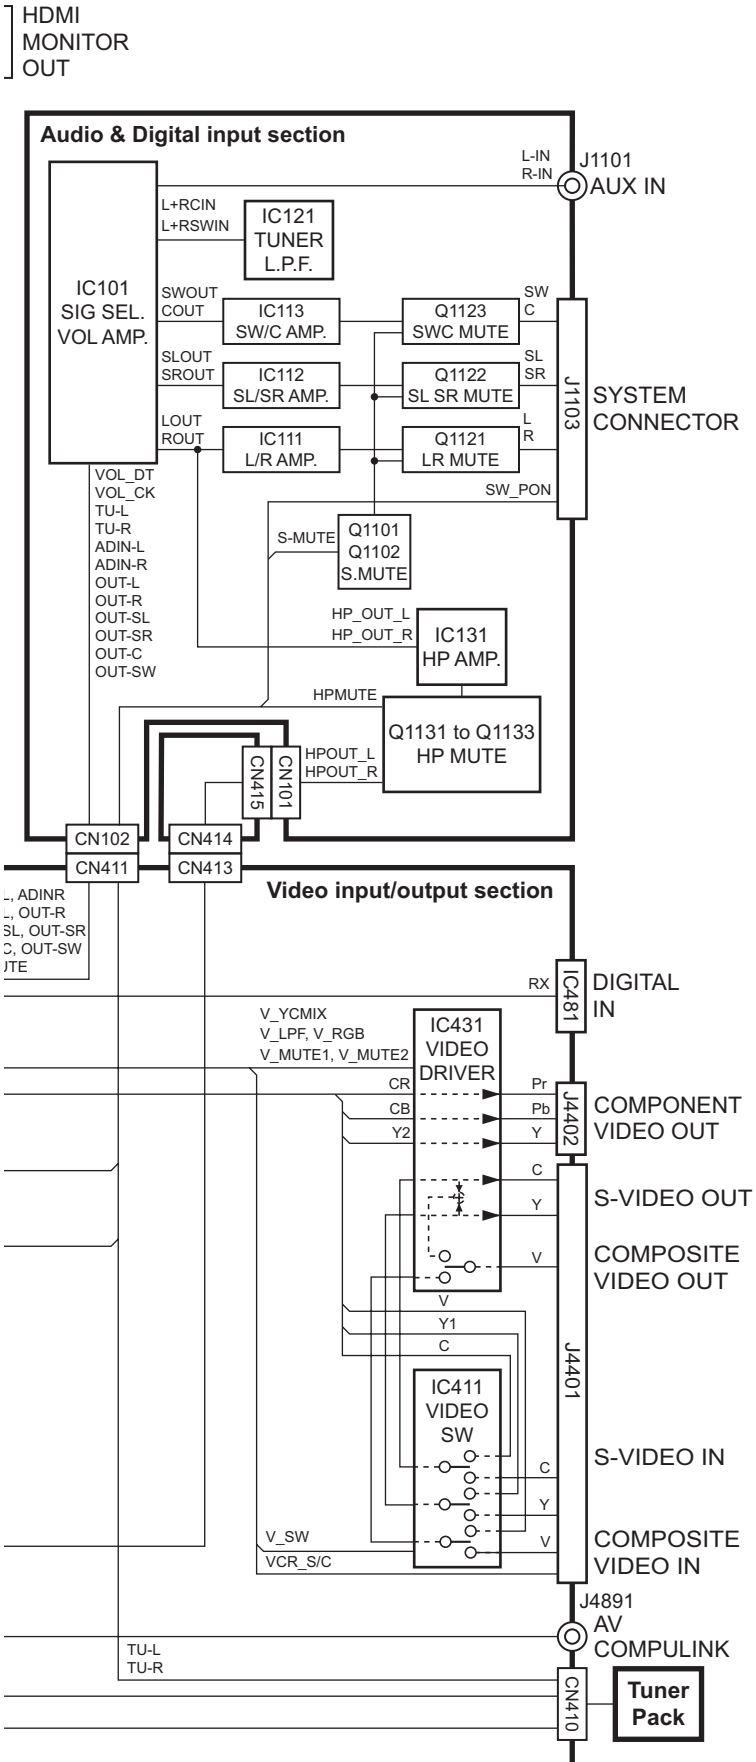

■ Power section




PARTS LIST

Ver. REF No.	ADDRESS	D	J/C 20,30	J/C 40,50,60	UY/UW/UJ/UP US/UX/UG/UT AVEE	UF
*C907	(B-5)		QETM2DM-157	QETM2DM-157	QETM2GM-107	QETM2GM-107
*D903	(B-7)		QUY150-050Y BUS WIRE:5mm	QUY150-050Y BUS WIRE:5mm	20NFA60-FC5	20NFA60-FC5
*C952	(B-8)		QCZ0136-101Z	QCZ0136-101Z	QCZ0136-102Z	QCZ0136-102Z
*R957	(B-9)		NONE	NONE	NRSA63J-273X	NRSA63J-273X
*R966	(B-10)		NRSA63J-223X		NONE	
*R921	(C-3)		QRZ9037-335	QRZ9037-335	NONE	NONE
*P901	(B-2)		QNC0082-001	QNC0082-001	QNC0081-001	QNC0081-001
*B4146	(B-6)		QUY150-050Y	QUY150-050Y	NONE	NONE
*R963	(F-8)		NRSA63D-121X	NRSA63D-151X	NRSA63D-151X	NRSA63D-151X
*T901	(A-7)		QQS0371-001	QQS0371-001	QQS0371-001	QQS0383-001

VERSION CODES

J :U.S.A.
C :CANADA
B :GREAT BRITAIN
UW: BRAZIL/MEXICO/PERU
UY: ARGENTINE
UJ: USA MILITARY BASE
A : AUSTRALIA
US : SINGAPORE
UG: TURKEY/EGYPT/SOUTH AFRICA
UN: INDONESIA
UX: SAUDI ARABIA
UT: TAIWAN

 Parts are safety assurance parts. When replacing those parts make sure to use the specified one.


*
FOR POWER CONSUMPTION C/M:

Micon section

TO POWER SUPPLY
LVS10488-005A
LVA10635-A1

TO DVD BLOCK
FMU-SB1
LVS10494-001A or
LVA10655-101A

FMU-SM3
LVS10483-001
LVA10633-101

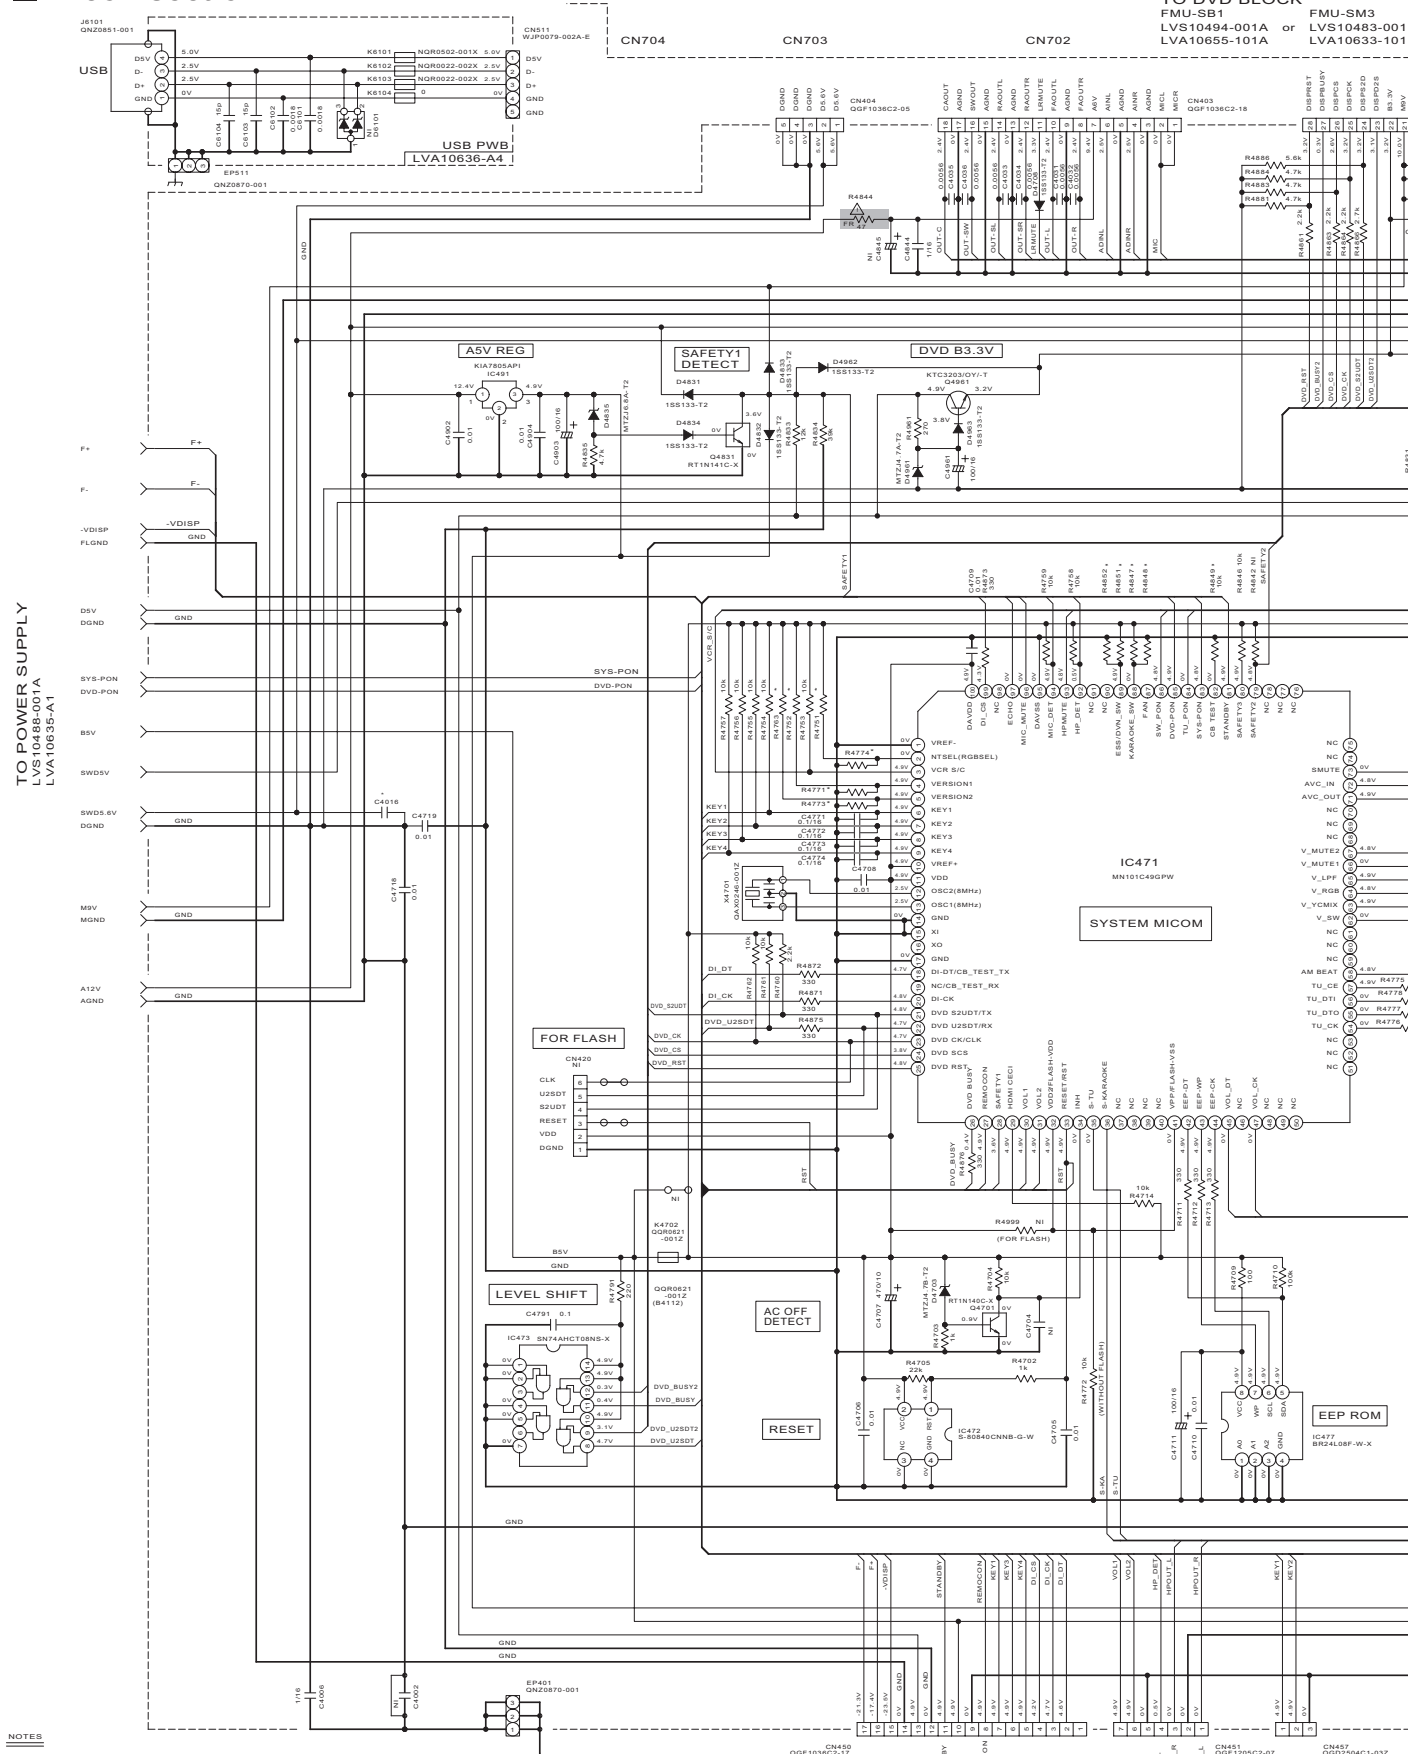

- NOTES
- VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER WITHOUT INPUT SIGNAL.
CONDITION --- A DVD disc in the Tray 1, and STOP mode.
 - UNLESS OTHERWISE SPECIFIED.
ALL RESISTORS ARE 1/16W ±5% METAL GLAZE RESISTOR, OR 0.5% METAL GLAZE RESISTOR.
ALL CAPACITORS ARE 50V, 25V, 16V, 10V or 6.3V CERAMIC CAPACITOR
ALL RESISTANCE VALUES ARE IN OHM(Ω). ALL CAPACITANCE VALUES ARE IN μF(p=pF).
ALL E-CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE(μF) / RATED VOLTAGE (V).
ALL INDUCTANCE VALUES ARE IN μH(m=mH).
 - NI STANDS FOR NOT INSERTED PARTS.

TO FRONT
LVS10488-005A
LVA10636-A2

TO TOP KEY
FW521
LVS10488-005A
LVA10635-A2


J-SB1		FMU-SM3
10494-001A	or	LVS10483-001A
10655-101A		LVA10633-101A


FMU-SM3
LVS10483-001A
LVA10633-101A

CN701


*HDMI

TO TUNER
QAU0412-001

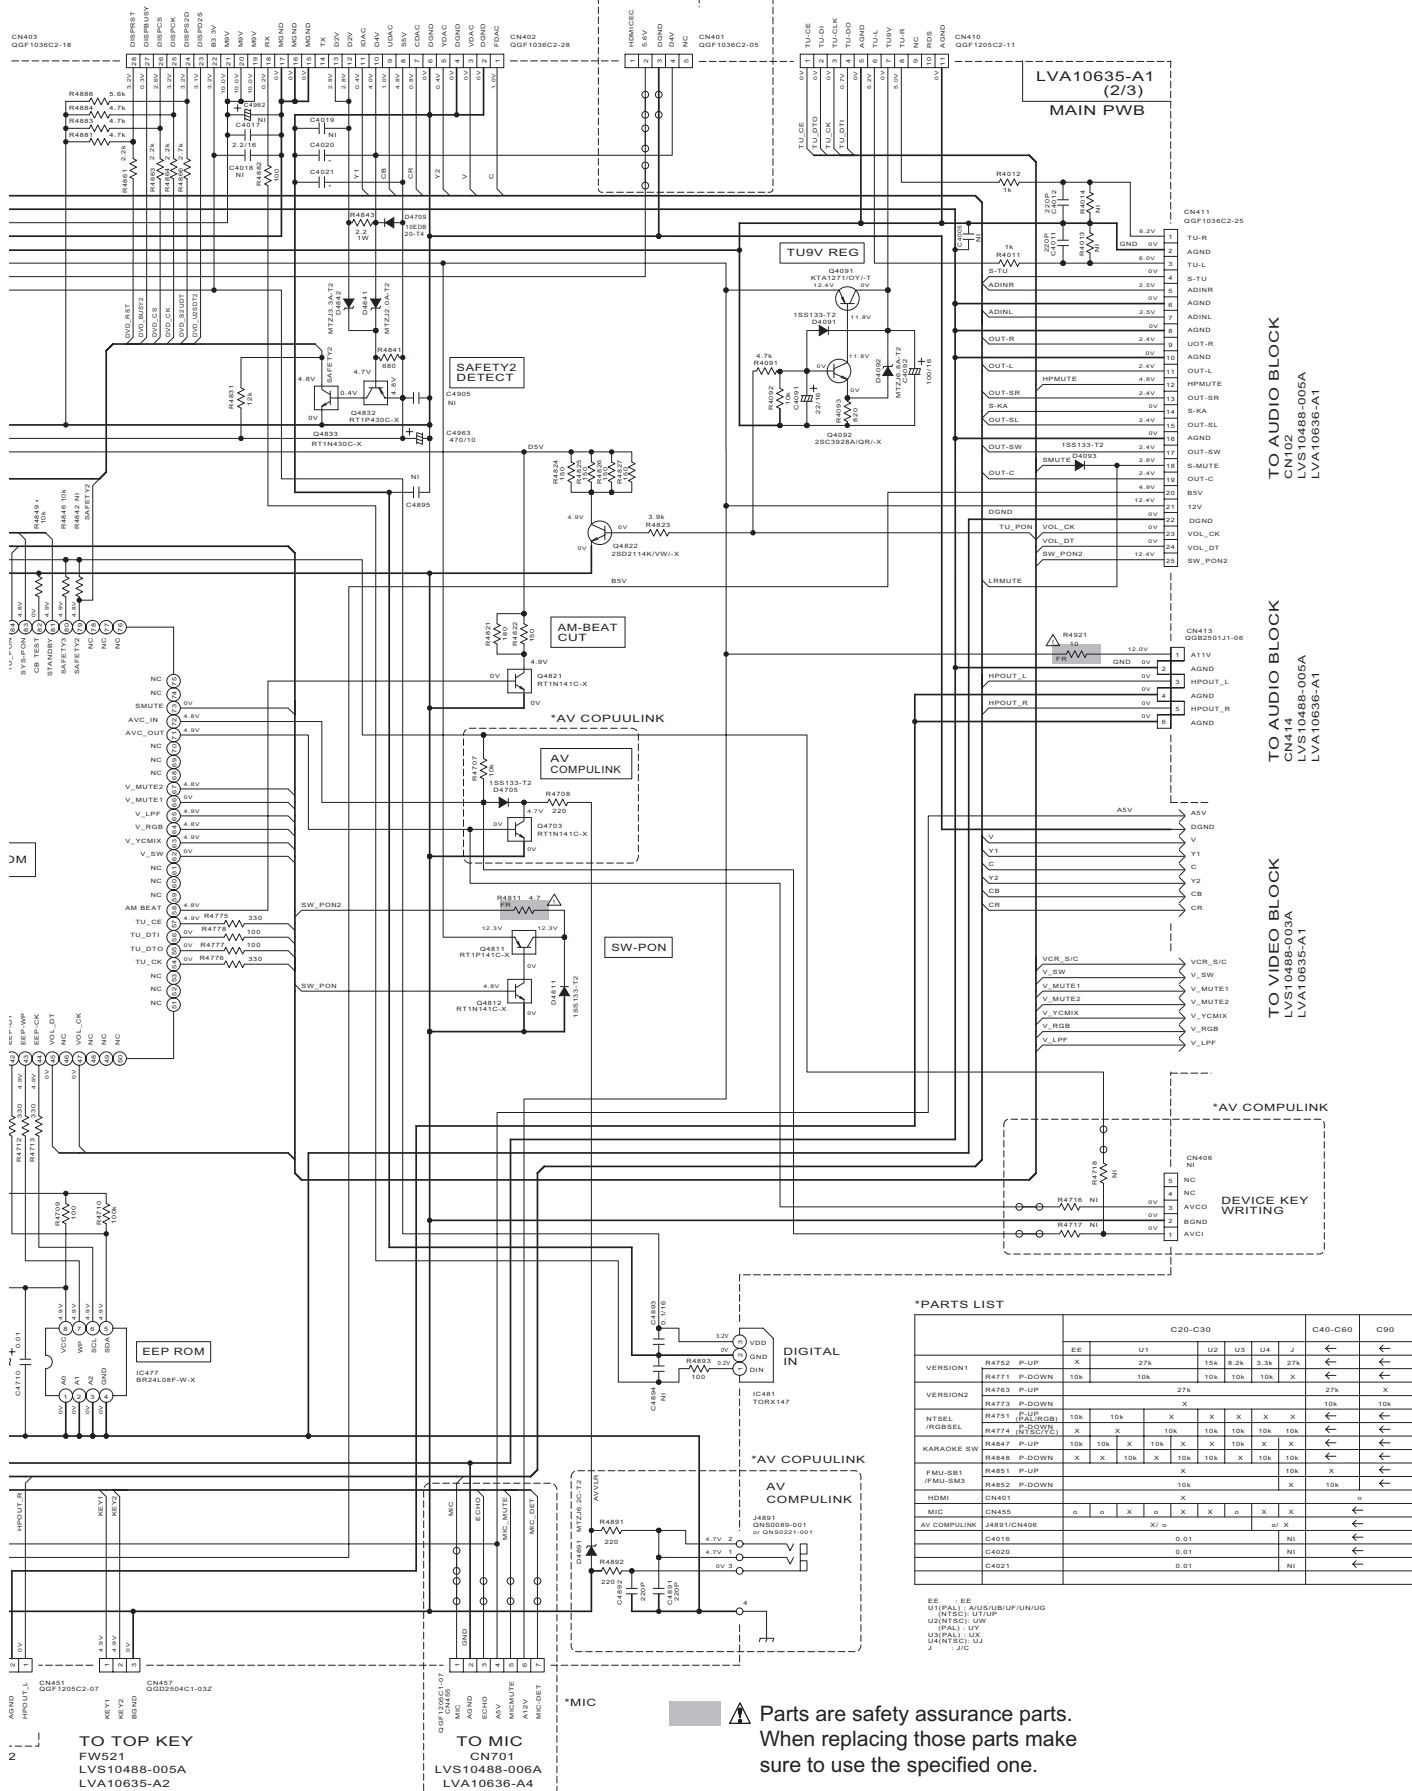

 Parts are safety assurance parts. When replacing those parts make sure to use the specified one.

Audio section

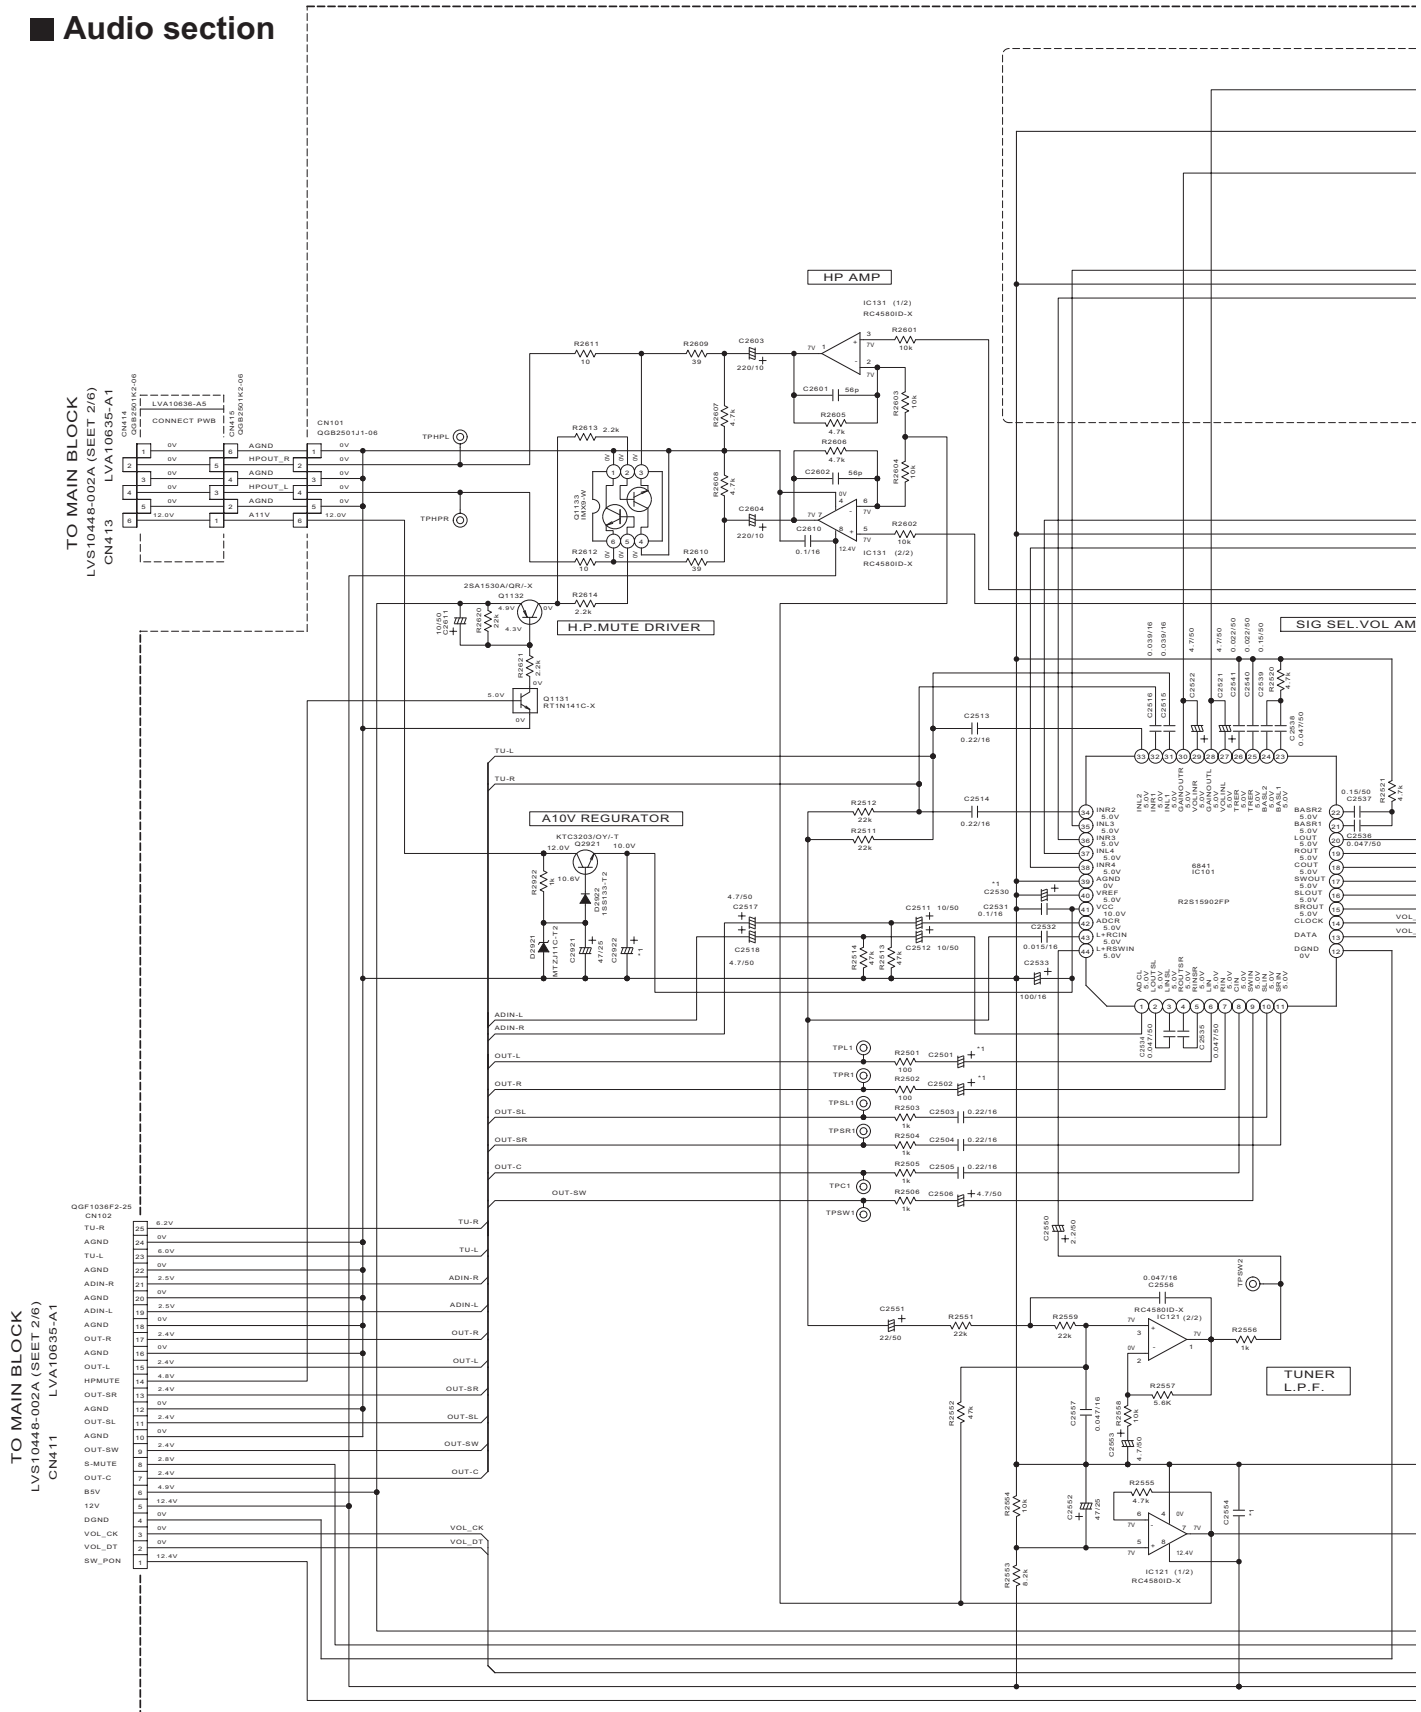


NOTES

- VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER WITHOUT INPUT SIGNAL.
CONDITION --- A CD disc in the Tray 1, and PLAY mode.
- UNLESS OTHERWISE SPECIFIED:
ALL RESISTORS ARE 1/16W $\pm 5\%$ METAL GLAZE RESISTOR, OR 0.5% METAL GLAZE RESISTOR.
ALL CAPACITORS ARE 50V, 25V, 16V, 10V or 6.3V CERAMIC CAPACITOR.
ALL RESISTANCE VALUES ARE IN Ω (1).
ALL CAPACITANCE VALUES ARE IN μF (p.p.F).
ALL E.CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE(μF)/RATED VOLTAGE (V).
ALL INDUCTANCE VALUES ARE IN μH (m.m.H).
- NI STANDS FOR NOT INSERTED PARTS.


*1 PARTS LIST

	R1158 R1159	R1162 R1163	R1166	R1167	R1173 R1174	C1170 C1171 C1172	C1446	C2554
XV-THC20/26	10k	68k	10k	18k	100k	0.01/50	0.0022	0.1/50
XV-THC30/40	10k	10k	10k	18k	100k	0.01/50	0.0022	0.1/50
XV-THC50/43	10k	10k	15k	10k	100k	1/16	0.001	1/16
XV-THC60/67	10k	-	15k	9.1k	3.9k	1/16	0.001	1/16

*2 USE C90

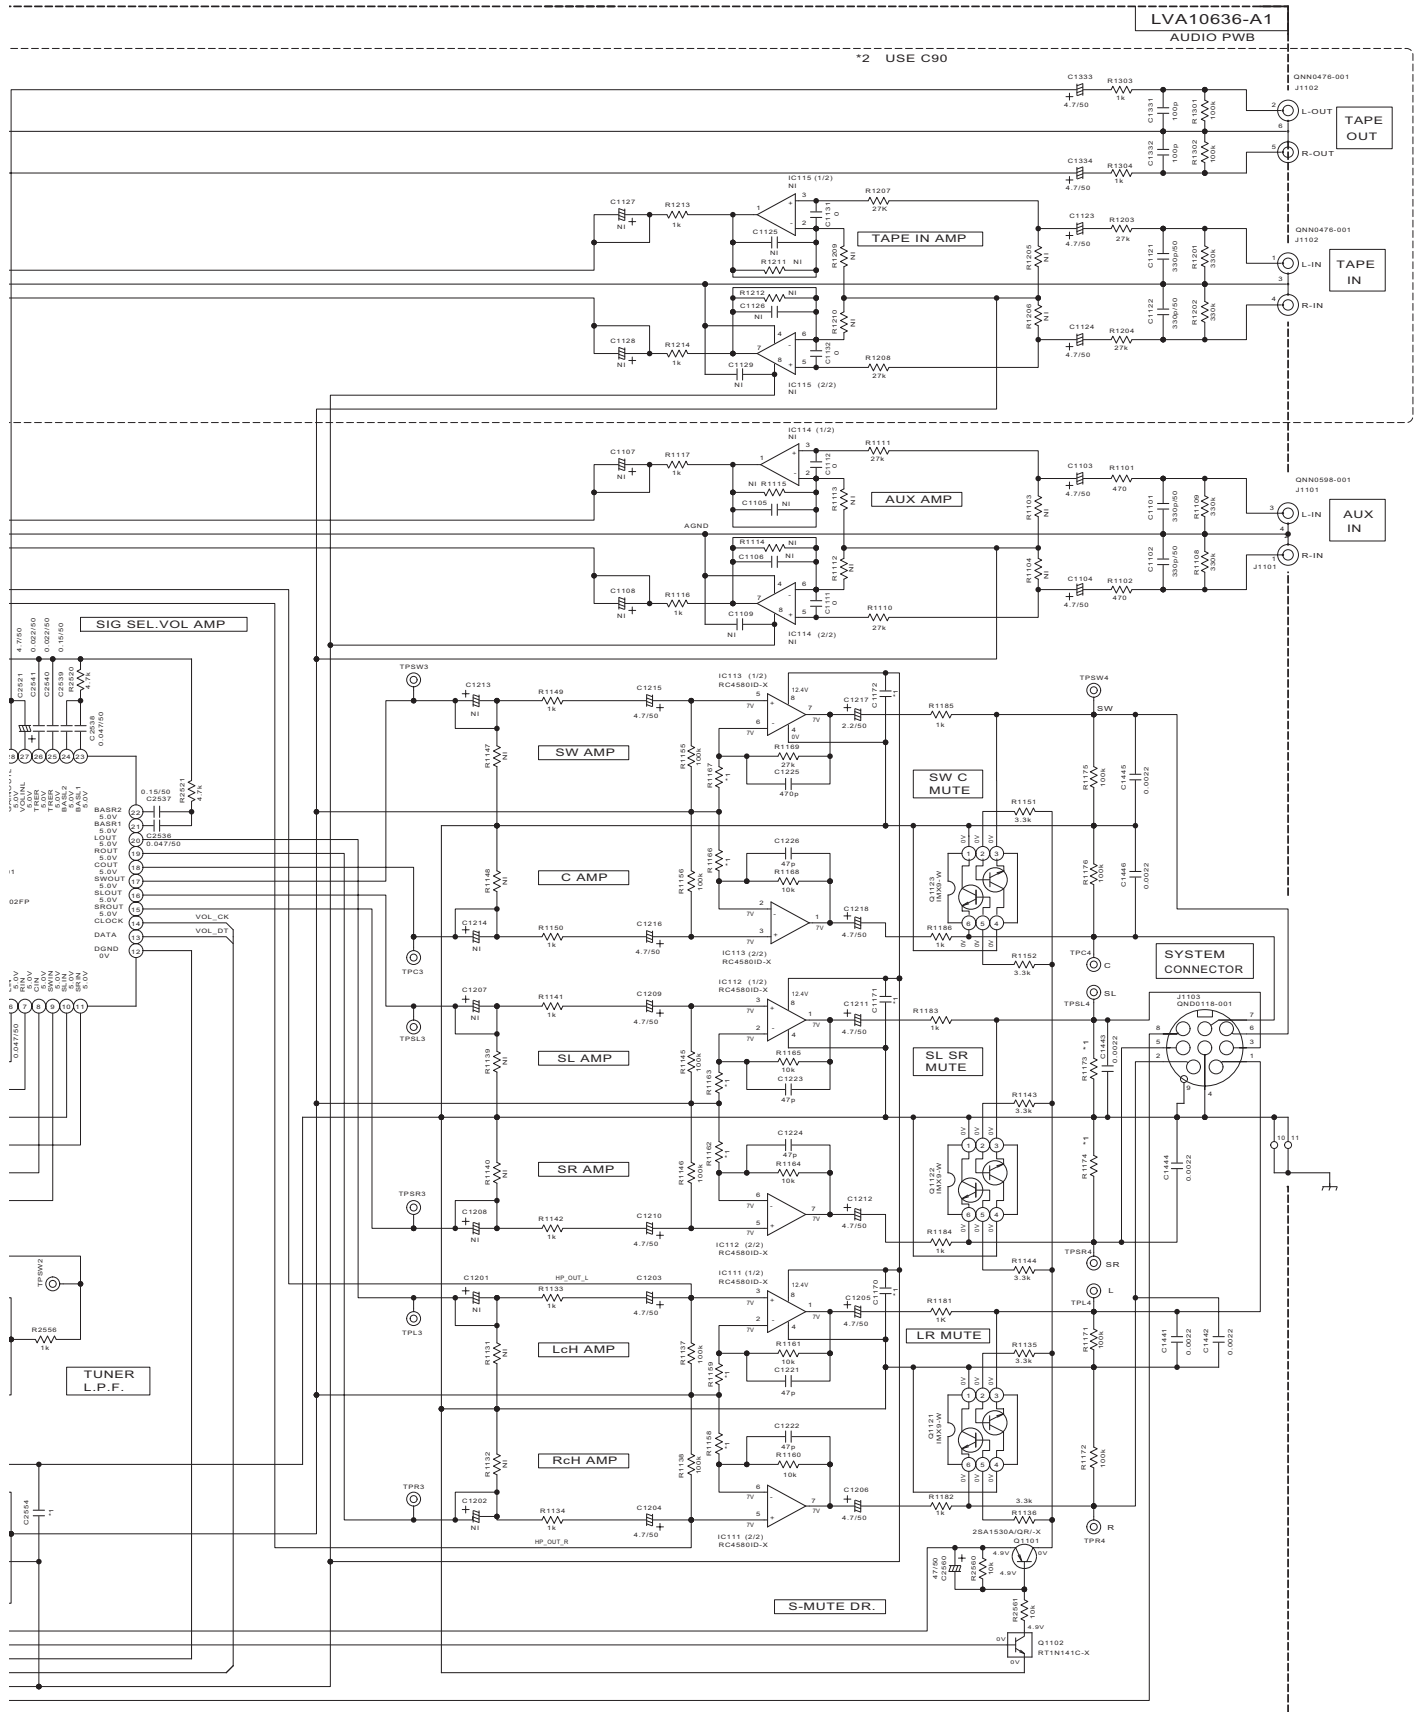


■ Front section



1. VOLTAGES ARE DC-MEASURED WITH A DI
CONDITION --- A CD disc in the Tr

2. UNLESS OTHERWISE SPECIFIED.

ALL RESISTORS ARE 1/16W $\pm 5\%$ METAL
ALL CAPACITORS ARE 50V, 25V, 16V, 1
ALL RESISTANCE VALUES ARE IN OHM(
ALL CAPACITANCE VALUES ARE IN μ F(p
ALL E.CAPACITORS ARE SHOWN IN THE
ALL INDUCTANCE VALUES ARE IN μ H(m

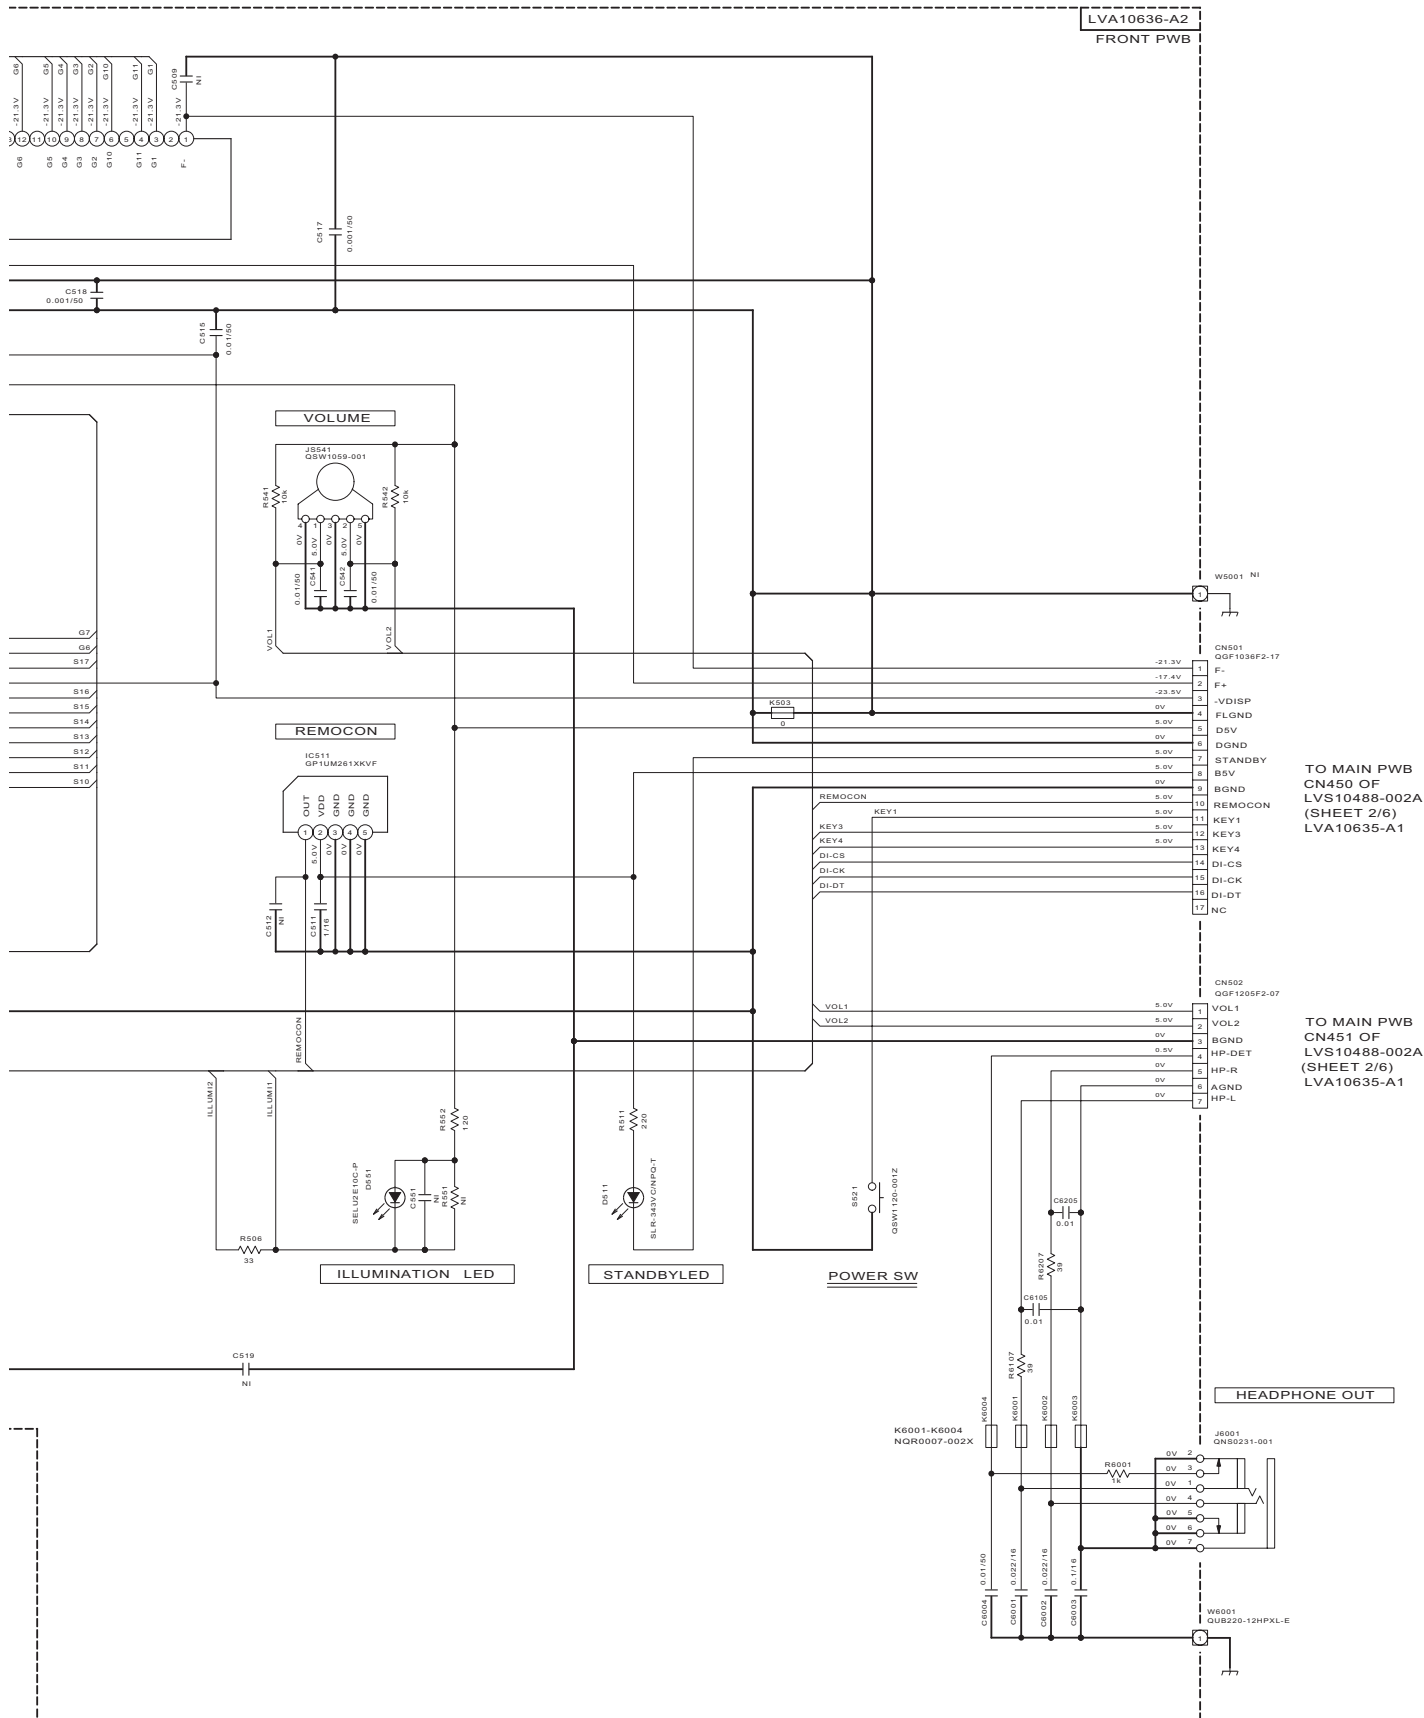


■ Video section

LVA10635-A1 (3/3)


MAIN PWB

TO MICOM BLOCK
LVS10488-002A
LVA10635-A1

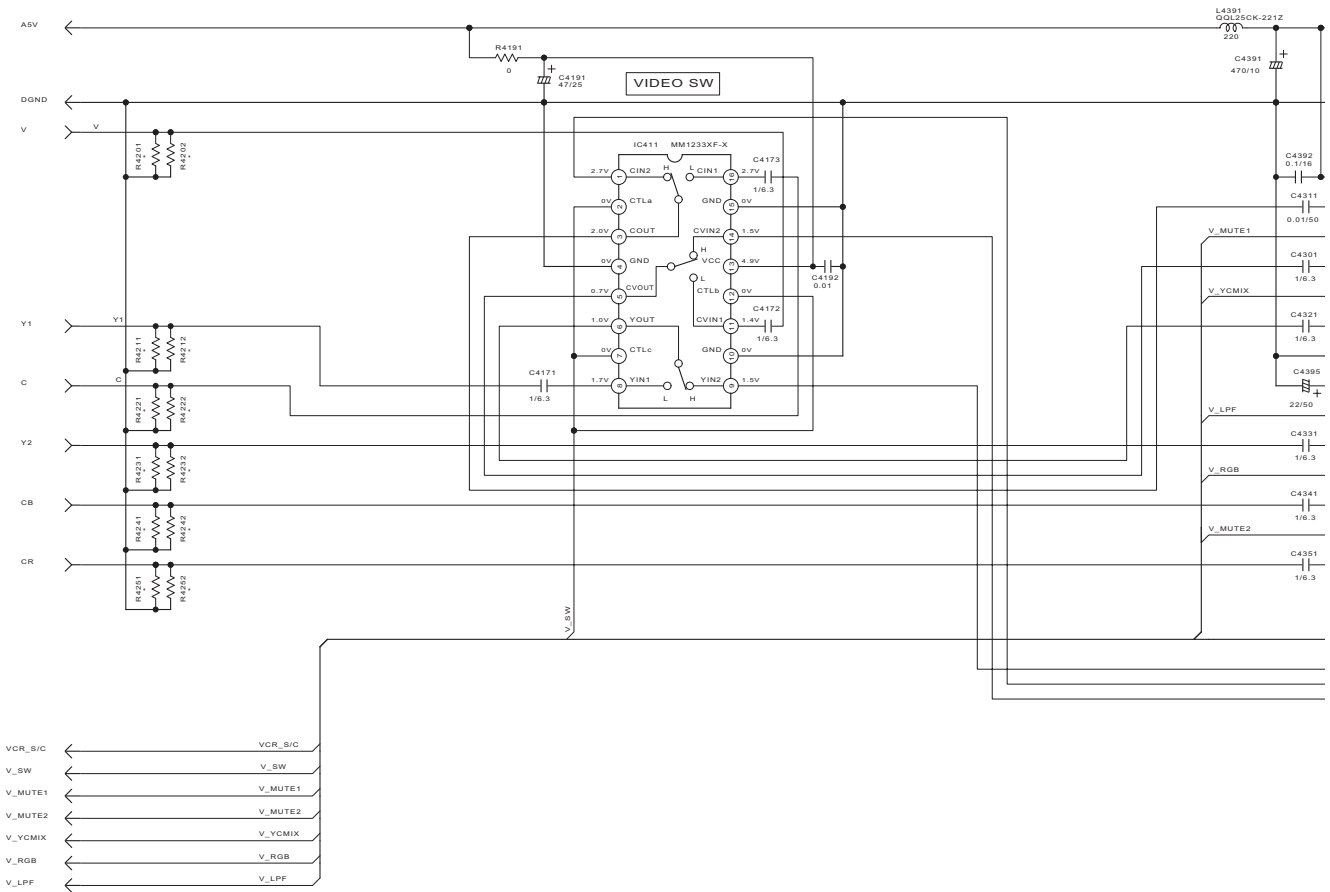

* PARTS LIST


		C20/C30 J/C	OTHER
V	R4201	620	47
	R4202	300	220
Y	R4211	620	47
	R4212	300	220
C	R4221	620	47
	R4222	330	220
Y2	R4231	510	47
	R4232	330	220
CB	R4241	510	62
	R4242	330	100
CR	R4251	510	62
	R4252	330	100

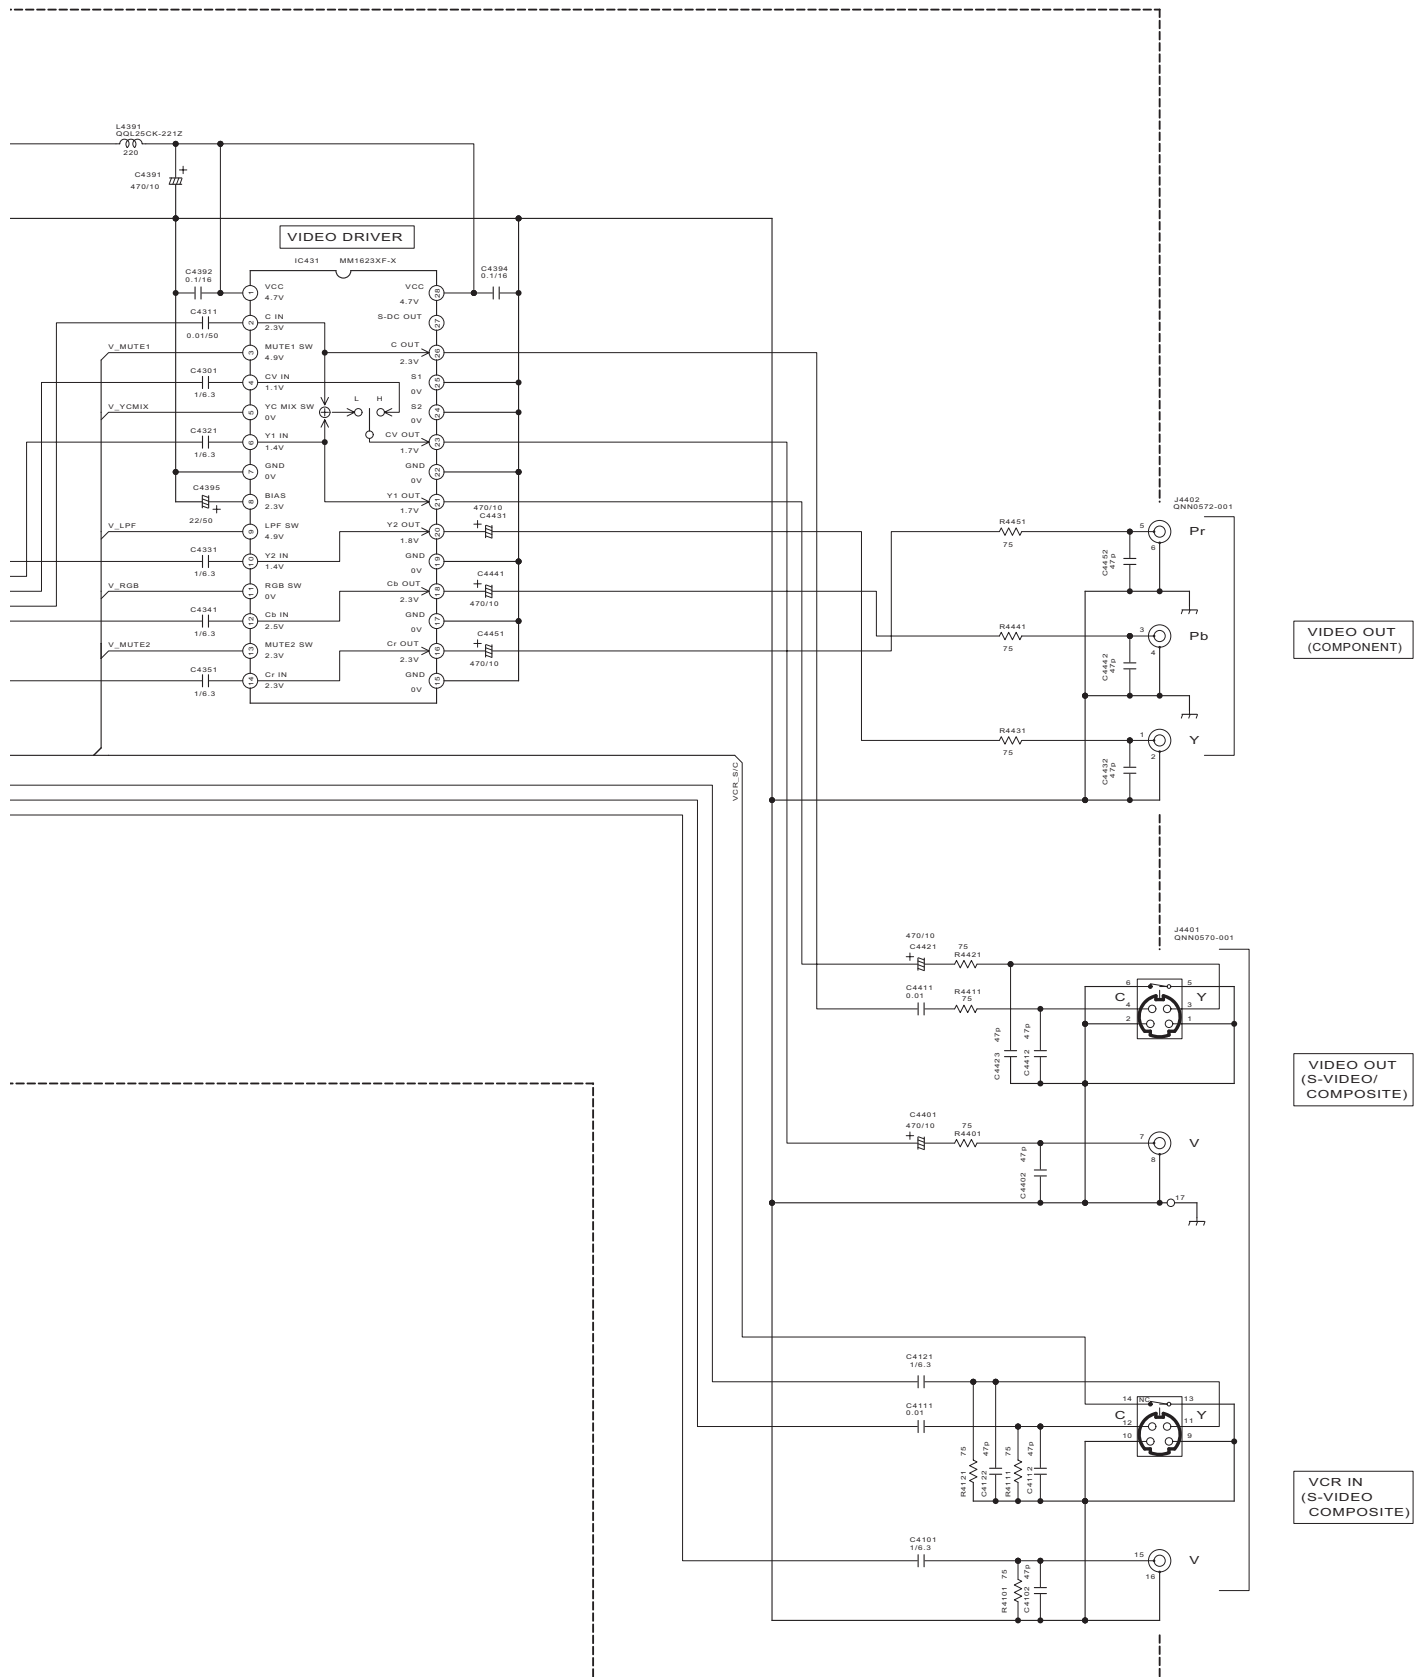

DVD section (1)


LOADER ASS'Y
 CH6-BASE-1


 See
 LVS20135-002A

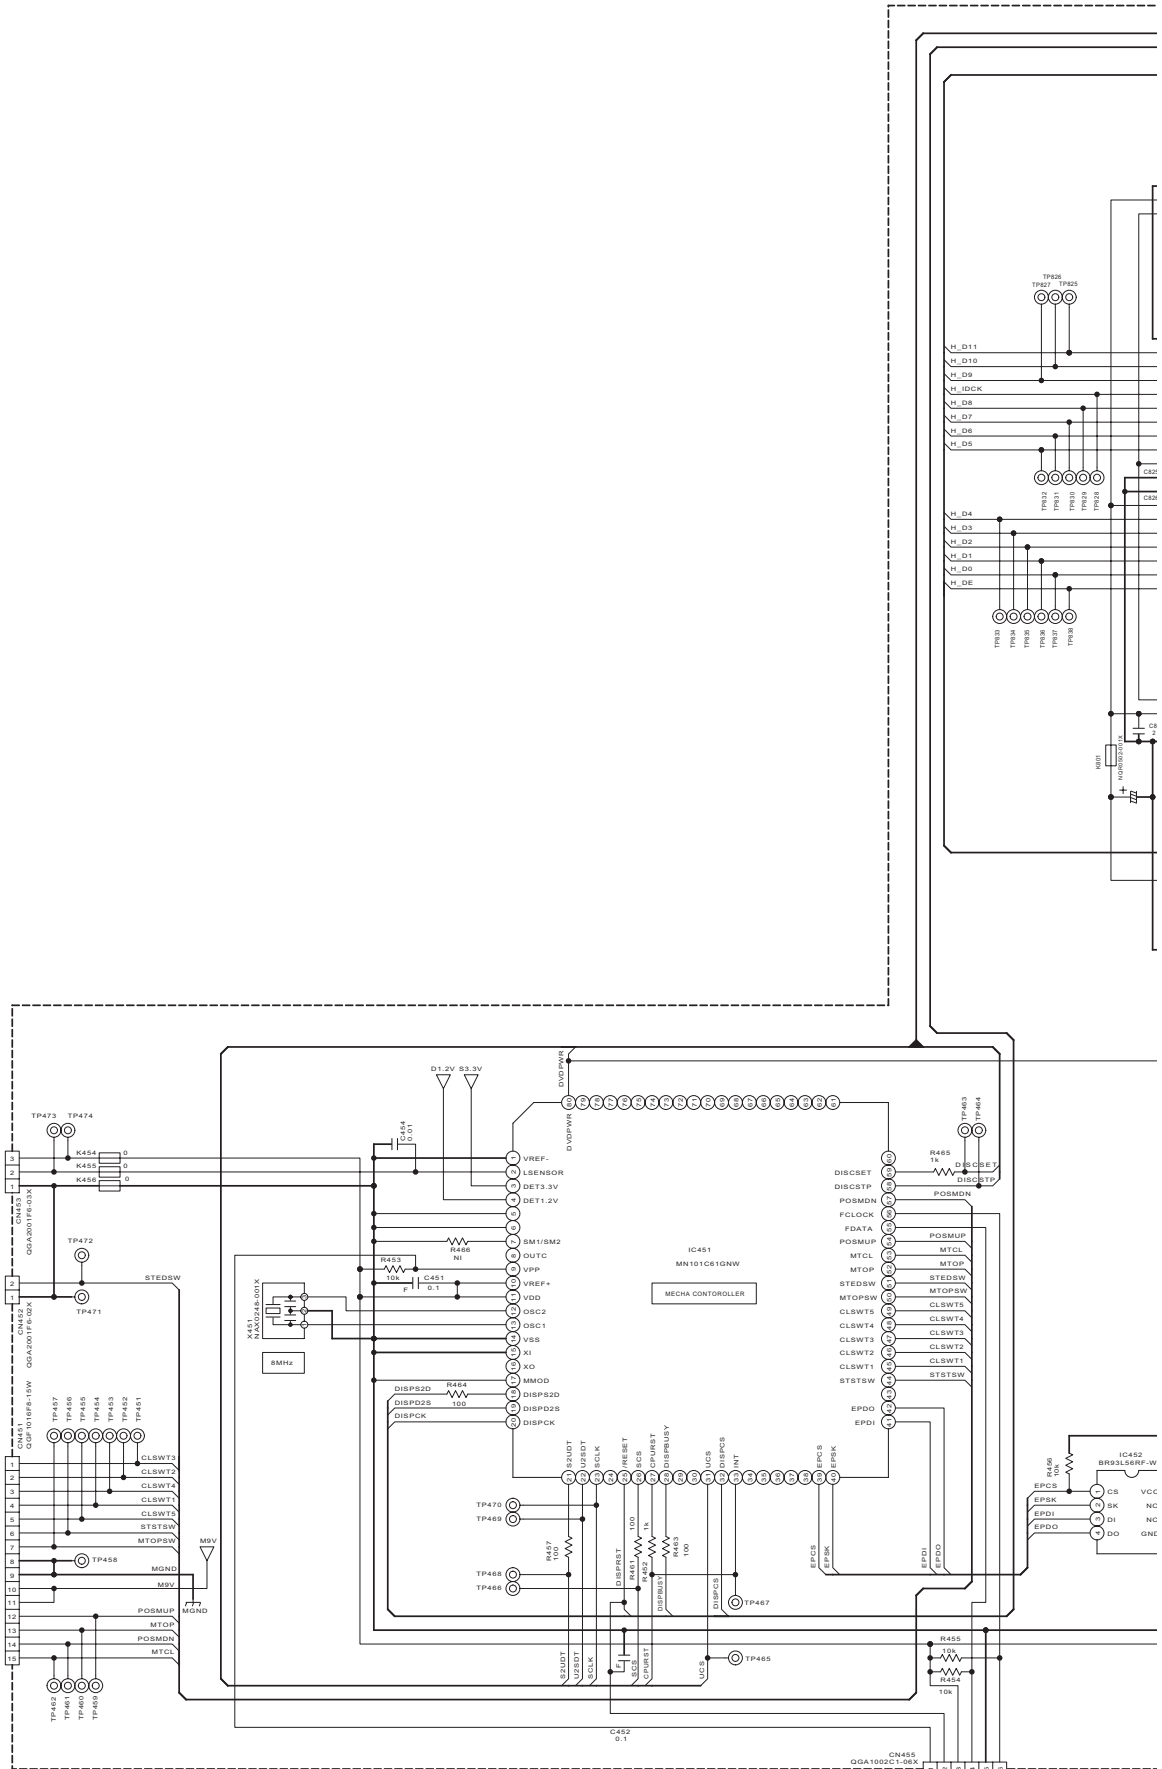




■ DVD section (2)

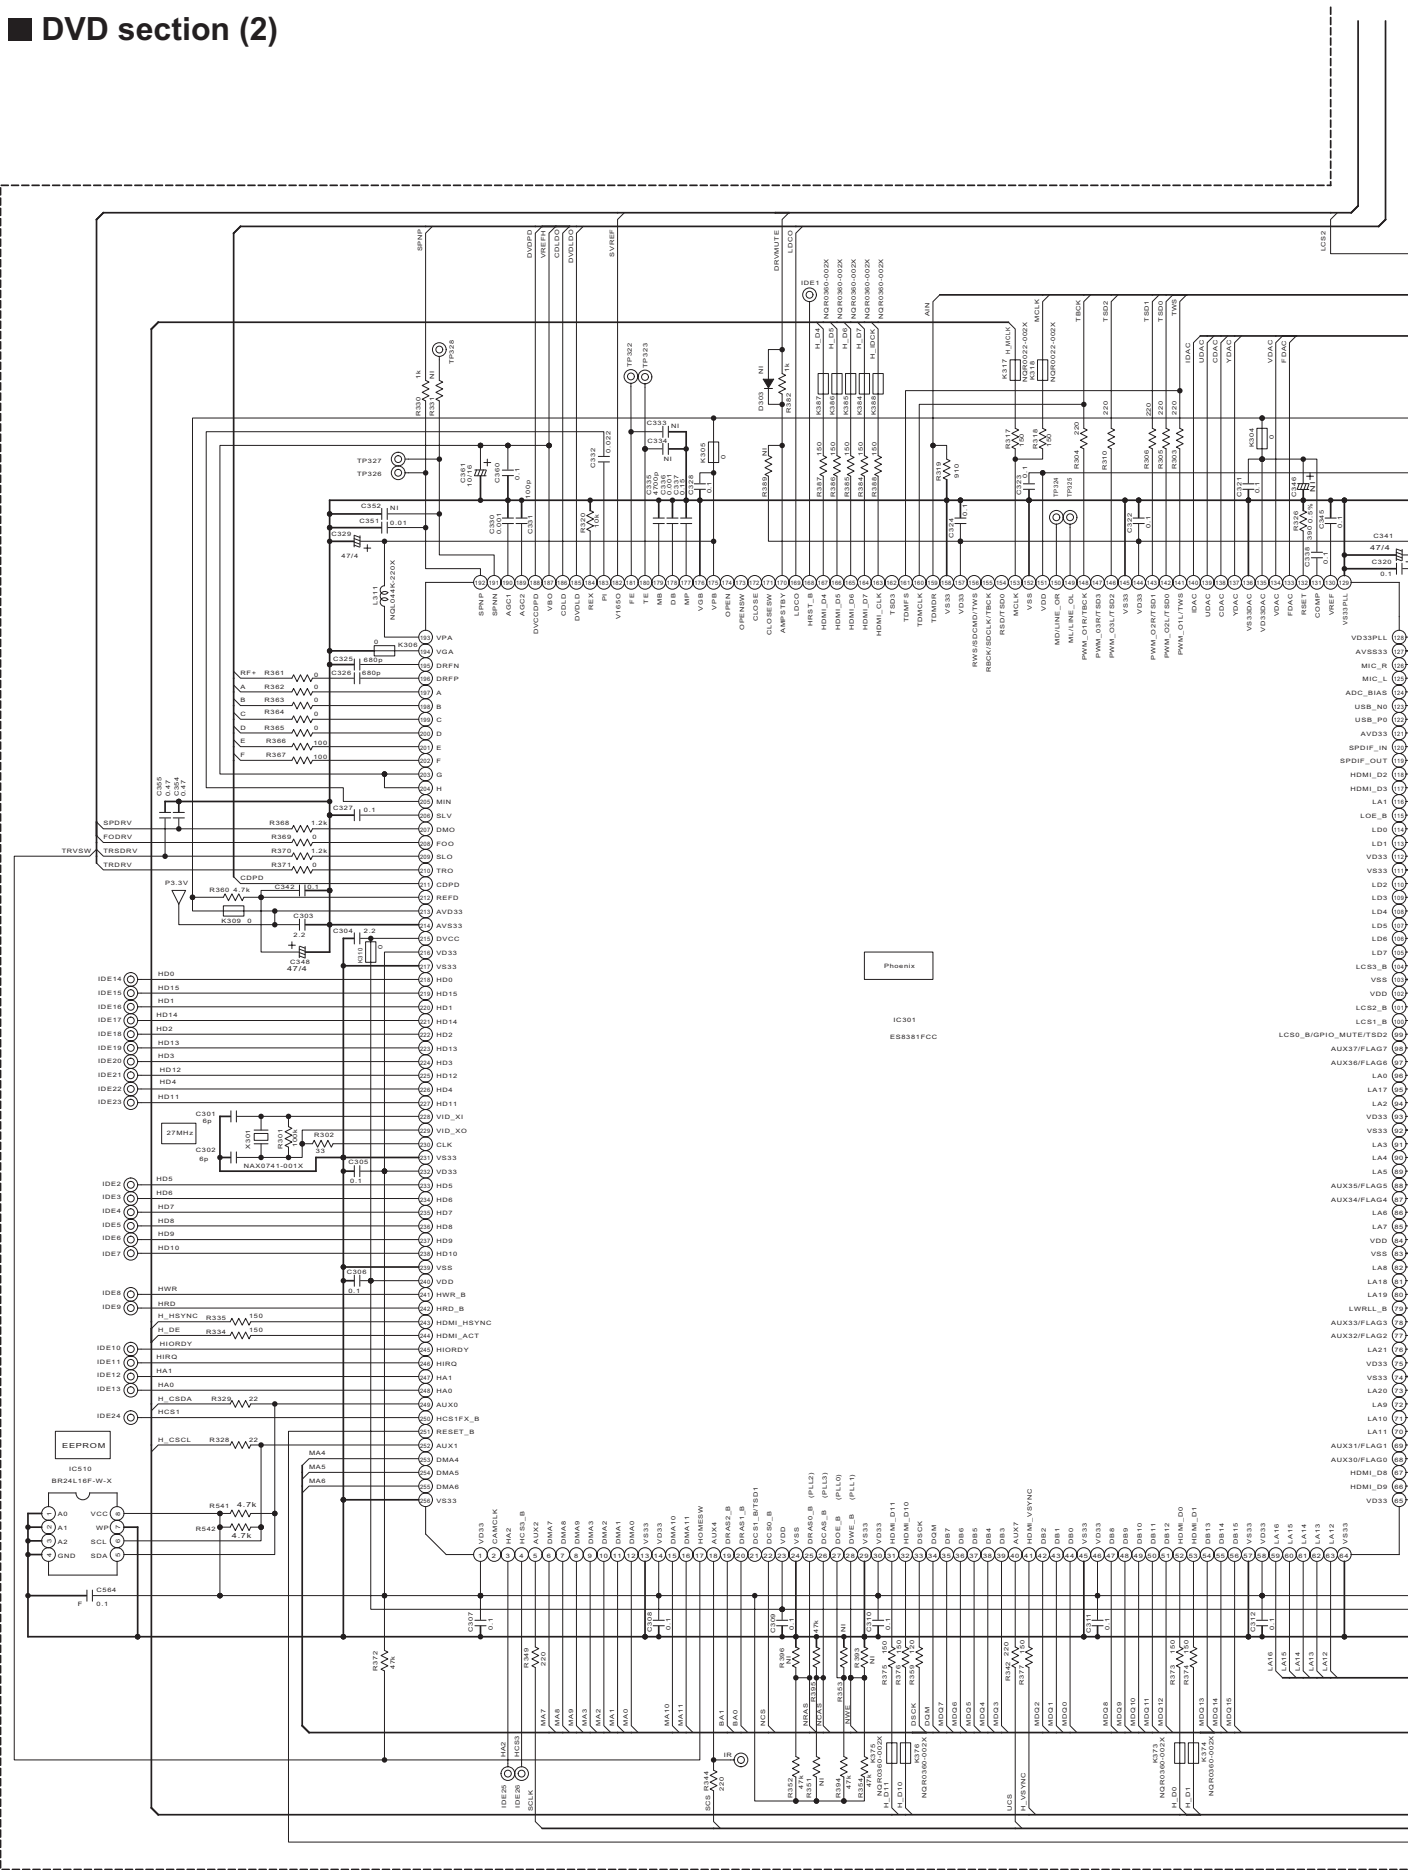


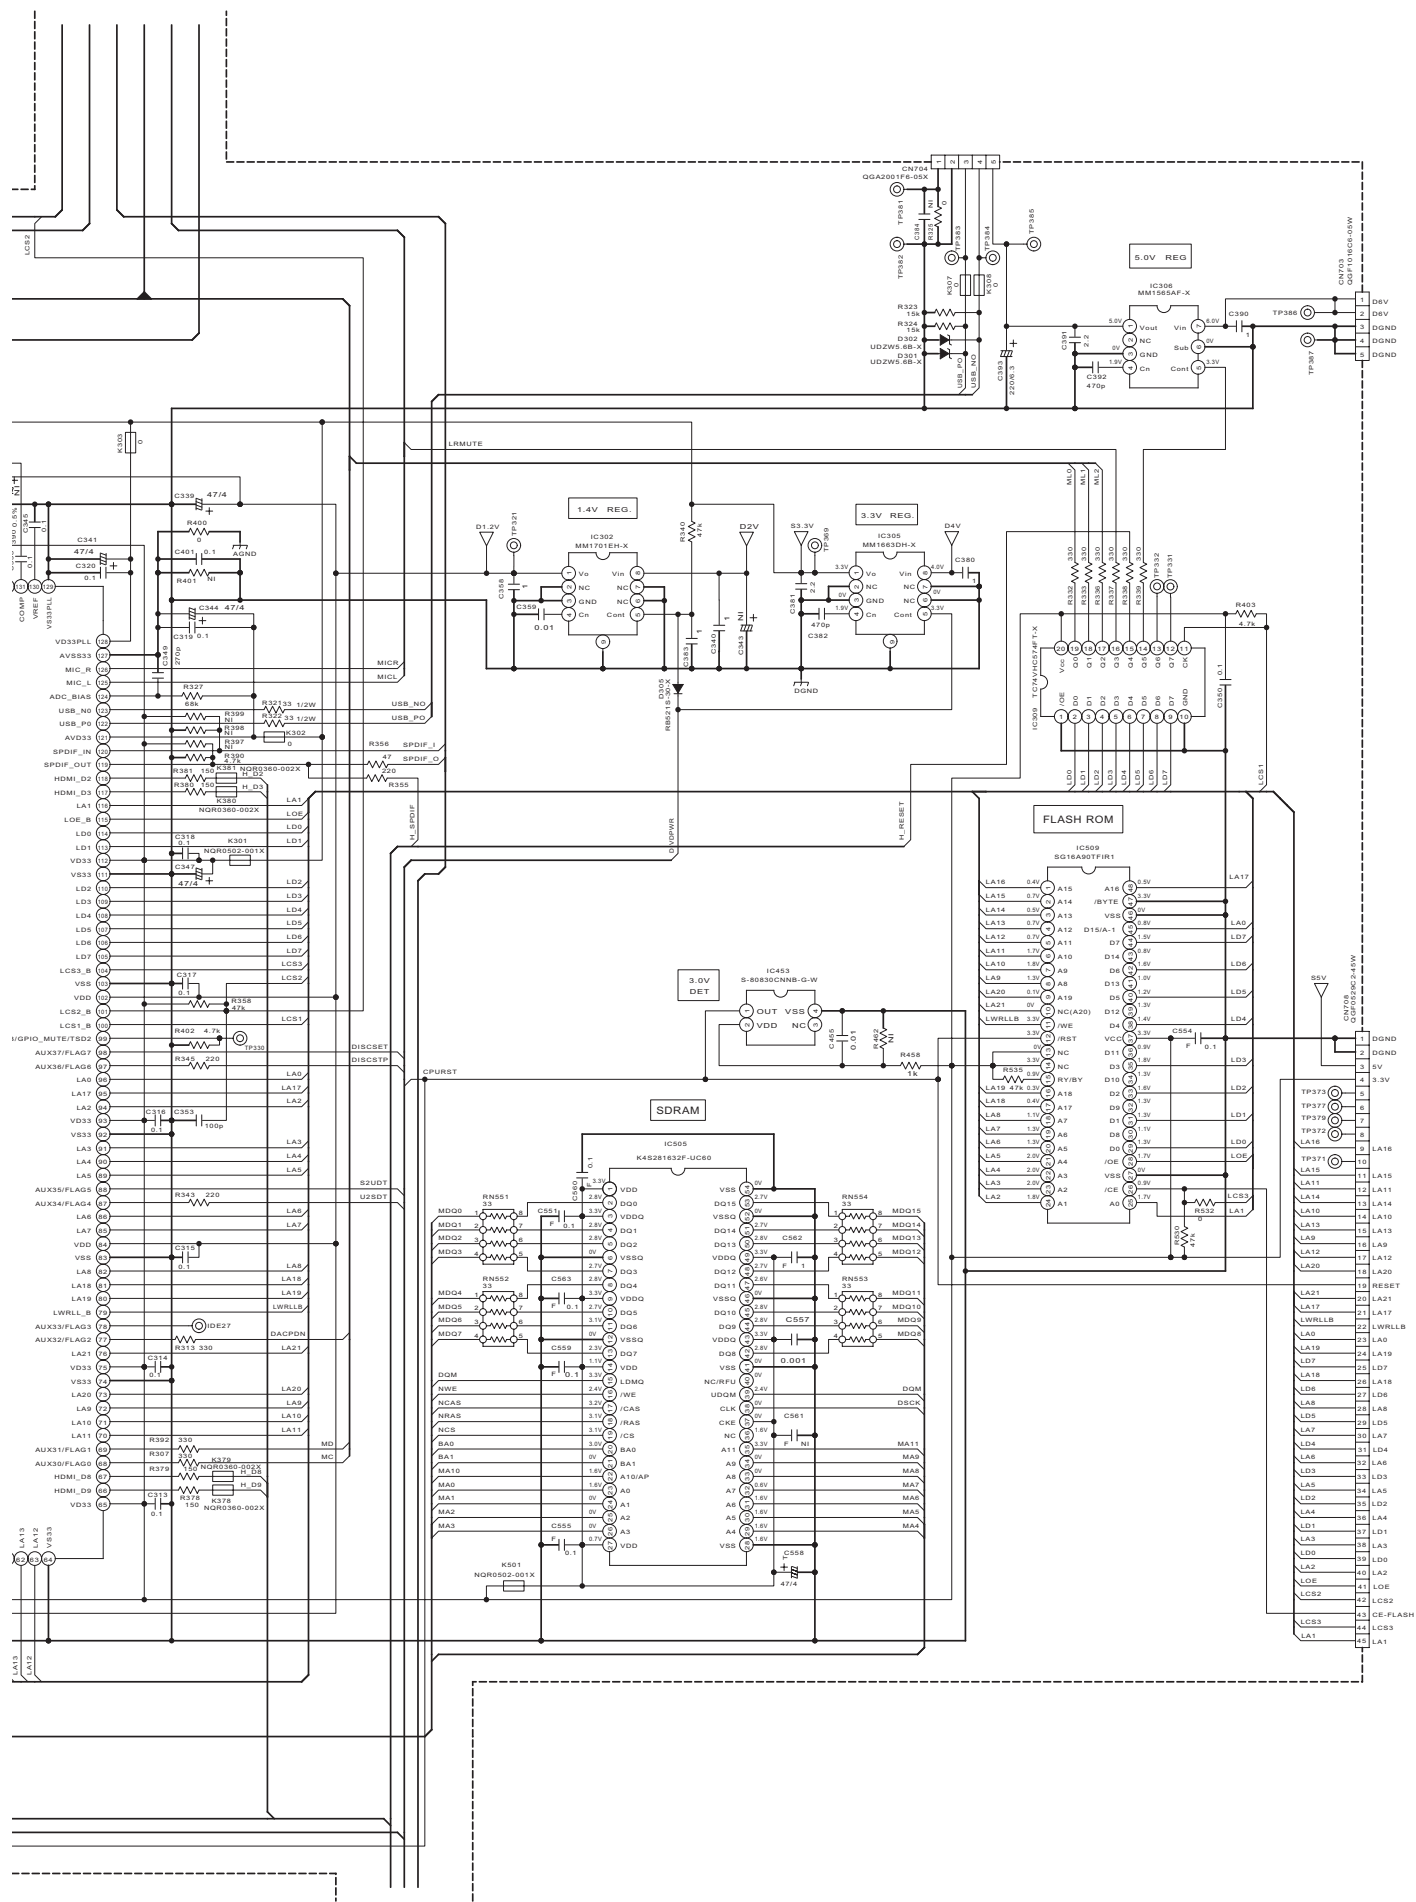


■ DVD section (3)

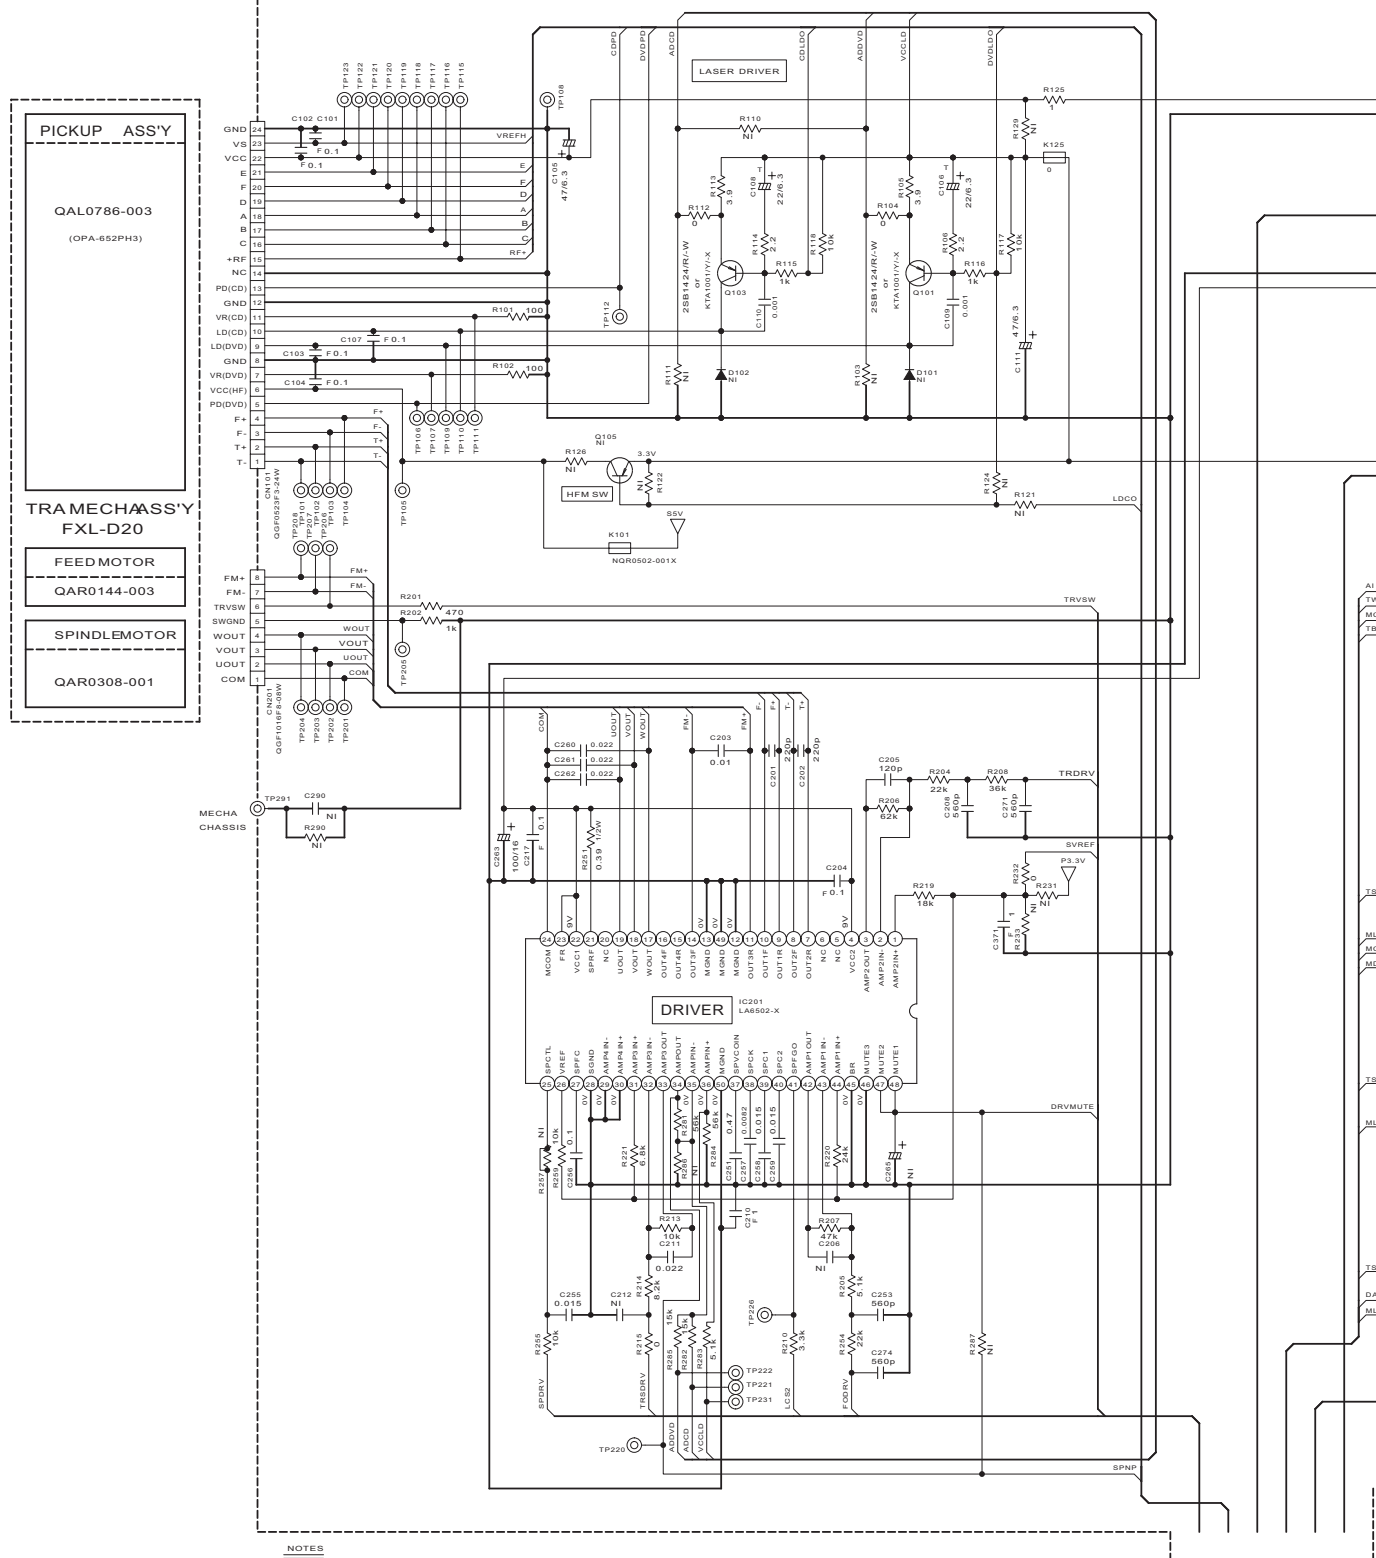

- NOTES**
- VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER WITHOUT INPUT SIGNAL.
CONDITION --- A DVD disc in the Tray 1, and STOP mode.
 - UNLESS OTHERWISE SPECIFIED.
ALL RESISTORS ARE 1/16W ±5% METAL GLAZE RESISTOR. OR 0.5% METAL GLAZE RESISTOR.
ALL CAPACITORS ARE 50V, 25V, 16V, 10V or 6.3V CERAMIC CAPACITOR
ALL RESISTANCE VALUES ARE IN OHM (Ω).
ALL CAPACITANCE VALUES ARE IN pF(pF).
ALL CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE(μF)/RATED VOLTAGE (V).
ALL INDUCTANCE VALUES ARE IN μH(mH).
 - NI STANDS FOR NOT INSERTED PARTS.

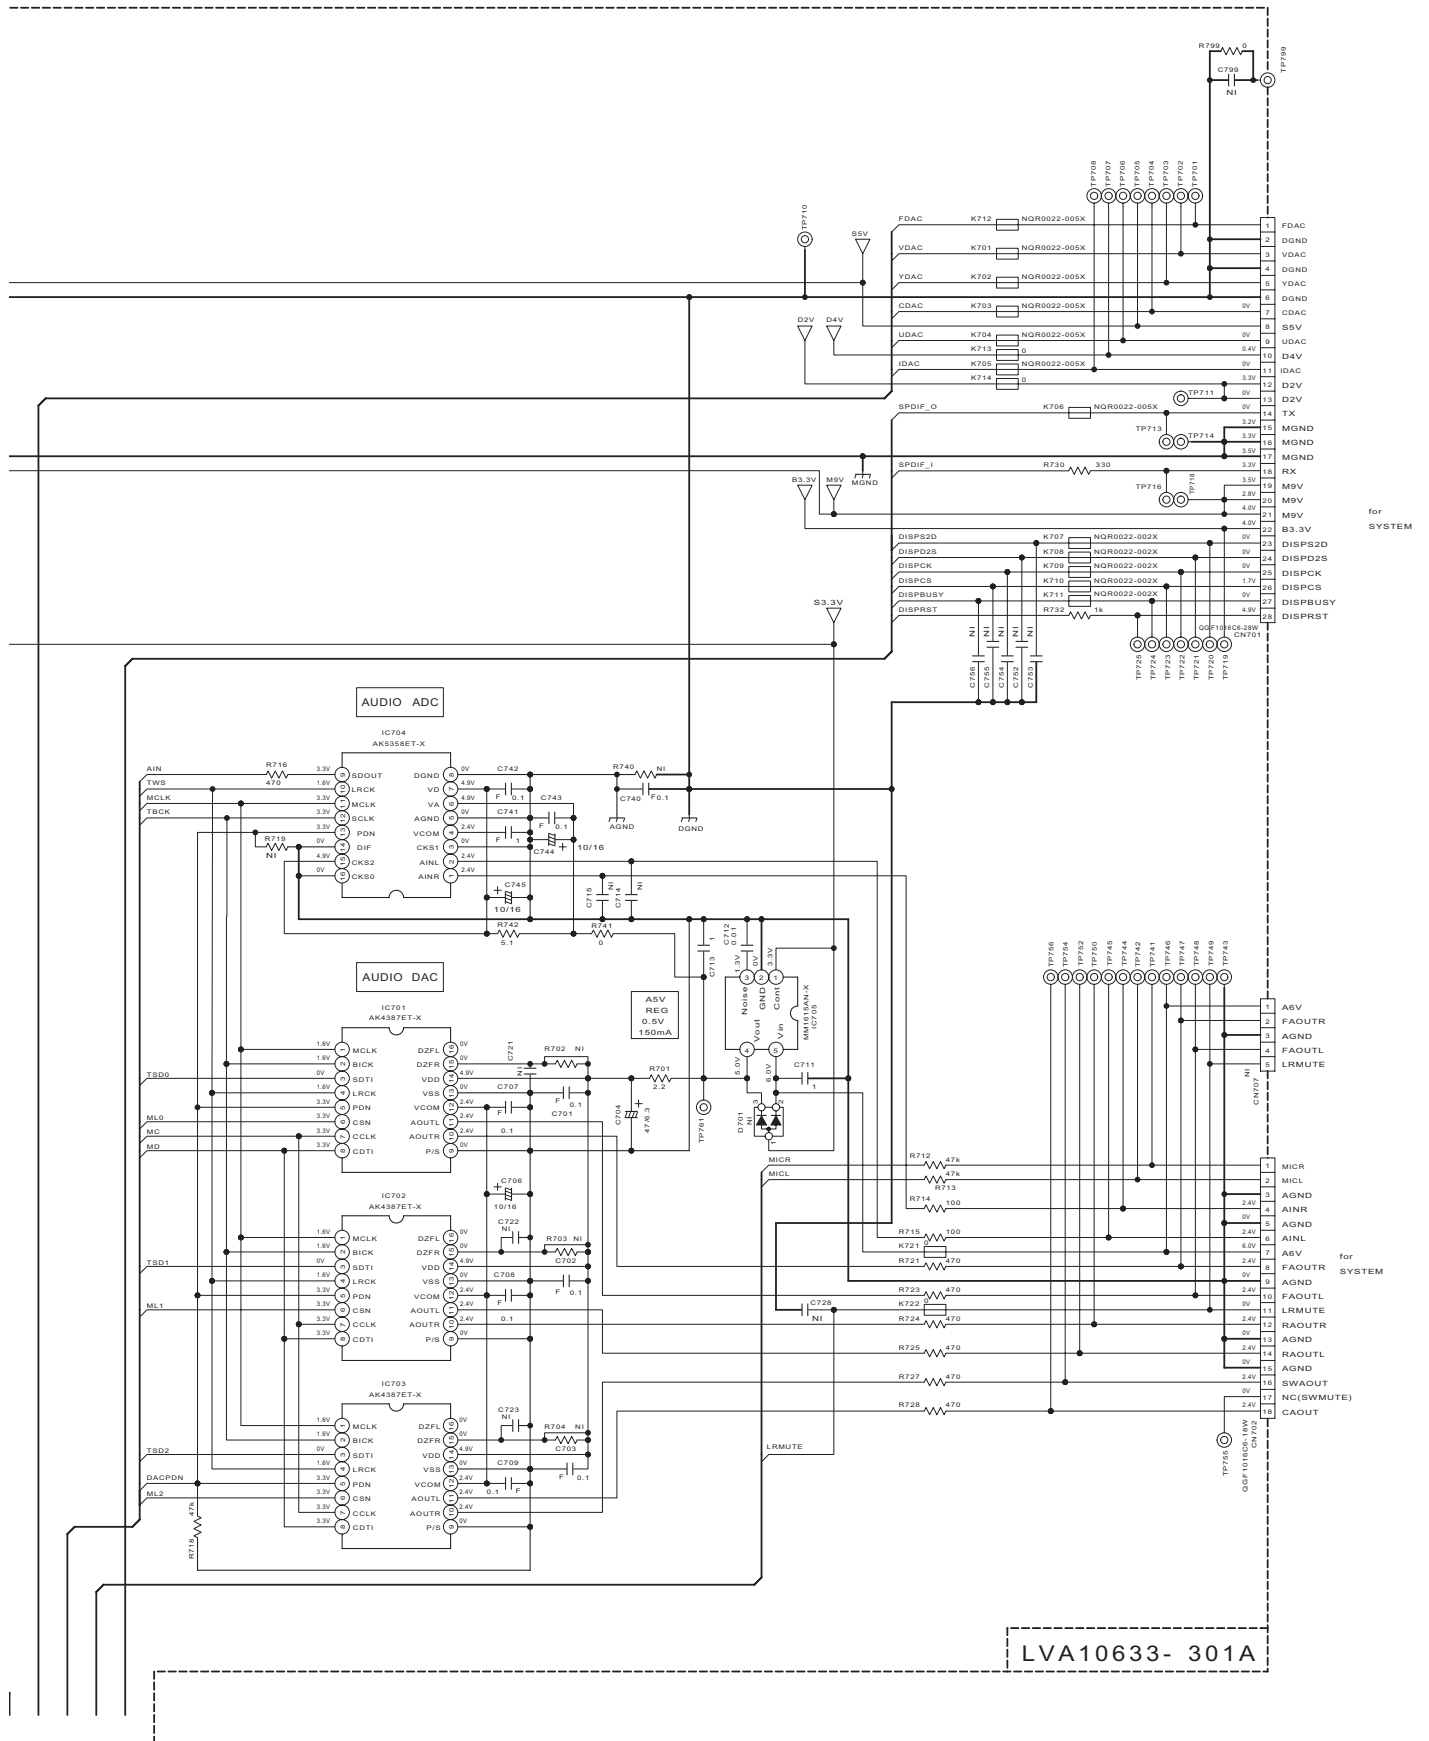


■ Loader section

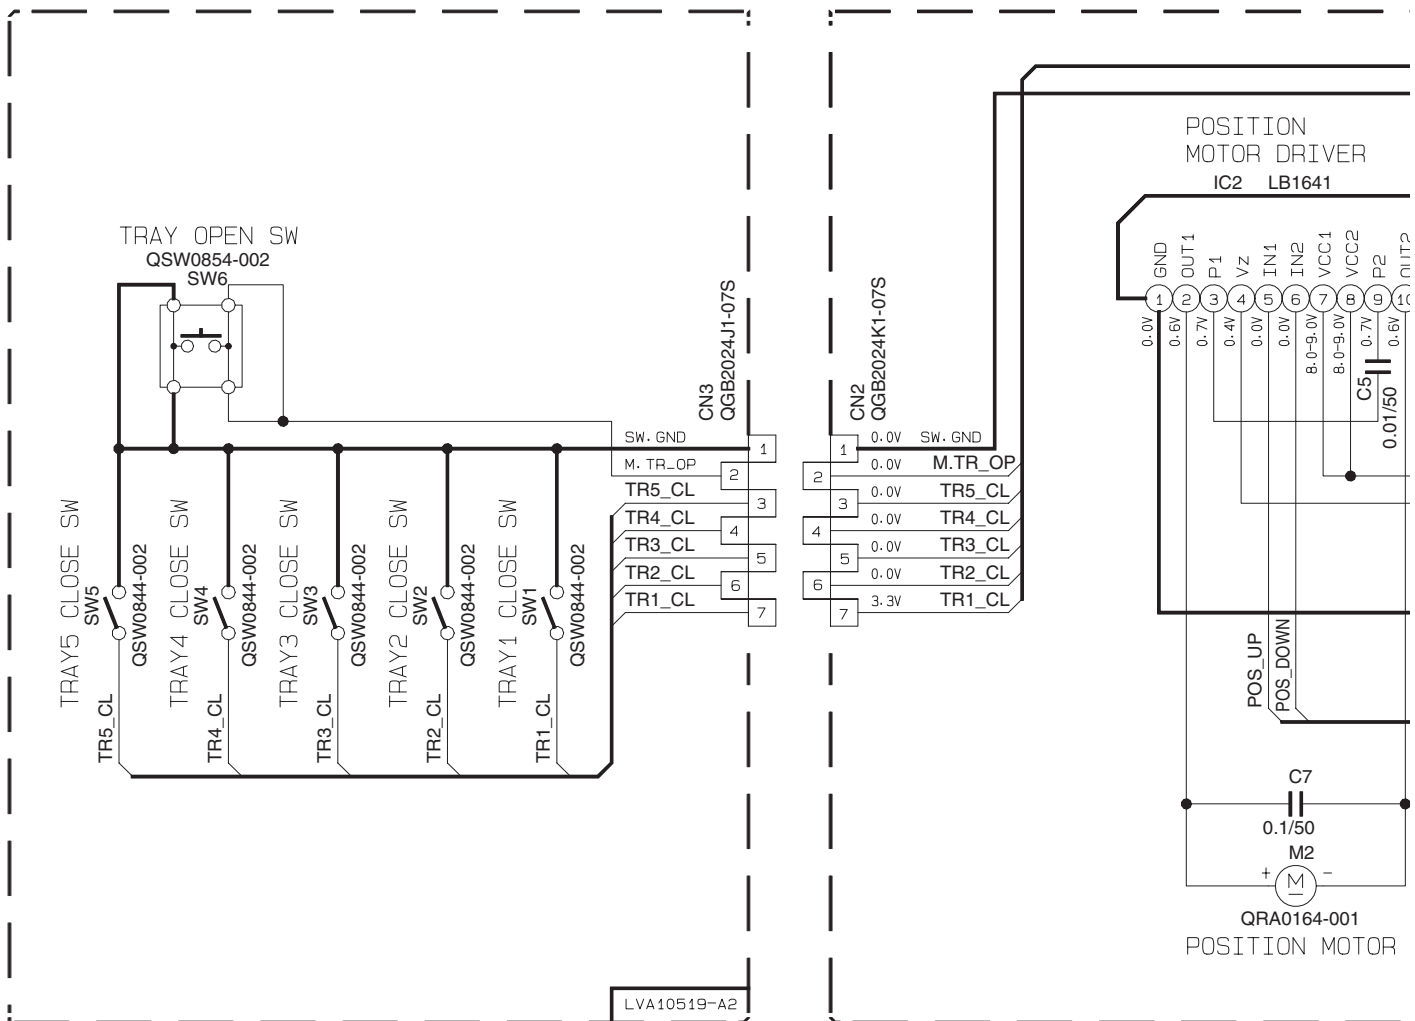


NOTES


1. VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER.
CONDITION: DISC1 STOP
2. UNLESS OTHERWISE SPECIFIED.
ALL CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE (μ F) / RATED VOLTAGE (V).
3. NI STANDS FOR NOT INSERTED PARTS.

TO POWER AND MECHA CONTROL MCOM

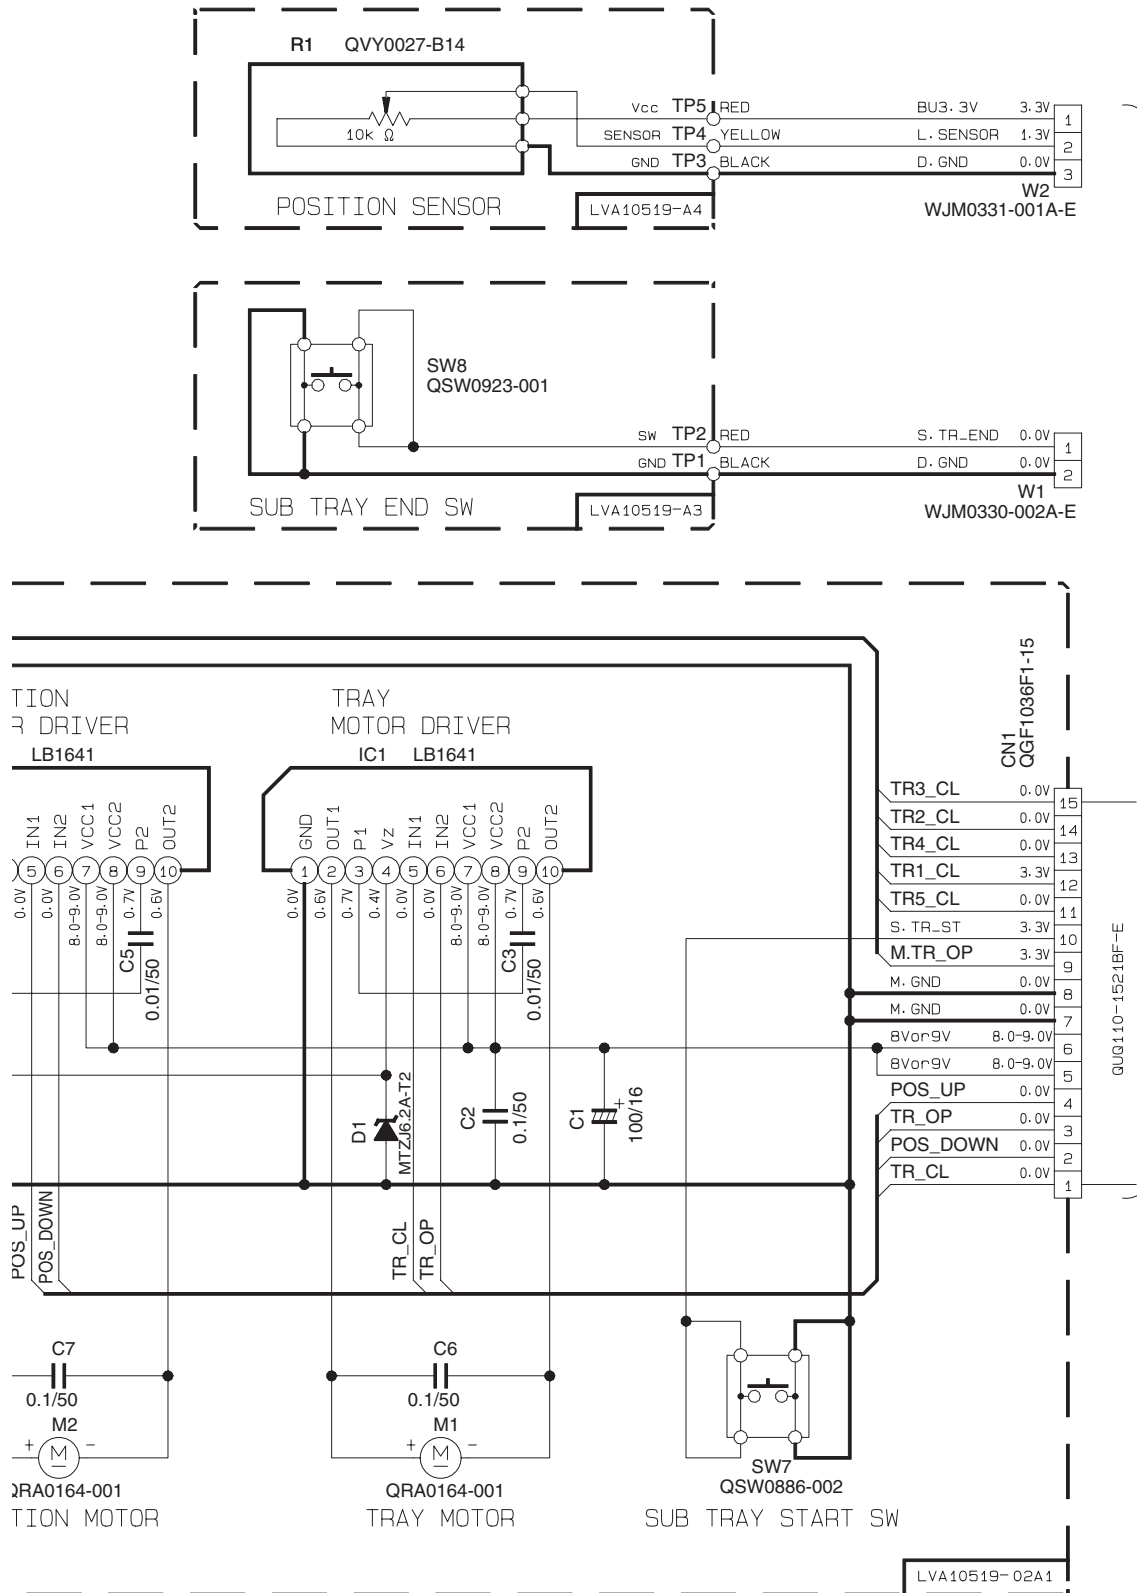

■ Sub woofer power supply section

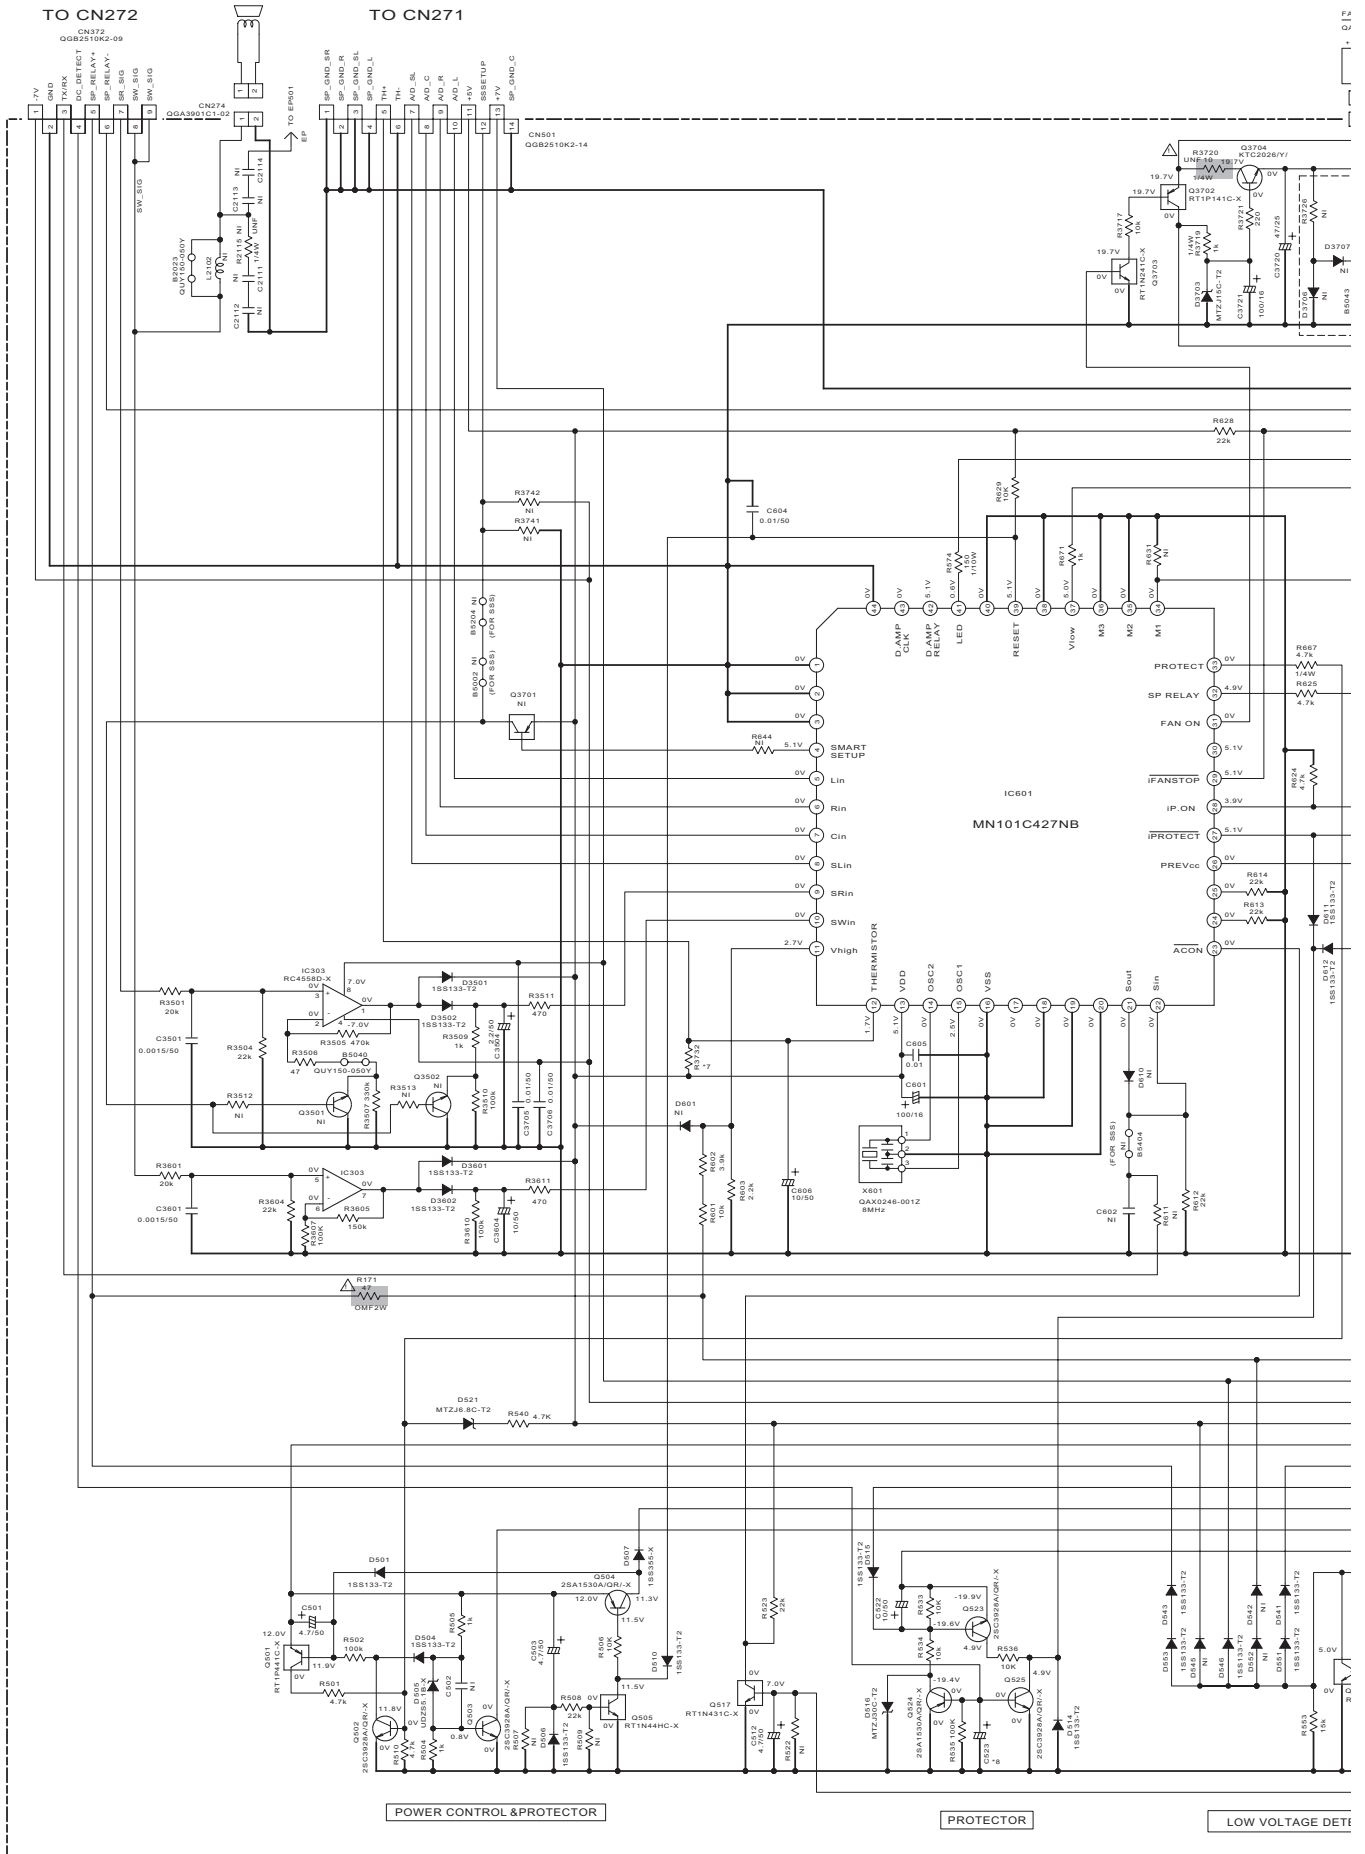

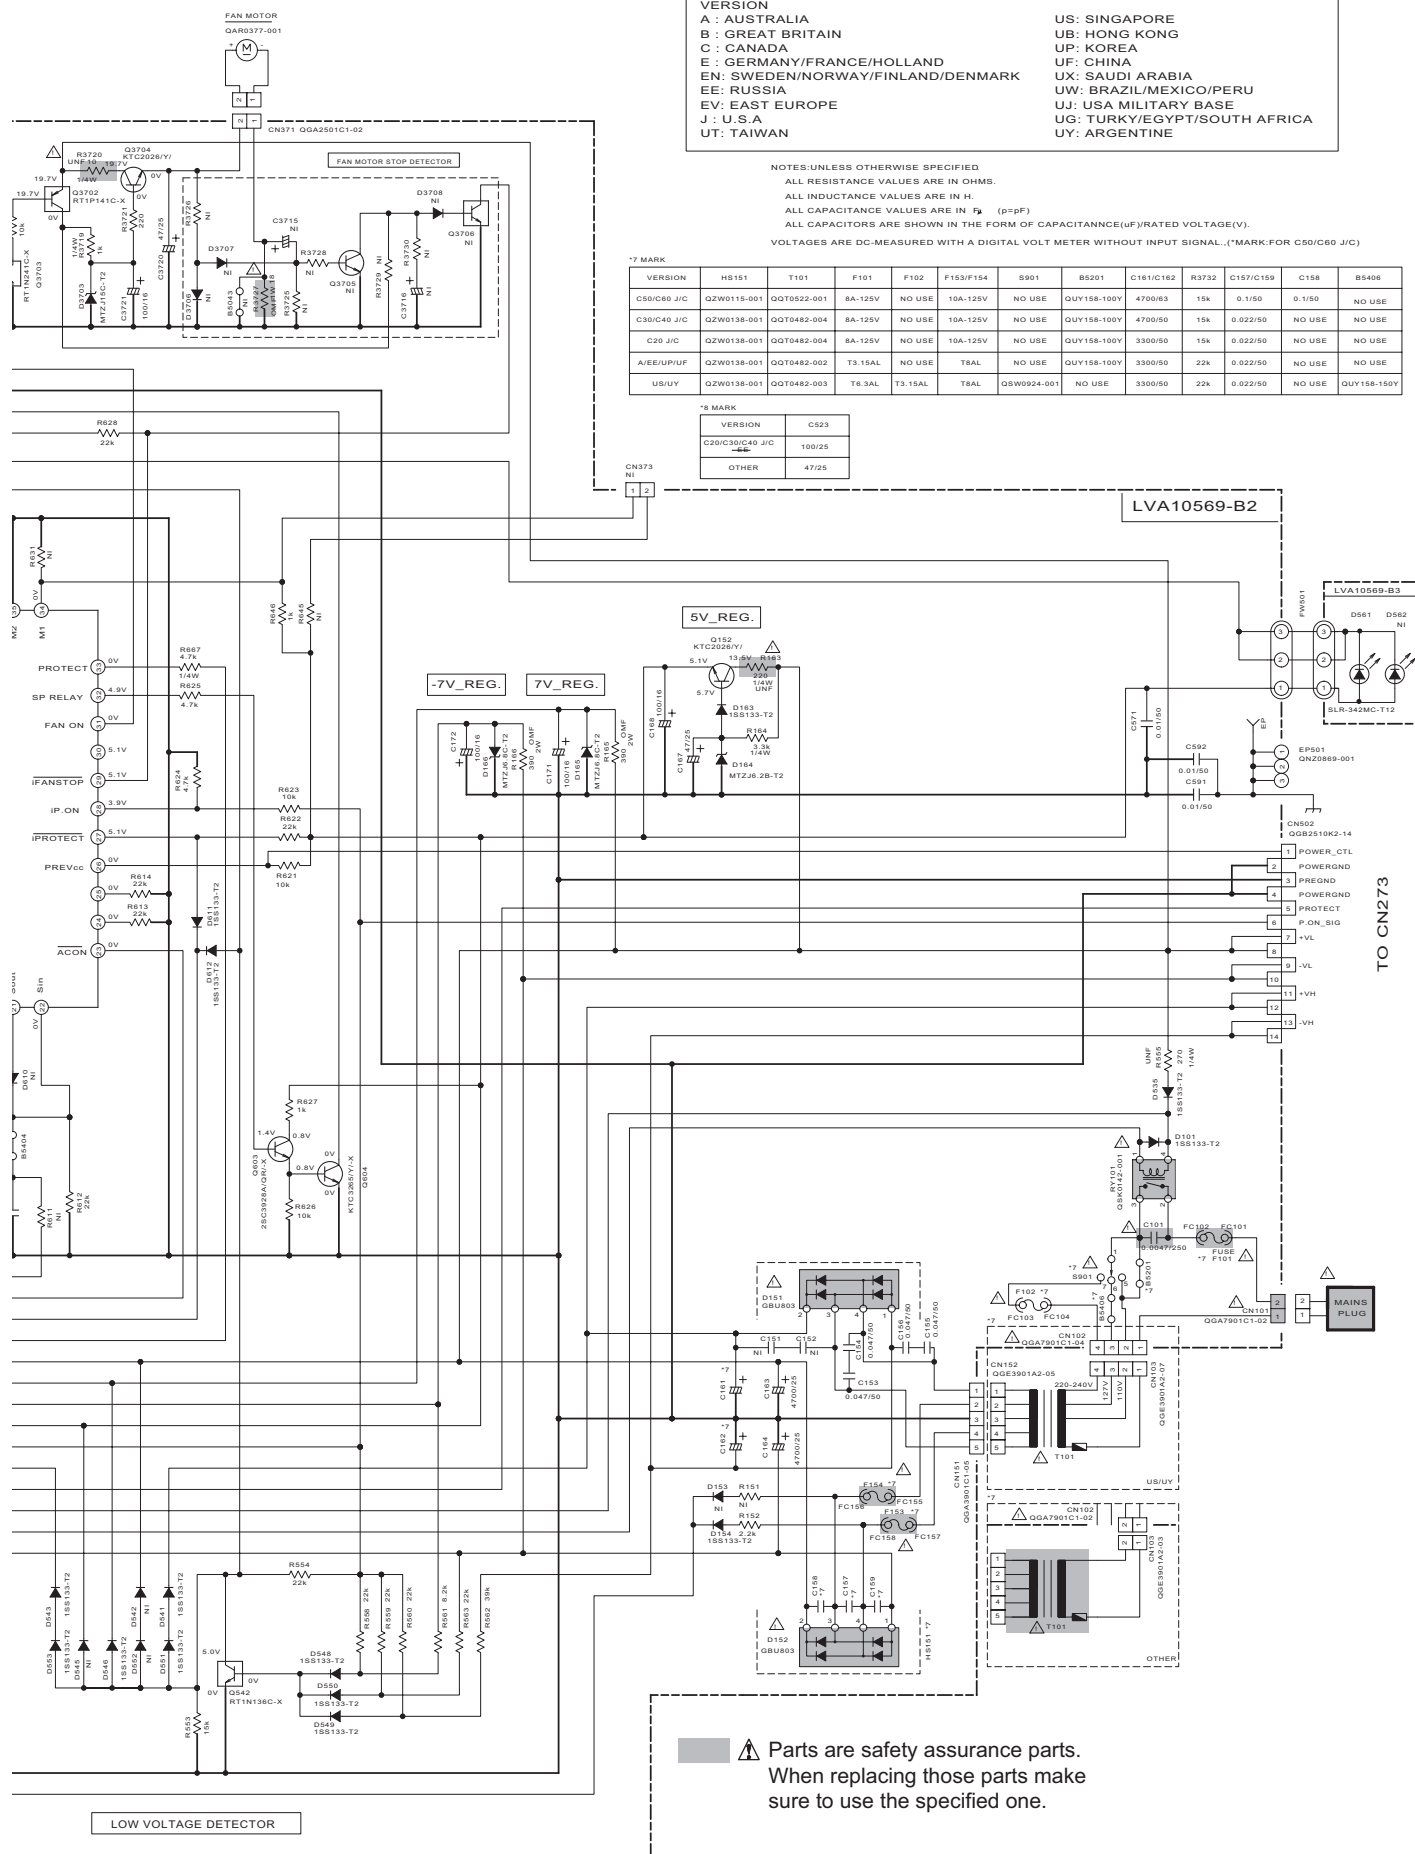

VERSION		US: SINGAPORE	
A :	AUSTRALIA	UB :	HONG KONG
B :	GREAT BRITAIN	UP :	KOREA
C :	CANADA	UF :	CHINA
E :	GERMANY/FRANCE/HOLLAND	UX :	SAUDI ARABIA
EN :	SWEDEN/NORWAY/FINLAND/DENMARK	UW :	BRAZIL/MEXICO/PERU
EE :	RUSSIA	UJ :	USA MILITARY BASE
EV :	EAST EUROPE	UG :	TURKEY/EGYPT/SOUTH AFRICA
J :	U.S.A	UY :	ARGENTINE
UT :	TAIWAN		

NOTES: UNLESS OTHERWISE SPECIFIED
 ALL RESISTANCE VALUES ARE IN OHMS.
 ALL INDUCTANCE VALUES ARE IN H.
 ALL CAPACITANCE VALUES ARE IN F (p-pF)
 ALL CAPACITORS ARE SHOWN IN THE FORM OF CAPACITANCE(μF)/RATED VOLTAGE(V).
 VOLTAGES ARE DC-MEASURED WITH A DIGITAL VOLT METER WITHOUT INPUT SIGNAL. (*MARK: FOR C50/C60 J/C)

VERSION	H8151	T101	F101	F102	F153/F154	S901	B5201	C161/C162	R3732	C157/C159	C158	B5408
C50/C60 J/C	Q2W0115-001	Q0T0522-001	8A-125V	NO USE	10A-125V	NO USE	QUY158-100V	4700/63	15k	0.1/50	0.1/50	NO USE
C30/C40 J/C	Q2W0138-001	Q0T0482-004	8A-125V	NO USE	10A-125V	NO USE	QUY158-100V	4700/50	15k	0.022/50	NO USE	NO USE
C20 J/C	Q2W0138-001	Q0T0482-004	8A-125V	NO USE	10A-125V	NO USE	QUY158-100V	3300/50	15k	0.022/50	NO USE	NO USE
A/EE/UP/UF	Q2W0138-001	Q0T0482-002	T3.15AL	NO USE	T8AL	NO USE	QUY158-100V	3300/50	22k	0.022/50	NO USE	NO USE
US/UY	Q2W0138-001	Q0T0482-003	T6.3AL	T3.15AL	T8AL	QSW0924-001	NO USE	3300/50	22k	0.022/50	NO USE	QUY158-150V

VERSION	C523
C20/C30/C40 J/C	100/25
OTHER	47/25


TO CN273

⚠ Parts are safety assurance parts.
 When replacing those parts make
 sure to use the specified one.

△ IC202 *5




 **Parts**
When
sure to

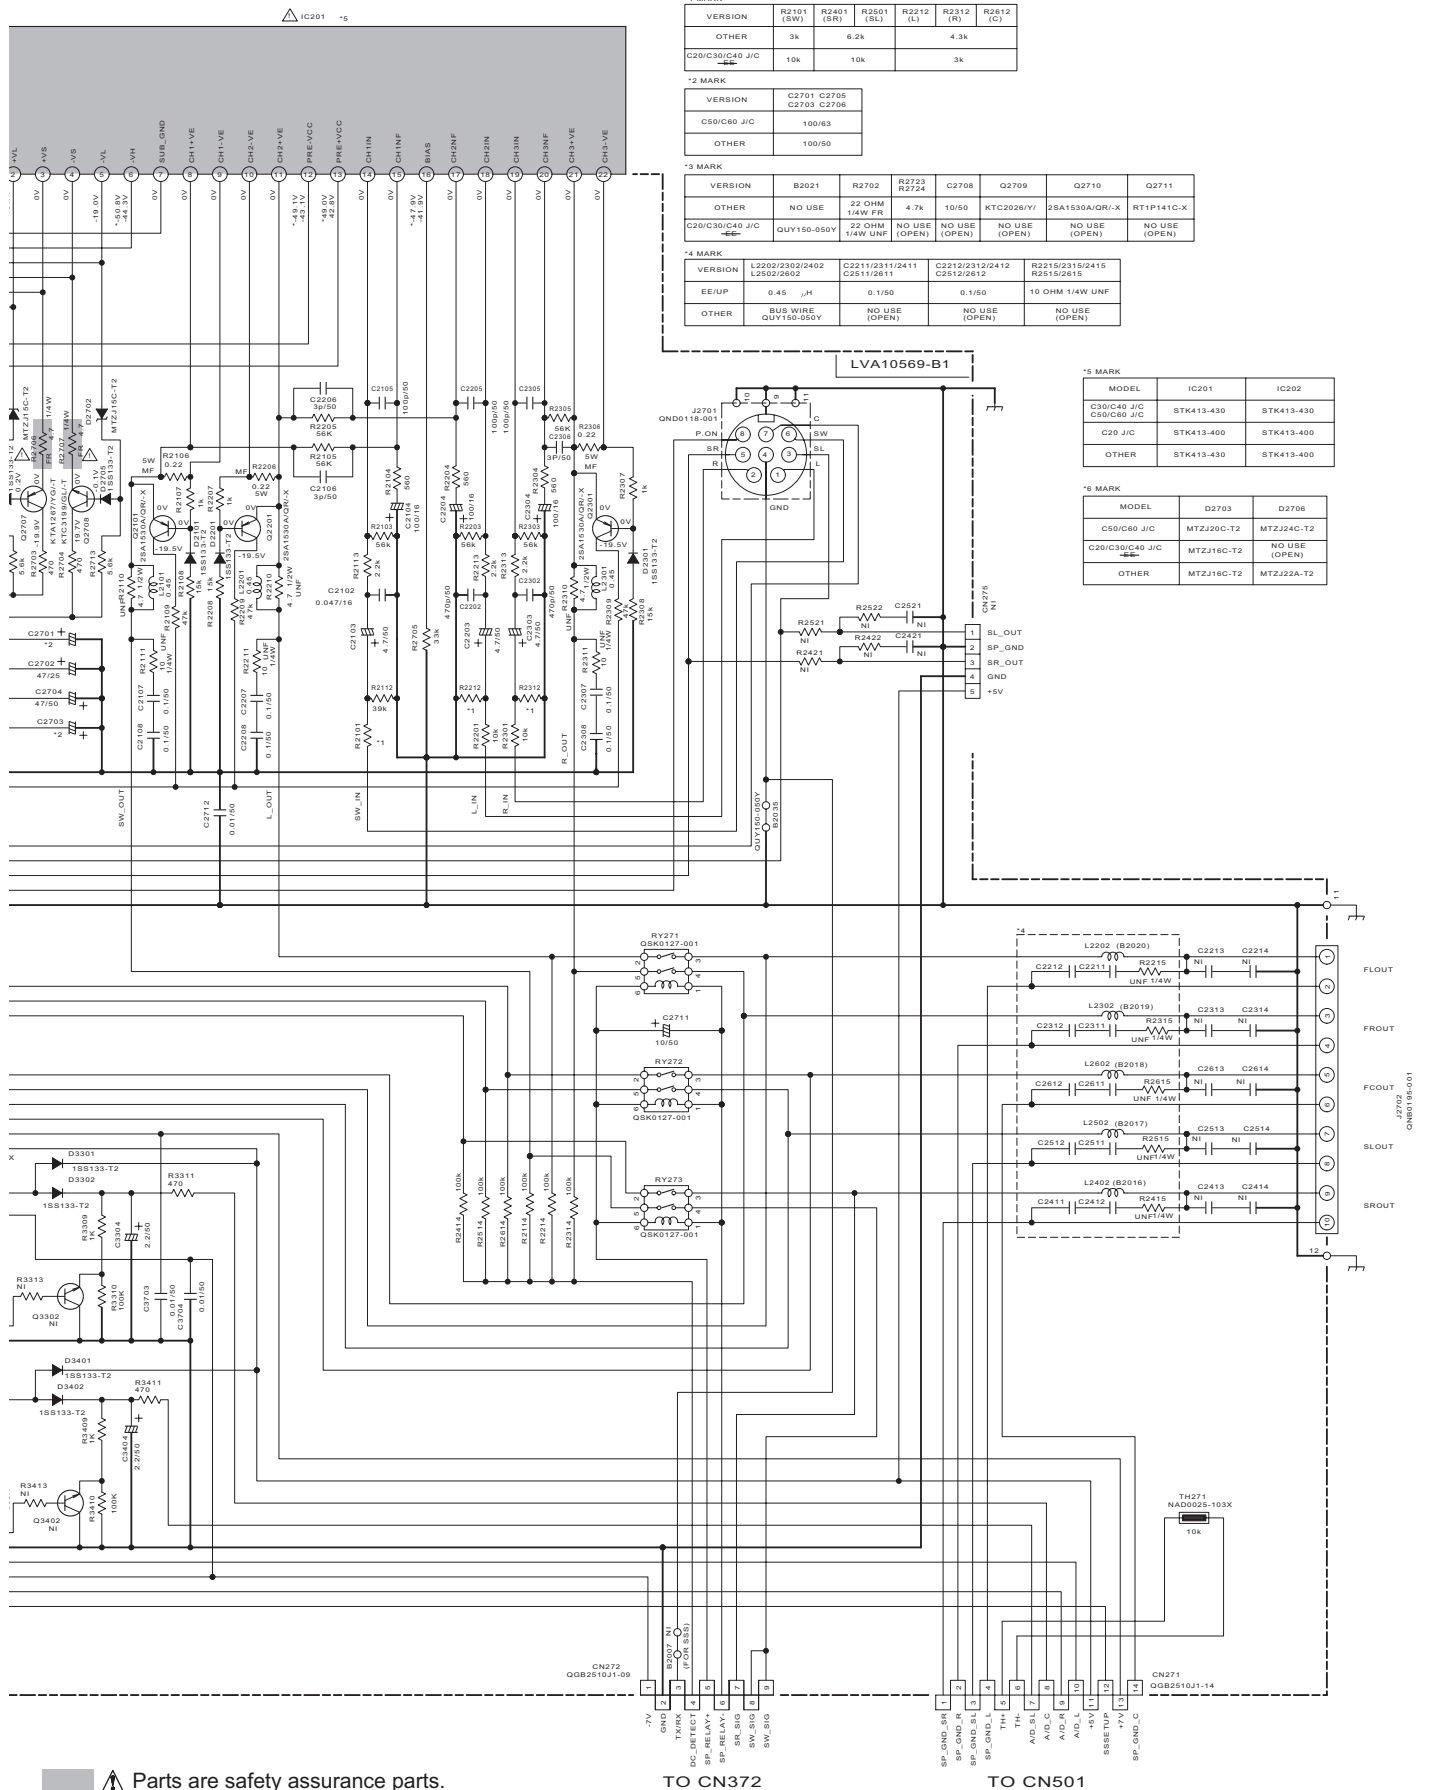

Printed circuit boards


<p>■ Main board</p>	<p>Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)</p>
----------------------------	---

(Main board)

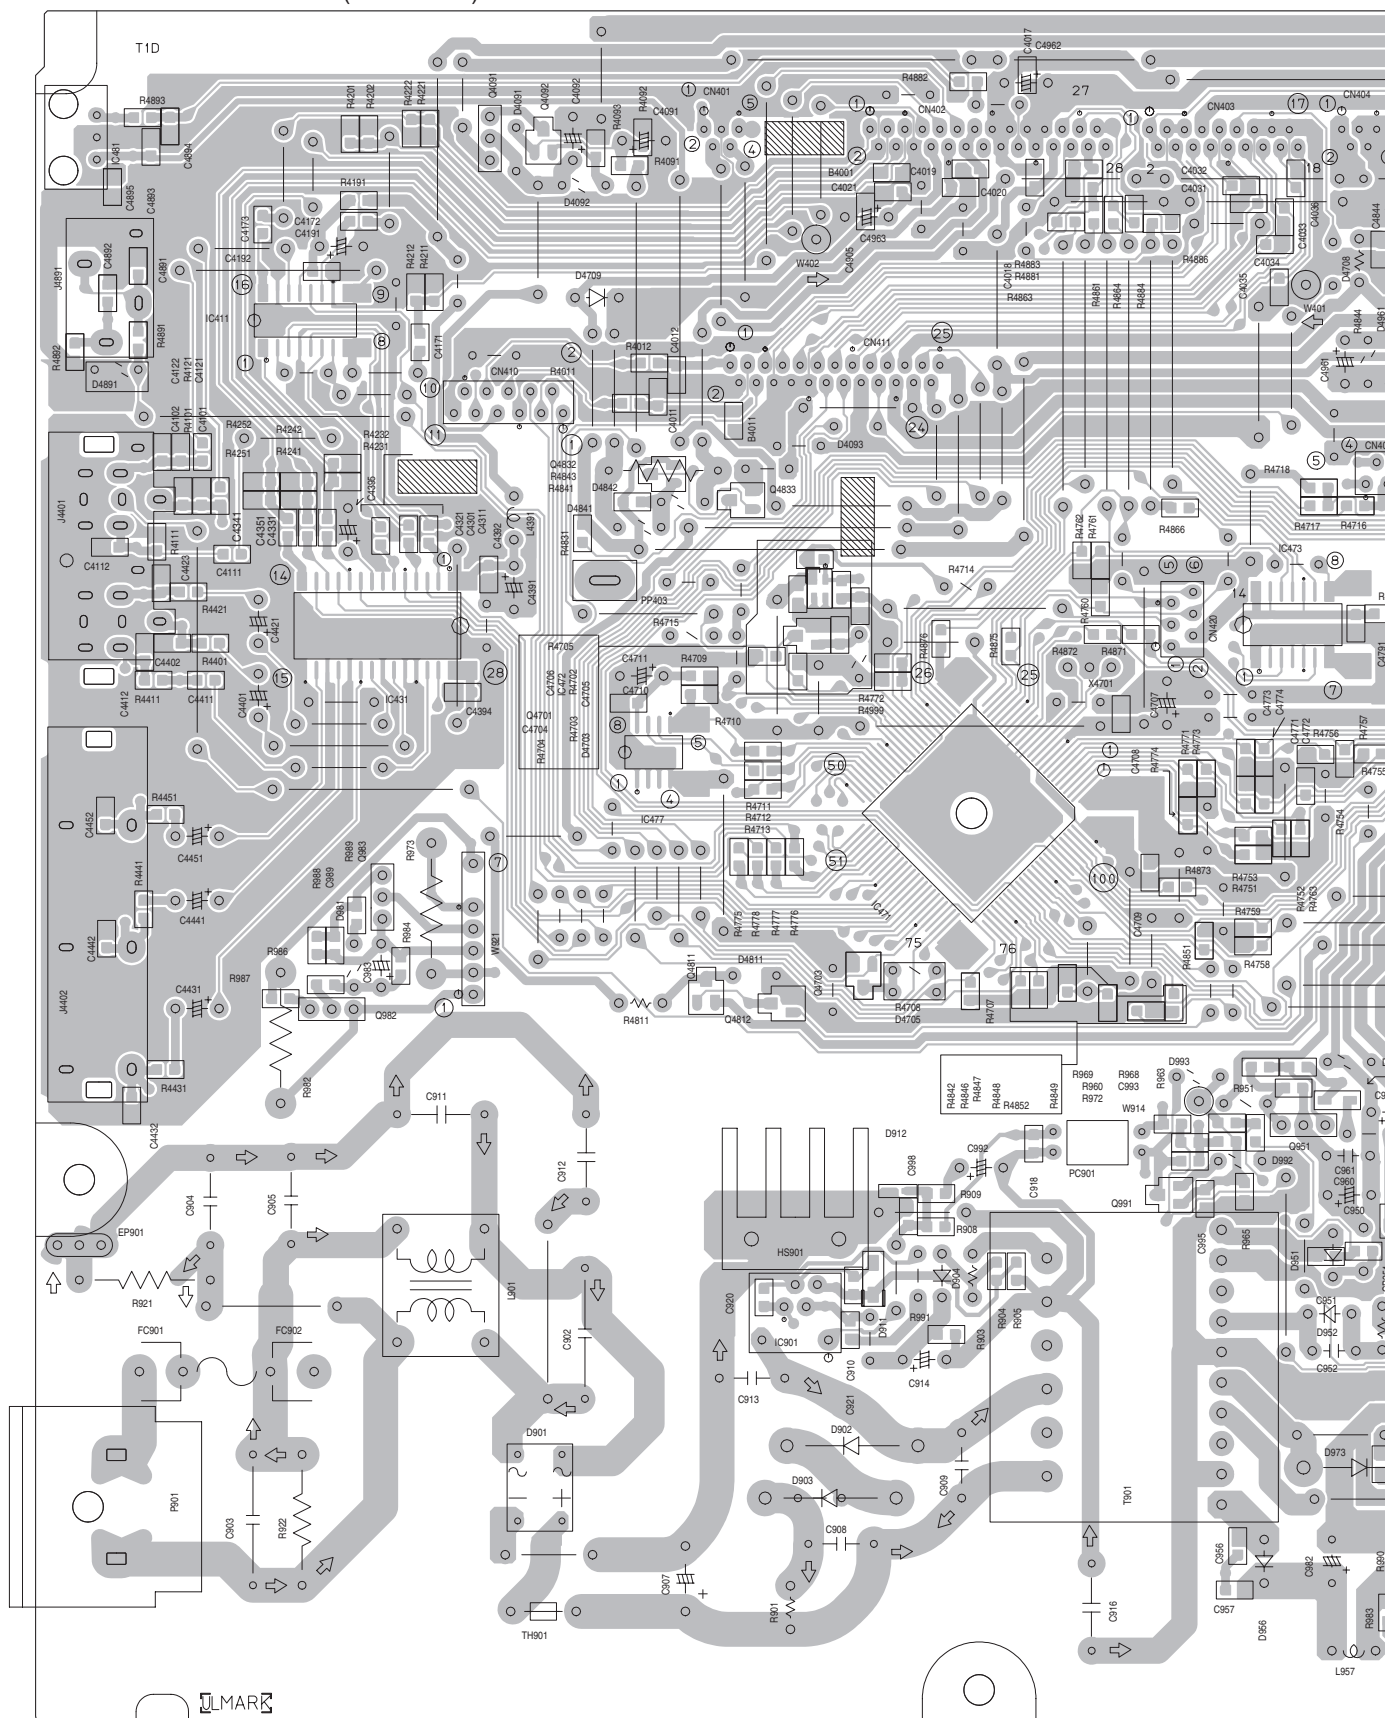


■ **Audio board** Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)

(Audio and Digital input board)

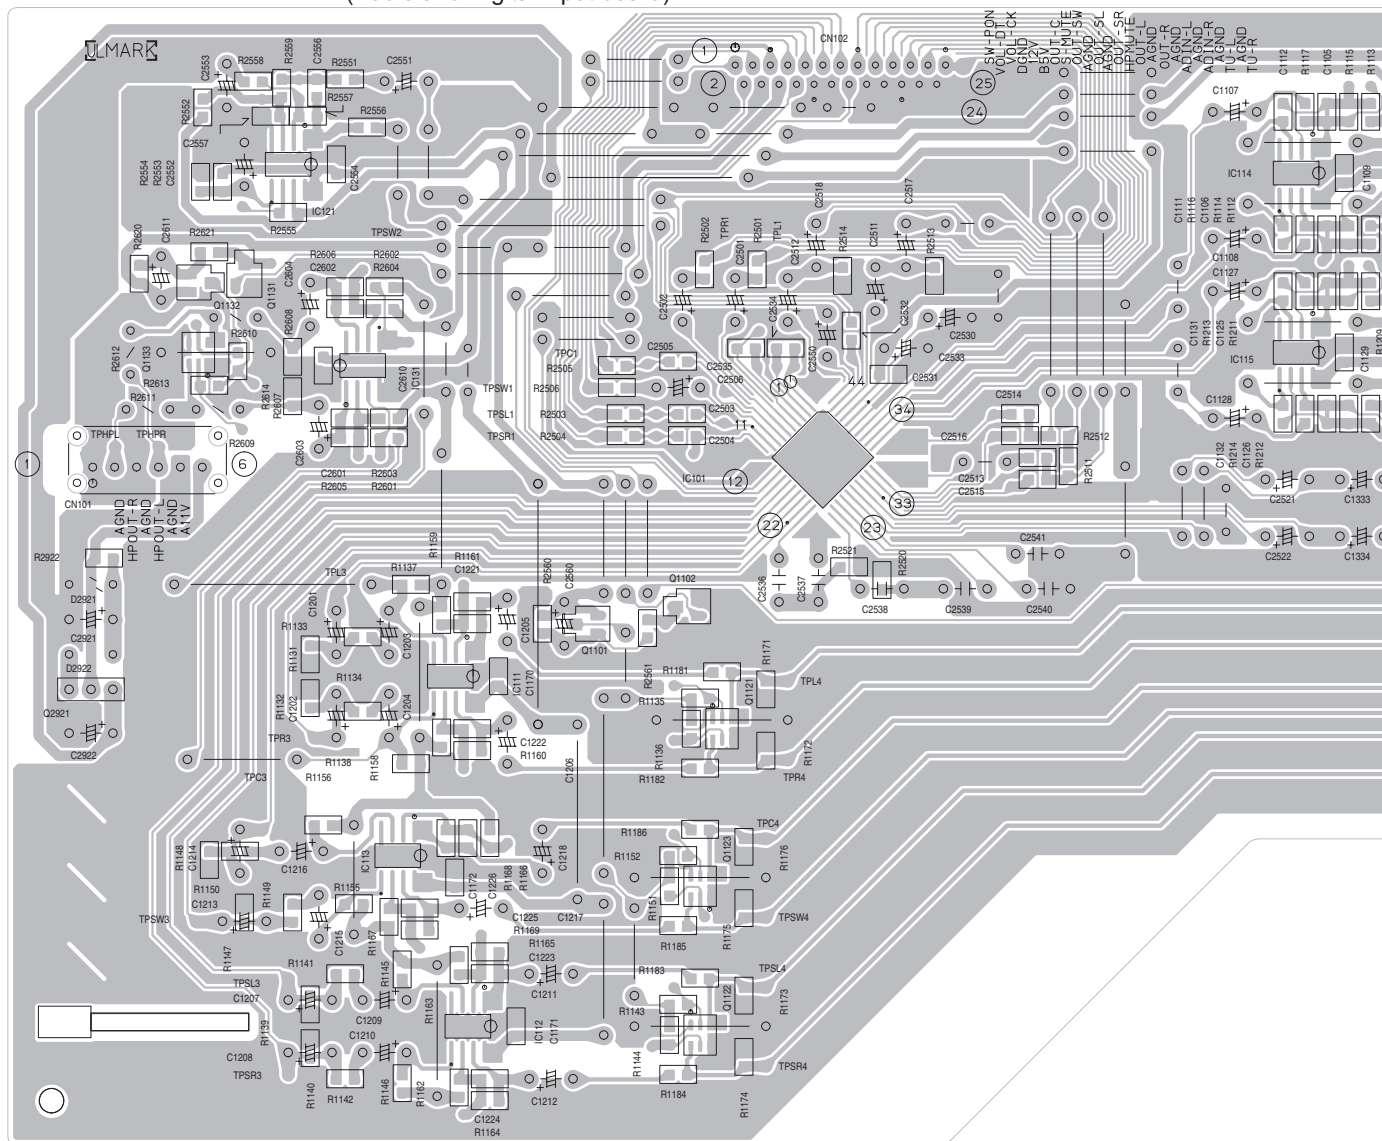


(Front board)

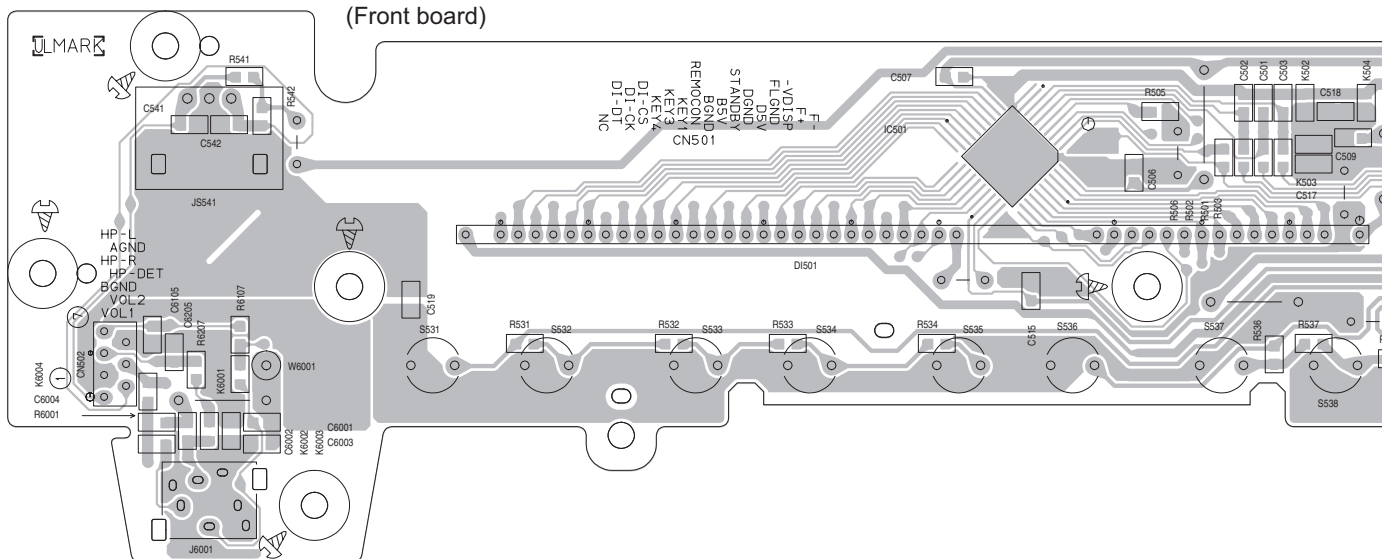


■ DVD servo board

Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)


forward side

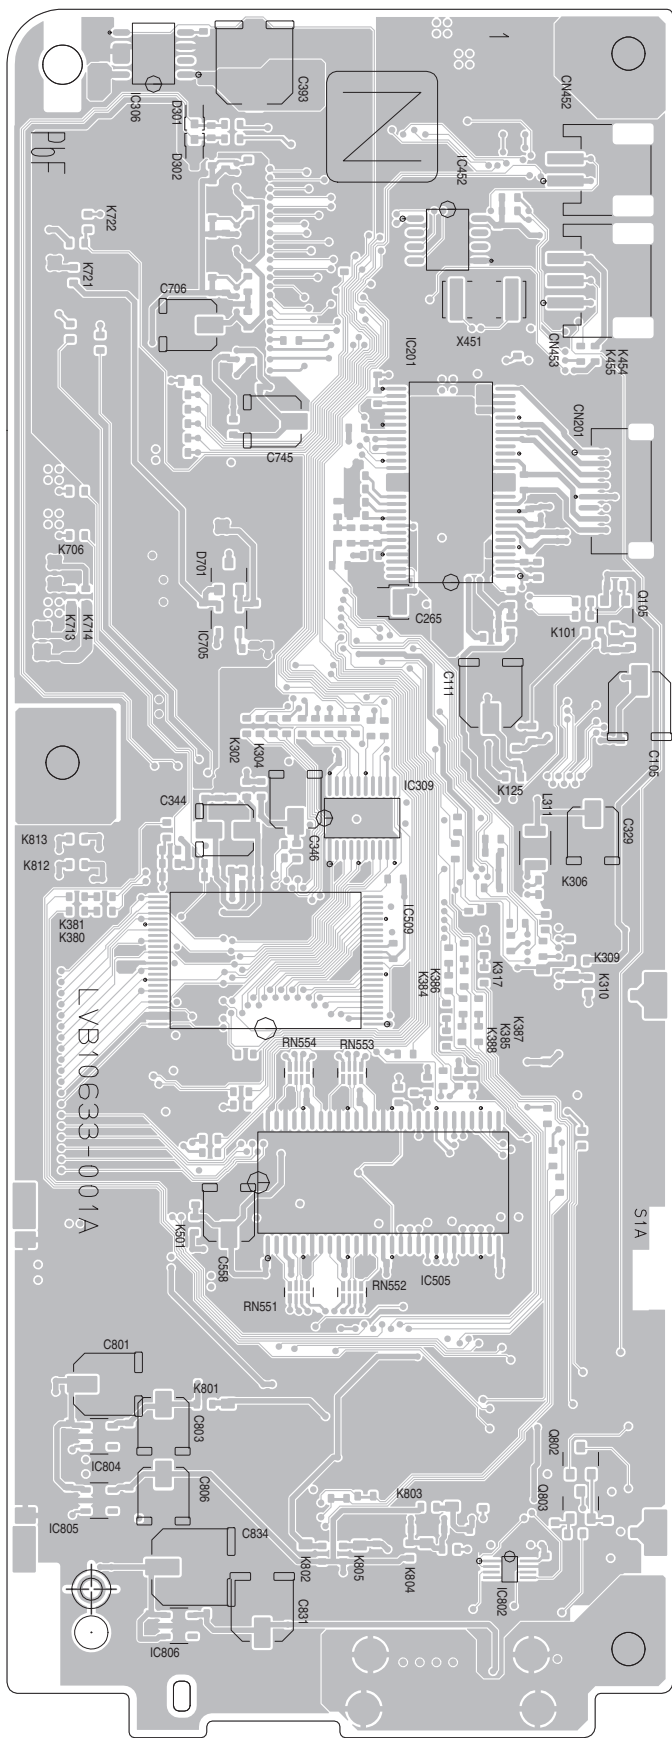


reverse side

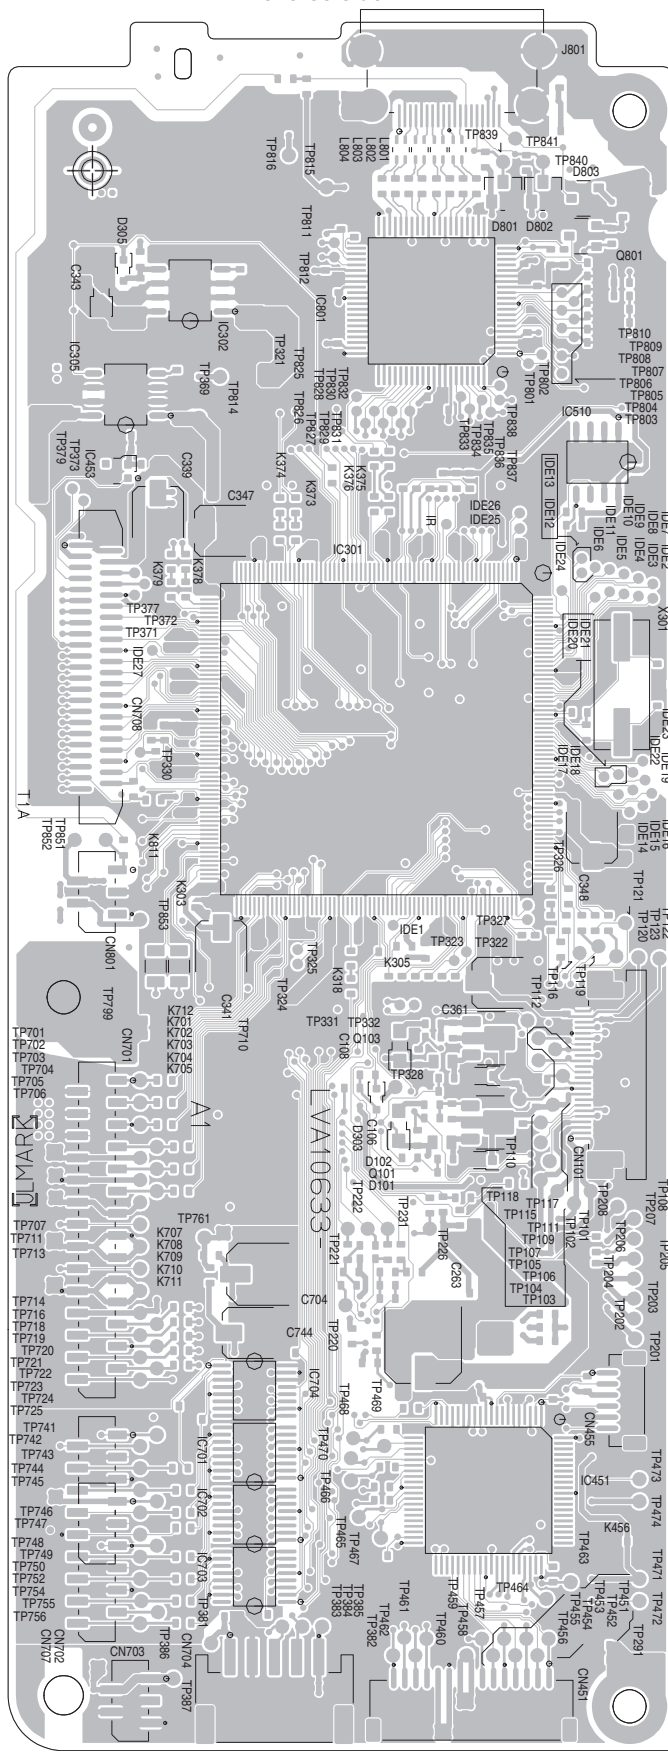


■ **Loading board** Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)

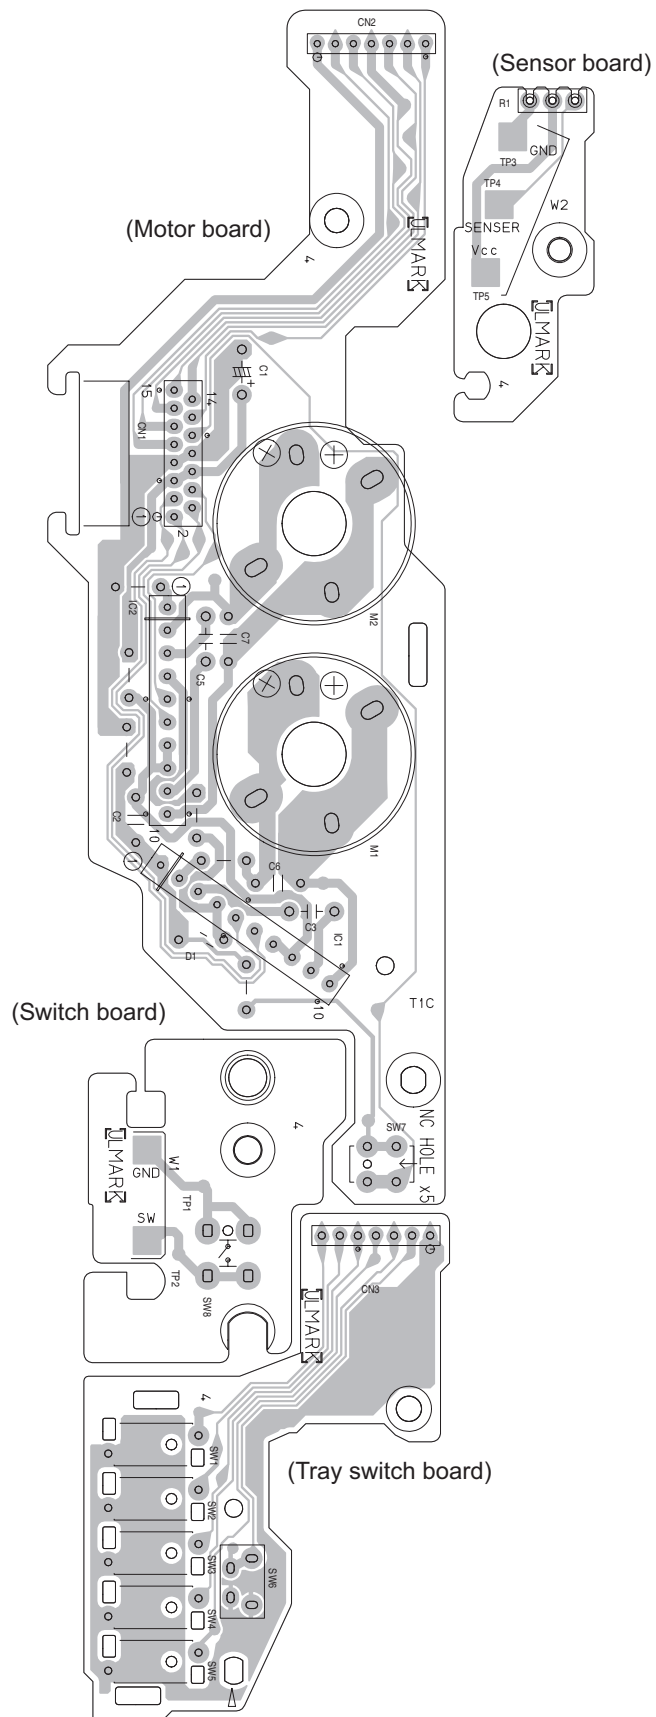


Lead free solder used in the board (material : Sn-Ag-Cu, melting point : 219 Centigrade)

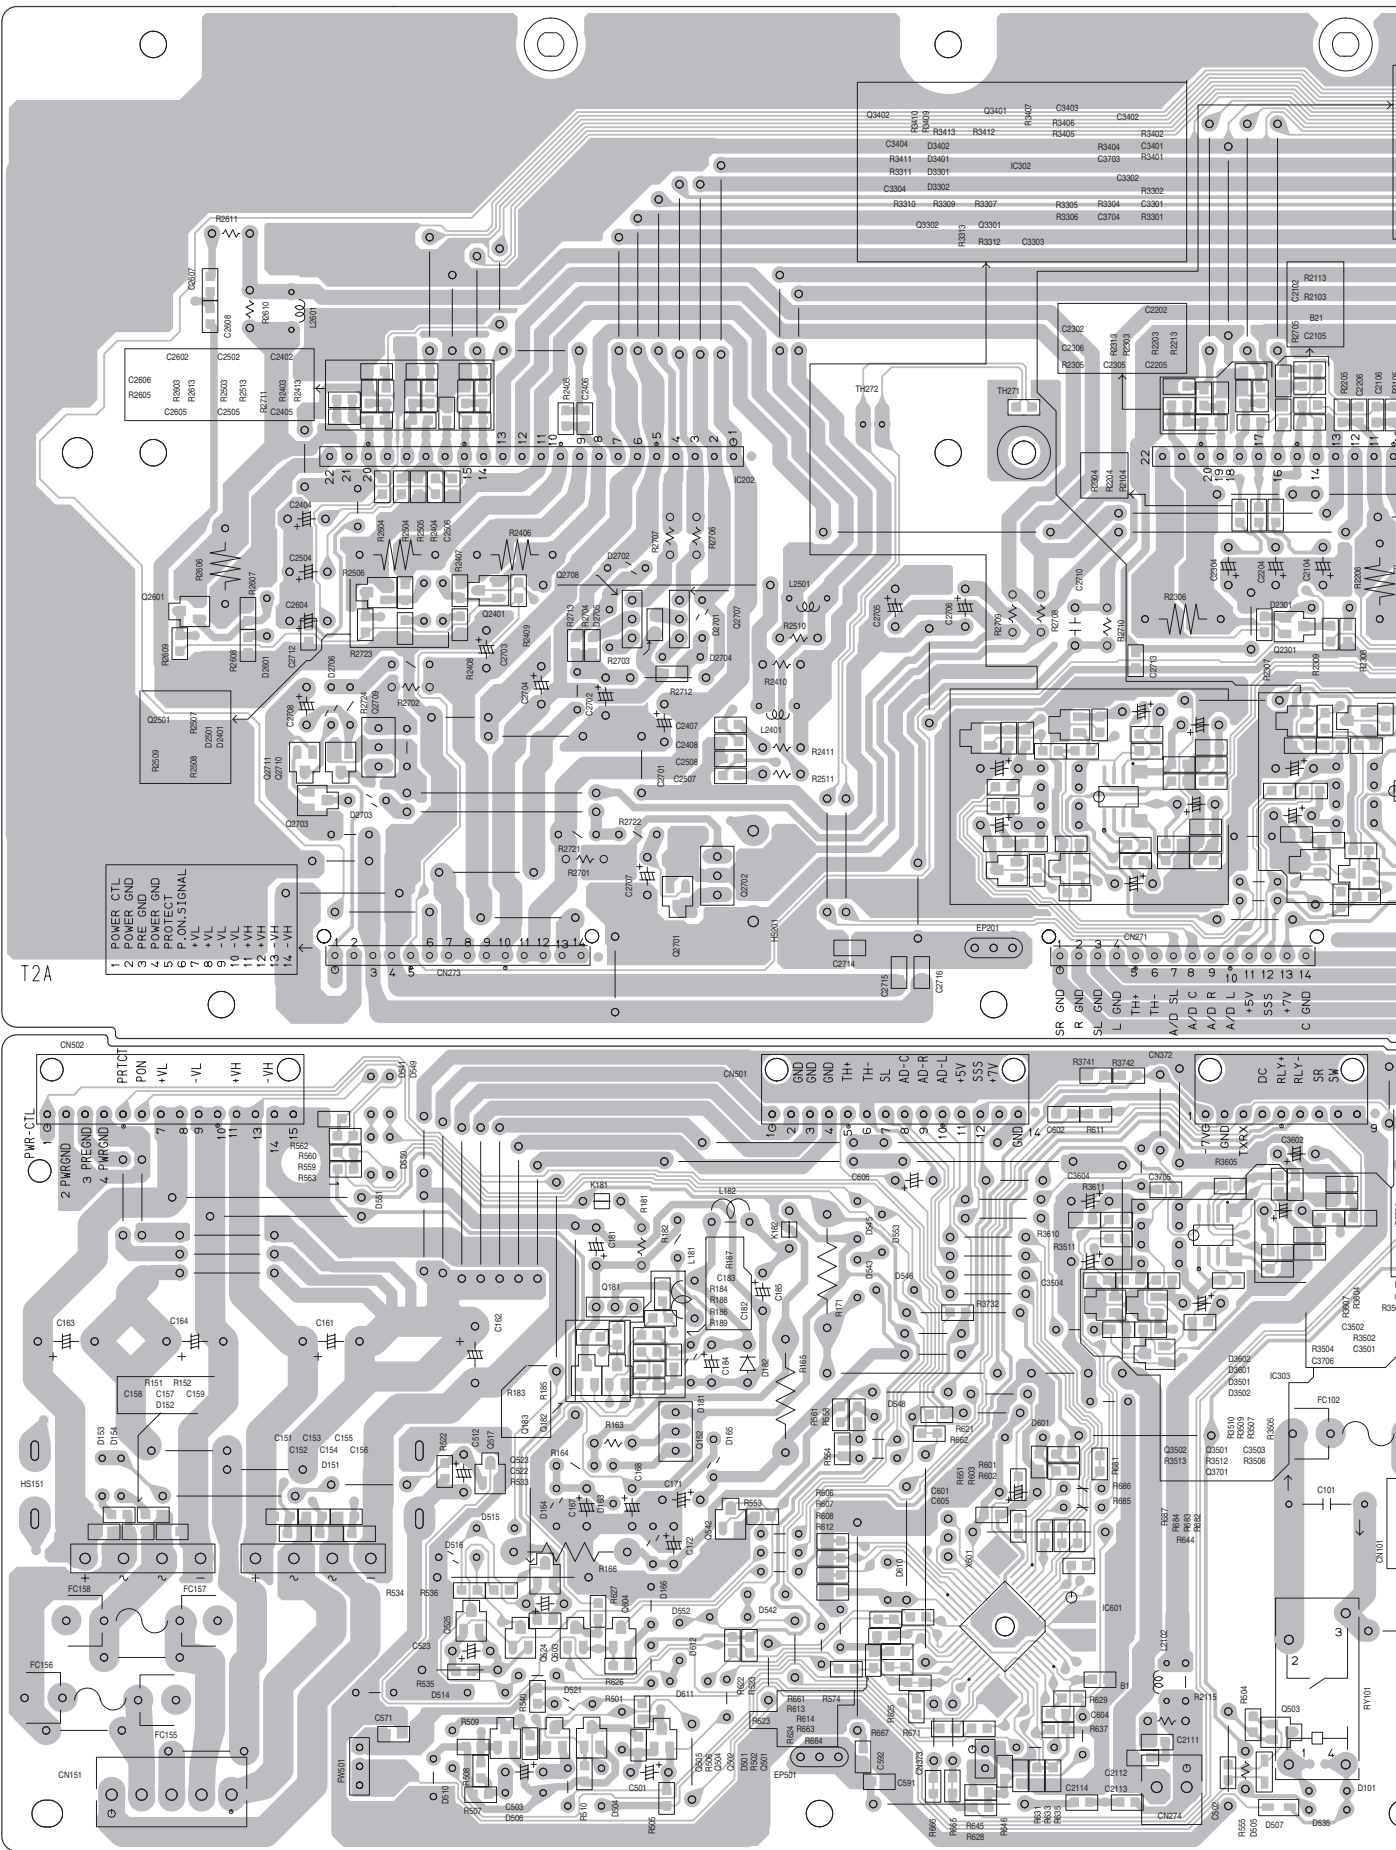

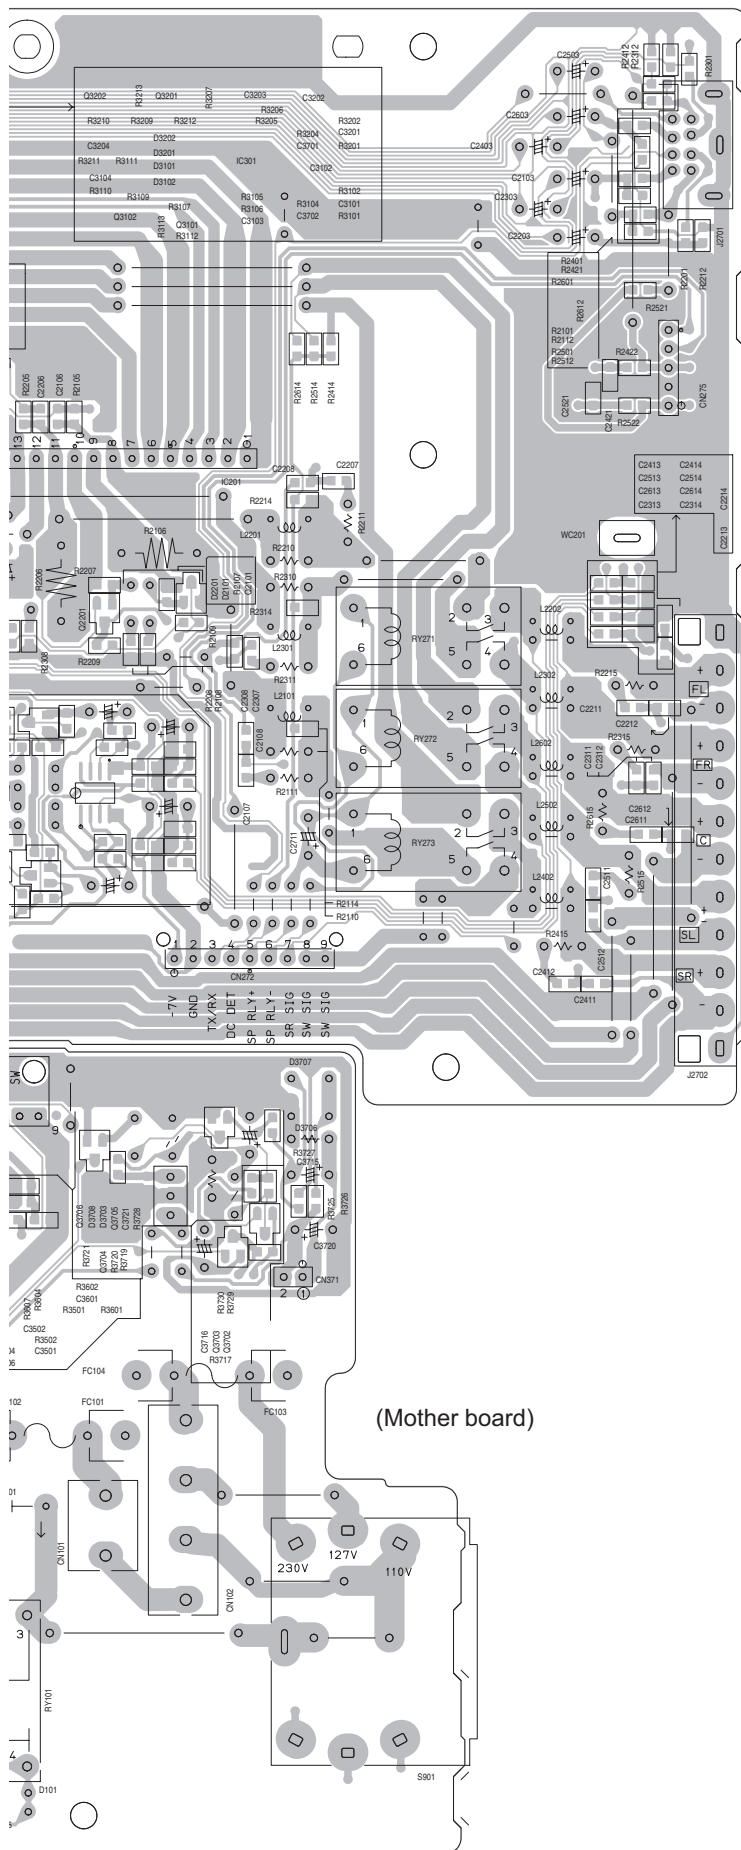

(Amp board)

(LED board)

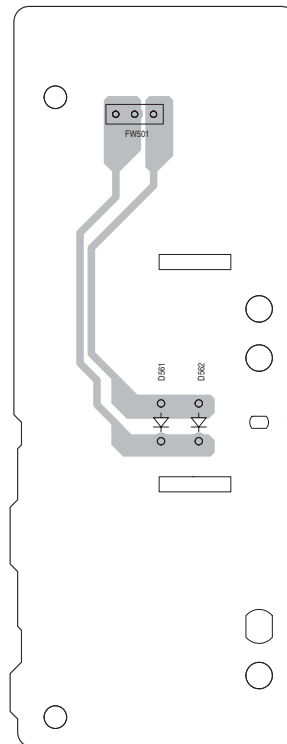



Victor Company of Japan, Limited

Audio/Video Systems Category 10-1, 1chome, Ohwatari-machi, Maebashi-city, 371-8543, Japan

(No.MB511SCH)



Printed in Japan
VPT